



M-THERMO2

M-THERMO 8

M-THERMO 16

μ-THERMO 8

Mc-THERMO

M-RTD2

M-SENS2

M-SENS 4

M-SENS 8

M-SENS 8plus

M-CNT2

M-FRQ

MultiDAQ

CANpressure

Content

1	Important and general information	6
1.1	Important information	6
1.1.1	Safety and Warning instructions.....	6
1.1.2	Liability, Warranty, Copyright, License agreement.....	6
1.2	General information	10
1.2.1	About this manual.....	10
1.2.2	Version.....	10
1.2.3	Legend of used icons	10
1.2.4	Support	11
1.2.5	Related documentation.....	11
1.3	Documentation feedback	11
2	General system	12
2.1	Modular system structure.....	12
2.2	Connecting the devices via the CAN-Bus	13
2.2.1	Basics of CAN-Bus	13
2.2.2	Ampacity and voltage drop	15
2.3	Synchronous data acquisition	16
2.3.1	Principle of the synchronous signal acquisition.....	16
2.3.2	Master clock as higher system clock.....	16
2.3.3	Measurement systems without master clock.....	17
2.3.4	IPETRONIK measurement system with/without synchronization clock	17
2.3.5	Software settings	18
2.4	General device description	19
2.4.1	Properties and structure	19
2.4.2	Interpretation of the LED display (flashing codes).....	20
2.4.3	Reverse polarity protection.....	21
2.5	Cables.....	21
2.6	Mechanical accessories.....	22
2.6.1	Differences of the M design.....	22
2.6.2	Mounting brackets for M case Version 2 (BR) and M2 case.....	22
2.6.3	Mounting brackets for M-THERMO2	23
2.6.4	Adapter plates.....	23
2.6.5	μ-THERMO snap-in fastener	24
2.6.6	IPERack, quick assembly system for M-Series devieces	25
3	General software description	27
3.1	Requirements.....	27
3.2	Supported CAN interfaces	27
3.3	Configuration with IPEmotion (general)	28
3.3.1	Main dialog	28
3.3.2	The title bar.....	29
3.3.3	The file menu	29
3.3.4	Using the options	29

3.3.5	Creating a support file	32
3.3.6	The quick access bar	33
3.3.7	The main navigation tabs	34
3.3.8	Project	35
3.3.9	Signals	36
3.3.10	Acquisition	36
3.3.11	View	37
3.3.12	Data manager	37
3.3.13	Analysis	38
3.3.14	Info	38
3.3.15	The first acquisition	39
3.4	Downloading firmware (CANdownload 2)	44
3.4.1	User interface	44
3.4.2	Creating a user defined library	46
3.4.3	Manual configuration	46
3.4.4	Automatic configuration	46
3.5	Resetting devices to default values (M-MOD-DEF)	48
4	M-THERMO2, M-THERMO 8, M-THERMO 16	50
4.1	Temperature acquisition with thermocouples	50
4.2	Input cable 600-888.xxx	50
4.3	Specific input settings	51
4.3.1	Break detection	51
4.3.2	Averaging	51
4.3.3	Status LED at the input	51
4.4	Technical data (M-THERMO 8, M-THERMO 16)	52
4.5	Technical data (M-THERMO2)	53
5	μ-THERMO	54
5.1	Temperature acquisition with thermocouples	54
5.2	Input cable 625-506.xxx	54
5.3	Specific input settings	55
5.3.1	Break detection	55
5.3.2	Averaging	55
5.4	Technical data	56
6	M-RTD2	57
6.1	Temperature acquisition with RTDs (Pt100)	57
6.2	Input cable 670-937.xxx	57
6.3	Specific input settings	58
6.3.1	Scaling	58
6.3.2	Averaging	58
6.4	Technical data	59
7	M-SENS, M-SENS2, M-SENS 8/8plus	60
7.1	Voltage/Current acquisition with sensor excitation	60
7.2	Input cable 670-xxx.xxx	61
7.2.1	Input cable 670-807.xxx (M-SENS 4, SIM-SENS)	61
7.2.2	Input cable 670-810.xxx (M-SENS 8 / 8plus)	61

7.3	Input / Principle details.....	62
7.3.1	Filter in the measurement engineering - Why do we use filters?	62
7.3.2	Filter in the measurement engineering - How do we use filters?	63
7.4	Extended input settings.....	64
7.4.1	Scaling, measuring range.....	64
7.4.2	Sensor, initial excitation.....	64
7.4.3	Filter, averaging.....	64
7.4.4	Offset adjust.....	65
7.4.5	Status-LED am Messeingang.....	65
7.5	Technical data.....	66
7.5.1	M-SENS, M-SENS2.....	66
7.5.2	M-SENS 8, M-SENS 8plus.....	68
8	Mc-THERMO	70
8.1	Voltage and temperature acquisition	70
8.2	Input cable	70
8.2.1	Input cable 620-644.xxx Mc-THERMO VIN CL Cable open	70
8.2.2	Input cable 620-645.xxx Mc-THERMO VIN CL Cable Banana	71
8.2.3	Input cable 620-643.xxx Mc-THERMO VIN CL Cable BNC/S	71
8.3	Extended input settings.....	72
8.3.1	Sensor mode	72
8.3.2	Break detection and averaging.....	72
8.4	Technical data.....	72
9	M-FRQ, M-CNT2.....	74
9.1	Frequency- / Cycle acquisition incl. sensor supply	74
9.2	Input cable 670-858.xxx.....	75
9.3	Input / Principle details.....	76
9.3.1	Measuring method.....	76
9.3.2	Status LED at the input.....	77
9.4	Extended input settings.....	77
9.4.1	Scaling, measuring ranges	77
9.4.2	Input signal	78
9.4.3	Sensor, initial excitation.....	79
9.4.4	Filter.....	79
9.4.5	Mode (M-CNT2).....	79
9.5	Technical data.....	80
10	MultiDAQ.....	82
10.1	42 Channel multi input device T/ U/ I/ f.....	82
10.2	Input cable	82
10.3	Create and configure MultiDAQ	82
10.4	Technical data.....	84
11	CANpressure	86
11.1	Pressure sensor with CAN output.....	86
11.2	Pressure connections	86
11.3	Input / Principle details.....	87

11.4 Extended input settings.....87

11.4.1 Scaling.....87

11.4.2 Filter, averaging.....88

11.4.3 Adjust.....88

11.5 Technical data.....89

12 Appendix.....90

12.1 Linear signal scaling90

1 Important and general information

1.1 Important information

Please follow these instructions before and during the use and application on any IPETRONIK product!

1.1.1 Safety and Warning instructions

Please follow the instructions **and** information as contained in the user manual!

1. The user can **influence an electronic system by applying the IPETRONIK product**. This might cause risk of personal injury or property damages.
2. The **use and application of the IPETRONIK product is permitted only to qualified professional staff**, as well as, only in appropriate manner and in the designated use.
3. **Before using an IPETRONIK measurement system in the vehicle it has to be verified that no function of the vehicle, which is relevant for secure operation, might be influenced:**
 - by the installation of the IPETRONIK measurement system in the vehicle,
 - by an potential malfunction of the IPETRONIK system during the test drive.

In order to avoid possible danger or personal injury and property damages, appropriate actions are to be taken; such actions have to bring the entire system into a secured condition (e.g. by using a system for emergency stop, an emergency operation, monitoring of critical values).

Please check the following points to avoid errors:

- Adaption of sensors to components of the electrical system / electronics, brake system, engine and transmission control, chassis, body.
 - Tap of one or several bus systems (CAN, LIN, ETHERNET) including the required electrical connection(s) for data acquisition.
 - Communication with the vehicle's control units (ECUs), especially with such of the brake system and/or of the engine and transmission control (power train control system).
 - Installation of components for remote data transmission (mobiles, GSM/GPRS modems, WiFi and Bluetooth components).
4. **Before directly or indirectly using the data acquired by an IPETRONIK measurement system to calibrate control units, please review the data regarding to plausibility.**
 5. With regard to the application of IPETRONIK products in vehicles during use on public roads the manufacturer and/or registered user of the vehicle **has to ensure that all changes/modifications have no influence concerning the license of the vehicle or its license of operation.**
 6. **User does agree to the instructions and regulations as mentioned above.** In case the user does not agree with the instructions and regulations as mentioned above, he has to notify this expressly and immediately in writing to IPETRONIK before confirming the sales contract.

1.1.2 Liability, Warranty, Copyright, License agreement

Limitation of liability

Any liability of IPETRONIK, its representatives, agents and the like, especially with regard to personal injury or damage to property of any kind, shall be excluded (within the legally admissible framework), as far as, the instructions and warnings, as mentioned below, have not been followed.

Warranty

Products, accessories and services have a 24 months warranty.

All product data, specifications, drawings, etc., correspond to the current condition of the indicated creation date. For the purpose of optimizing technical processes and production, some details of our modules and accessory components may be modified at any time without prior notification.

Although the present document has been prepared with the utmost attention to detail, it may not be exempt of misprints, typing or transcription errors. These errors are not covered by any warranty.

Copyright and Duplication

All rights reserved to IPETRONIK GmbH & Co. KG, in particular those of property, copyright and trademarks. The rights related to any third party trademarks mentioned in the present document remain unaffected.

This document may not be duplicated, partially or entirely without the prior approval from IPETRONIK GmbH & Co. KG. All graphics and explanations are copyright protected. Any use beyond the scope of the document is prohibited.

Software license agreement

This software is property of IPETRONIK GmbH & Co. KG, and is protected by copyright laws. Its total or partial reproduction is strictly forbidden.

General license agreement

IMPORTANT - READ CAREFULLY! THIS IS A LEGAL AGREEMENT BETWEEN YOU, LICENSEE, AND IPETRONIK GMBH & CO. KG/IPETRONIK INC. ("IPETRONIK"). BY CHECKING "I ACCEPT ALL OF THE TERMS CONTAINED IN THE ABOVE AGREEMENT" DURING INSTALLATION, COPYING OR USING THIS PRODUCT IN ANY WAY YOU ACKNOWLEDGE THAT YOU HAVE READ THIS LICENSE AND THAT YOU UNDERSTAND AND EXPRESSLY AGREE TO BE BOUND BY THE TERMS AND CONDITIONS SET FORTH BELOW.

A valid software license is required to use the software.

1. Definitions

- a. SOFTWARE is defined as computer program in object code or machine-readable format, together with any and all modifications, enhancements, updates, and improvements provided by IPETRONIK as well as any subsequent versions, corrections, bug fixes, enhancements, updates or other modifications, regardless of the source. The term "Licensed Software" shall not include the source code version of the Licensed Software.
- b. EQUIPMENT is defined as automotive measuring equipment produced by IPETRONIK as well as other parties.
- c. LICENSEE is defined as the recipient of this SOFTWARE and any of its employees, agents or representatives.
- d. MODIFY or MODIFICATION is defined as change to the SOFTWARE by LICENSEE in order to customize the SOFTWARE for use solely by LICENSEE.

2. License Terms

- a. As long as LICENSEE complies with all terms in this Software License Agreement IPETRONIK grants LICENSEE a non-exclusive, non-transferable license to load and use the SOFTWARE upon the terms and conditions set forth below.
- b. LICENSEE has the right to load the SOFTWARE for use on any internal computer or piece of EQUIPMENT, as long as it is only on one computer or piece of EQUIPMENT at any given time.
- c. LICENSEE will notify all of its employees, agents or representatives permitted access to the SOFTWARE of the duties and obligations under this Software License Agreement.
- d. LICENSEE has the right to MODIFY the SOFTWARE for use on any internal computer or of EQUIPMENT, as long as it is only on one computer or piece of EQUIPMENT at any given time.
- e. Any MODIFICATION(S) to the SOFTWARE are subject to the terms and conditions of this Agreement.
- f. LICENSEE may not:
 - i. Loan, rent, lease, give, sublicense, distribute, transmit or otherwise transfer the SOFTWARE, or otherwise exercise any of IPETRONIK's legal rights in and to the

SOFTWARE, or any derivative works of the SOFTWARE, in whole or in part, except with the prior written agreement of IPETRONIK.

- ii. Copy, translate, reverse engineer, decompile, disassemble the SOFTWARE, in whole or in part.
- iii. Except as provided in Section 2(d), create derivative works based on the SOFTWARE, in whole or in part.
- iv. Remove, modify or cause not to be displayed any copyright or trademark notices, license agreements, or startup messages contained in the programs or documentation.
- v. Transmit or otherwise export outside of the United States any of the SOFTWARE or technology in violation of United States or other applicable laws or regulations.

3. Ownership of Intellectual Property

LICENSEE agrees and acknowledges that the SOFTWARE is being provided to it only for use in EQUIPMENT in the ordinary course of business and that LICENSEE agrees and acknowledges that IPETRONIK is the owner of all title and proprietary rights in the SOFTWARE, including, without limitation, any and all patents, copyrights, trademarks or any other intellectual property rights associated with it under the laws of the United States or any jurisdiction throughout the world. No right, title or interest in the SOFTWARE or any IPETRONIK patent, copyright, trademark, or any other intellectual property right is transferred to LICENSEE or any other party through this Software License Agreement.

4. Disclaimer of Warranties; Liability Limitations

- a. THE SOFTWARE IS PROVIDED TO YOU "AS IS". THERE ARE NO WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND COMPATIBILITY, AND TITLE.
- b. LICENSEE ASSUMES ALL RISK AS TO THE SELECTION, USE, PERFORMANCE AND QUALITY OF THE SOFTWARE. IN NO EVENT WILL IPETRONIK OR ANY OTHER PARTY WHO HAS BEEN INVOLVED IN THE CREATION, PRODUCTION OR DELIVERY OF THE SOFTWARE BE LIABLE FOR SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING LOSS OF PROFITS OR INABILITY TO USE THE LICENSED MATERIAL. IN NO EVENT SHALL IPETRONIK'S LIABILITY FOR ANY DAMAGES OR LOSS TO LICENSEE OR TO ANY THIRD PARTY EXCEED ANY LICENSE FEE ACTUALLY PAID BY THE LICENSEE TO IPETRONIK FOR THE SOFTWARE.
- c. Since some states or jurisdictions do not permit the exclusion of implied warranties or limitation of liability for consequential damages, in such states or jurisdictions, the liability is limited to the fullest extent permitted by law.

5. Intellectual Property Infringement Indemnification

- a. IPETRONIK shall defend, indemnify, and hold LICENSEE harmless from and against any claims and fees (including attorneys' fees), damage awards arising in connection with a claim that the licensed SOFTWARE or documentation, when properly used, infringes upon any presently existing, valid and enforceable United States patent, trademark, or other intellectual property right, provided that:
 - i. such claim of infringement is not based on any Modification or action taken or suffered by LICENSEE other than the use of the licensed SOFTWARE and documentation in accordance with the terms and conditions of this agreement;
 - ii. such claim of infringement is not based on any action by LICENSEE in modifying the SOFTWARE pursuant to the terms of Section 2(d).
 - iii. LICENSEE promptly notifies IPETRONIK of such claim in writing at support@ipetronik.com, and gives IPETRONIK exclusive control over the defense and settlement of such claim;
 - iv. LICENSEE provides such cooperation and assistance, at IPETRONIK'S expense, as IPETRONIK may reasonably request to settle or oppose any such claim; and

- v. such claim of infringement is based only on the licensed SOFTWARE and documentation as provided to LICENSEE.
- b. In the event of any infringement claim for which IPETRONIK is liable pursuant to section 5 (a), IPETRONIK may, at its sole option and expense:
 - i. procure for LICENSEE the right to continue using the licensed SOFTWARE or documentation;
 - ii. modify or amend the licensed SOFTWARE or documentation so that it becomes non-infringing;
 - iii. replace the licensed SOFTWARE or documentation with a non-infringing substitute; or
 - iv. recover the infringing licensed software and documentation from LICENSEE and repay to LICENSEE all license fees paid to IPETRONIK in connection therewith, less a reasonable amount based on LICENSEE's use prior to such recovery and refund.
- c. This Article 5 sets forth IPETRONIK's sole obligations and liability for intellectual property infringement. These indemnity provisions only apply to the SOFTWARE as originally licensed to LICENSEE and do not cover any MODIFICATIONS made by LICENSEE or any other third party.

6. Limitation of Liability

- a. EXCEPT WITH RESPECT TO ITS INTELLECTUAL PROPERTY INDEMNIFICATION OBLIGATIONS, AS SET FORTH IN ARTICLE 5, IN NO EVENT SHALL IPETRONIK BE LIABLE FOR SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST PROFITS, LOST DATA, OR LOST SAVINGS), EVEN IF IPETRONIK WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. FURTHERMORE, IPETRONIK'S LIABILITY (WHETHER IN CONTRACT, TORT, OR OTHERWISE) ARISING OUT OF, OR CONNECTED WITH, THIS AGREEMENT OR THE LICENSED SOFTWARE OR DOCUMENTATION SHALL IN NO CASE EXCEED THE PAYMENTS RECEIVED BY IPETRONIK FROM LICENSEE FOR THE LICENSED SOFTWARE AND DOCUMENTATION.
- b. EXCEPT IN CONNECTION WITH ITS OBLIGATIONS UNDER ARTICLE 5:
 - i. IN NO EVENT SHALL LICENSEE BE LIABLE FOR SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST PROFITS, LOST DATA, OR LOST SAVINGS), EVEN IF LICENSEE WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES; AND
 - ii. LICENSEE'S LIABILITY (WHETHER IN CONTRACT, TORT, OR OTHERWISE) ARISING OUT OF, OR CONNECTED WITH, THIS AGREEMENT OR THE LICENSED SOFTWARE OR DOCUMENTATION SHALL IN NO CASE EXCEED THE PAYMENTS OWED TO LICENSOR FOR THE LICENSED SOFTWARE AND DOCUMENTATION.

7. Indemnification Obligations of LICENSEE

- a. LICENSEE shall defend, indemnify, and hold IPETRONIK harmless from any claims, losses, expenses, fees (including attorneys' fees), costs or damages arising in connection with a MODIFICATION or LICENSEE'S unauthorized use of the Licensed Software or Documentation.

8. Merger Clause

- a. LICENSEE agrees that this Software License Agreement is the complete and exclusive agreement between LICENSEE and IPETRONIK governing the SOFTWARE. This Software License Agreement supersedes and merges all prior agreements with IPETRONIK concerning the SOFTWARE and can only be modified by a subsequent written agreement signed by IPETRONIK. To the extent that there is any conflict between this Software License Agreement and any IPETRONIK purchase order or other written agreement for the purchase of IPETRONIK parts or products, the terms of the purchase order or written agreement control.

9. General

- a. If any provision or portion of a provision of this Software License Agreement is determined to be invalid or unenforceable, it shall be deemed omitted and the remaining provisions of this Software License Agreement shall remain in full force and effect to the fullest extent permitted by law.
- b. LICENSEE may not assign or transfer all or part of this Software License Agreement to any third party without the express written approval of IPETRONIK.
- c. This Software License Agreement will be governed by the laws of the State of Michigan without regard to its conflict of laws provisions.
- d. All disputes arising out of, or in connection with, the present contract shall be finally settled under the Rules of Arbitration of the International Chamber of Commerce by one or more arbitrators appointed in accordance with the said Rules.

1.2 General information

1.2.1 About this manual

The manual describes the structure of the IPEmeasue CAN-Bus devices M-THERMO2, M-THERMO 8/16, Mc-THERMO, μ -THERMO 8, M-RTD2, M-SENS2, M-SENS 4/8/8*plus*, M-CNT2, M-FRQ, MultiDAQ and CAN*pressure*, as well as, peripheral devices and accessories.

1.2.2 Version

Handbuch Motorraum-Messtechnik

This manual has the version number 01.09.00, released October 2013 © **All rights reserved !**

IPEmotion PlugIn IPETRONIK CAN

Contents described in this document relates to the current release version 01.09.

IPEmotion

Contents described in this document relates to the release versions 01.06. to 3.01.00



To run this PlugIn an IPEmotion release \geq V02.00 has to be installed on your computer.

1.2.3 Legend of used icons

**Tip**

This icon indicates a useful tip that facilitates the application of the software.

**Information**

This icon indicates additional information for a better understanding.

**Attention!**

This icon indicates important information to avoid potential error messages.

1.2.4 Support

Headquarter:

IPETRONIK GmbH & Co. KG

Im Rollfeld 28
76532 Baden-Baden, Germany

Phone +49 72 21 99 22 0

Fax +49 72 21 99 22 100

info@ipetronik.com

www.ipetronik.com

Limited commercial partnership with its head office in Baden-Baden, registry court HRA No. 201313

IPETRONIK Verwaltungs-GmbH Baden-Baden is an individually liable society, registry court Mannheim HRB No. 202089

CEOs: Erich Rudolf, Andreas Wocke

Technical support and product information

www.ipetronik.com E-Mail: support@ipetronik.com

1.2.5 Related documentation

IPEmotion

The documentation IPEmotion.pdf provides you with a description and useful information related to IPEmotion. This documentation is stored in the following standard language dependent directory:
C:\Program Files (x86)\IPETRONIK\IPEmotion Vxx.xx.xx\Help.

1.3 Documentation feedback

At IPETRONIK, the technical publications team strives to produce documentations of the highest quality and values your feedback as a reader and user. If you have any comments or suggestions regarding our product manuals, contact us under support@ipetronik.com.

When commenting on our products, please include the following information:

Version number

Name of the guide

Page number or section title

Brief description of the content (e.g. inaccurate instructions, grammatical errors, or information that require clarification)

Any suggestions for a general documentation improvement

2 General system

2.1 Modular system structure



IPETRONIK Engine Compartment Measurement contains devices of the M2 series (M-THERMO2, M-RTD2, M-SENS2, M-CNT2) and the M series (M-THERMO, M-SENS, M-FRQ, Mc-THERMO), μ -THERMO, as well as, *CANpressure*. Each device is an independent acquisition system and can be used as a stand-alone devices, as well as, in combination with other devices (also with SIM series devices) in a CAN bus network. The signals (Temperature, Voltage, Current, Pressure) are detected by using corresponding inputs, are digitized as 16 bit sign and output as CAN message on the CAN bus. Each devices has 4 or 8 inputs depending on the design.

CANpressure is a 1-channel pressure sensor with integrated acquisition electronics including a CAN controller. The acquired pressure, as well as, the temperature of the pressure tap are directly output as a CAN signal.

The configuration of all parameters takes place by using IPEmotion and a PC/Notebook with CAN interface (e.g. PCMCIA CAN card or USB-CAN-Interface). IPEmotion, as well as, software applications by different providers can be used for acquiring the signals as CAN message.

An alternative to the Windows PC system is the use of devices or device combinations with an IPETRONIK data logger (M-LOG, S-LOG, FLEETlog, IPElog).

2.2 Connecting the devices via the CAN-Bus


2.2.1 Basics of CAN-Bus

CAN-Standard


The communication of the IPETRONIK SIM and M devices takes place by using the CAN bus according to the CAN 2.0 A (11 Bit Identifier) and CAN 2.0 B (29 Bit Identifier) specification. Each software application, which is able to detect CAN data via a suitable interface, can detect the device data and process. Examples: CANalyzer, INCA, DIAdem, LabVIEW. The device configuration takes place by using the CAN bus and the IPETRONIK configuration software.

Structure of a CAN message

Remoteframe CAN 2.0A (11 Bit Identifier)

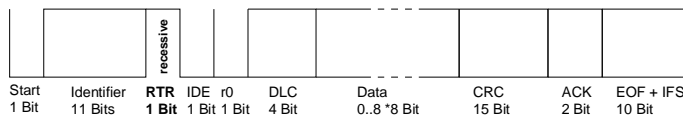

Remoteframe CAN 2.0B (29 Bit Identifier)

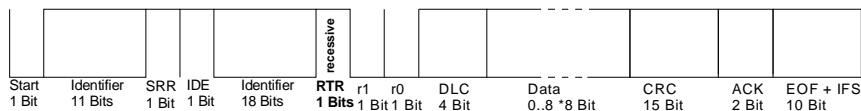

User data within the CAN message:

Maximum 8 values in the byte format or 4 values (4 channels) in the Word format can be transferred depending on the CAN message.



CAN 2.0A (11 Bit Identifier)			CAN 2.0B (29 Bit Identifier)		
Bits		Description	Bits		Description
1	SOF	Start of Frame	1	SOF	Start of Frame
11	ID	Identifier	11	ID	Identifier
			1	SRR	
1	IDE	Identifier Extension (0)	1	IDE	Identifier Extension (1)
			18	ID	Identifier (extended)
1	RTR	Remote Transmission Request	1	RTR	Remote Transmission Request
			1	r1	
1	r0		1	r0	
4	DLC	Number of following data bytes	4	DLC	Number of following data bytes
64	Data	Data bytes	64	Data	Data bytes
15	CRC	Error Identification Code	15	CRC	Error Identification Code
2	ACK	Acknowledge	2	ACK	Acknowledge
10	EOF	End of Frame	10	EOFS	End of Frame
110		Summe	130		Summe

Word	Byte	Bit (Message layout in the displaying format „Intel Standard“)							
0	0	7	6	5	4	3	2	1	0
	1	15	14	13	12	11	10	9	8
1	2	23	22	21	20	19	18	17	16
	3	31	30	29	28	27	26	25	24
2	4	39	38	37	36	35	34	33	32
	5	47	46	45	44	43	42	41	40
3	6	55	54	53	52	51	50	49	48
	7	63	62	61	60	59	58	57	56

Access to the CAN-Bus, Transferring properties

The CAN bus allows a safe and effective data transfer of the connected devices (non-destructive bitwise arbitration = resource distribution to different devices). The CAN bus is therefore used as a standard communication medium in the automotive area and the industrial automation.

The most important characteristic CAN bus properties are:

- ▶ Every bus participant (node) can send, as well as, receive.
- ▶ First of all, the node, which wants to send, needs the authorization. All participants become automatically a recipient (There is no abortion of the data sending process > non-destructive collision).
- ▶ No stations are addressed but messages.
- ▶ Every message is characterized by its name (Identifier).
- ▶ The less the identifier, the higher the message priority.
- ▶ A message can transport up to $8 \times 8 \text{ Bit} = 64 \text{ Bit}$ (8 Byte) user data, whereas each message requires 110 Bit or 130 Bit (Extended ID).
- ▶ Depending on the hardware and the bus line length, up to 1 MBit/ s can be transferred.

The following important conclusions result from the properties above:

- ▶ The less the bus load, the less the probability of a "Bus access conflict" (you can call this a real-time capable area).
- ▶ A high bus load forces stations to loose messages with a high identifier or to send them more slowly. Messages with a high identifier can "get lost".
- ▶ Not sent messages are only registered by the "Recipient node" because data are missing. If no timeout has been defined, the last valid value is generally sent, i.e. a mistakenly constant value.

Transfer rate, Bus line length

The CAN bus supports a max. transfer rate of 1 MBit/s according to Norm ISO 11898-2.

This value is limited in practice by the following points:

- ▶ the bus line length
- ▶ the branch line length to the CAN stations
- ▶ the bus lines quality and the plug contacts
- ▶ the bus line design (twisted, single or two-wire bus)
- ▶ bus connection structure and
- ▶ type and strength of external perturbations

Example

Data rate on the bus	1 MBit/s = 1 μ s/Bit
Data length of a CAN message	130 Bits gesamt
User data in a message	64 Bit = 4 values with 16 Bit resolution each
Time for a CAN message	130 Bit x 1 μ s/Bit = 130 μ s/message, i.e. 4 values require 130 μ s
Calculating the total sampling rate	130 μ s match 7.69 kHz
Converted to one channel	4 x 7.69 kHz = 30.76 kHz
Theoretical transfer rate	30 channels with 1 kHz = 30 kHz
Practical experiences	26 channels with 1 kHz = 26 kHz
The value is lower at guaranteed synchrony.)	

If CAN messages are not completely used (e.g. only three 16 bit values instead of four per message), less data can be transferred although the sum sampling rate has not yet reached the maximum. This also applies if different sampling rates are defined in one system, because the data division to the CAN messages is not time-optimized (minimum time required).

2.2.2 Ampacity and voltage drop

Besides the fact that the max. bus line length is defined by the desired data transfer rate, the ampacity and the voltage drop in the system have primarily to be checked. This is especially important for systems with a high number of devices and/or long connections lines of the devices (e.g. distributed systems with connection lines of 3 m (9.84 ft) and more between the device groups). Additional actions should be taken accordingly to the situation.

Ampacity

The maximum current via the M-CAN system cables (e.g. 620-560.xxx) is 4 A (heat generation by transition resistances of the plug contacts).

The system capacity and therefore the power consumption can approximately be calculated by using the number of devices (including the sensor supply). A direct power acquisition in the real system provides exact values.

We recommend one or several of the following actions if the limit value is exceeded:

- ▶ Increasing the supply voltage of the devices (e.g. 24 V DC power supply or 42 V DC instead of 12 V)
- ▶ Centered voltage supply via T connection or as close as possible to the devices with high power requirements (rather than at the beginning or end of the system chain)
- ▶ Additional system supply via a T connection at a suitable position

Voltage drop

Even if the limit value for the ampacity is not reached, long lines in an extensive system can cause perturbations in the acquisition process. This mainly applies to devices at the end of the system chain, because the voltage of the last devices does not exceed the input threshold of 9 V (due to a high voltage drop in the system).

We recommend one or several of the actions mentioned above.

The voltage drop can be calculated by using the following formula:

$$U = R \times I$$

$$R = 2 \times R_{\text{Cable}} [\Omega/\text{m}] \times \text{Length}_{\text{Cable}} [\text{m}]$$

$$I = P_{\text{Devices}} [\text{W}] / V_{\text{Devices}} [\text{V}]$$

For estimating the voltage drop, a resistance of

50 mΩ/m for the M-CAN cables and
35 mΩ/m for the SIM-CAN cables

can be used including the transition resistances of the plug contacts. Systems, which are in the limit range of the voltage drop, should be controlled in individual cases. To do so, our support will be pleased to assist you.

As the power consumption of a device depends on the supply voltage, it is useful to calculate the voltage drop from the chain end to the feeding point. In this case, a minimum voltage of 9 V is set to the last device and the required excitation is calculated. The calculated value should be generously rounded upwards for guaranteeing a safe operation.

Another fact is the variable internal resistance of the input power supplies (low excitation = lower internal resistance).

In practice, this means: If the net excitation decreases (e.g. because of a weak power supply or a high resistivity with long cables), the devices have to readjust to cover the current power requirements. This causes a higher power consumption, which additionally increases the voltage drop.

2.3 Synchronous data acquisition


2.3.1 Principle of the synchronous signal acquisition

Every device has an internal clock, which guarantees an equidistant signal acquisition, i.e. the sampling of the momentary values of the continuous signal takes place in identical intervals. This clock synchronizes the A/D conversion of all channels within a device, but not the channels of other devices in the system. The clocks of every device have no reference to each other and differ regarding the clock frequency and phase shifting. Reasons for that are components and manufacturing tolerances, as well as, different environmental conditions.

2.3.2 Master clock as higher system clock

To counteract those disadvantages, a single system clock for all devices (Synchronization clock) is required.


The graphic shows that signals with a high sampling rate, as well as, signals with a low sampling rate are always synchronously detected. This guarantees an simultaneous acquisition of values, which are stored at one date.

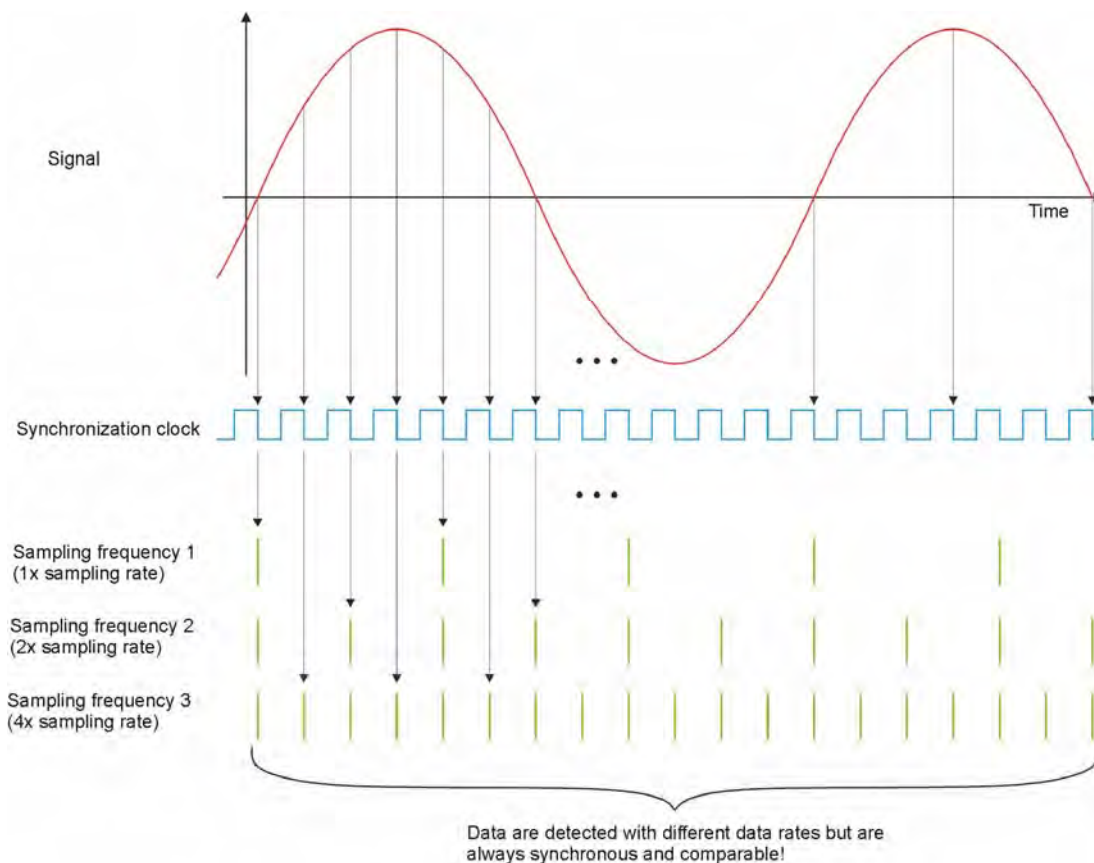

2.3.3 Measurement systems without master clock

The non-synchronous acquisition seriously influences the comparability and therefore the plausibility of the acquisition – especially at long-term acquisitions. The time variation of the single clock generators sums with the acquisition time, i.e. the longer the acquisition the higher the deviation. If the frequency deviation and the drift direction of the different clocks is unknown, you cannot assume that all values, which are assigned to a specific value at the time axis, did really exist at that moment.


2.3.4 IPETRONIK measurement system with/without synchronization clock

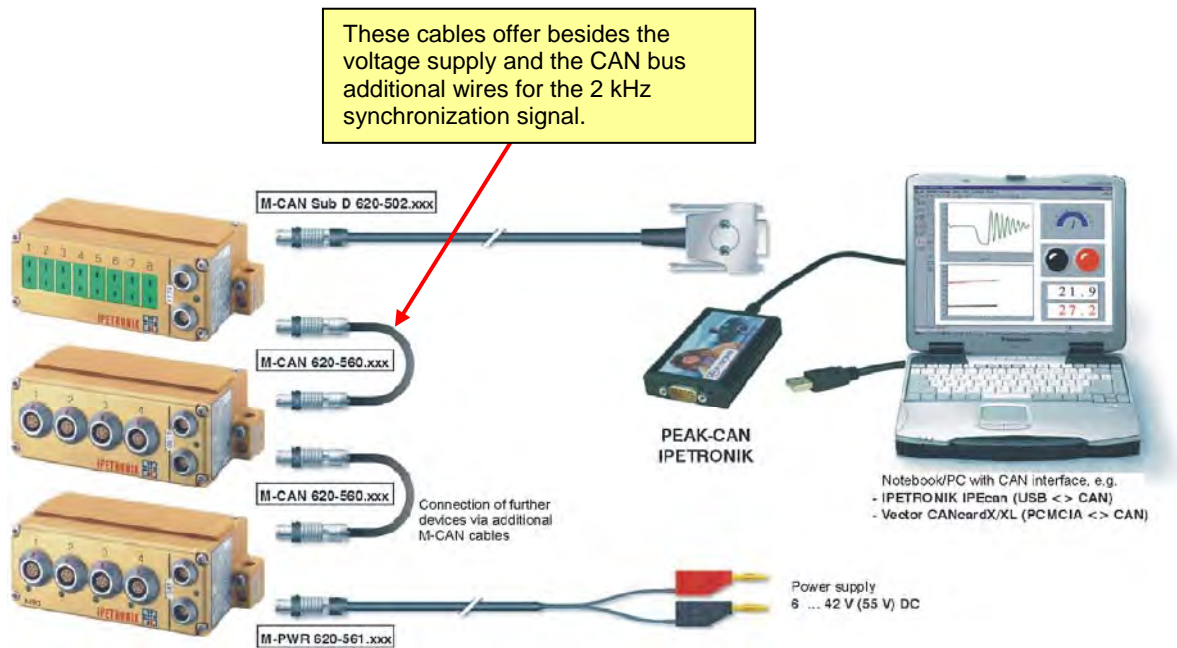

2.3.5 Software settings

The devices in the standard mode (clock = **free**) work with internal clocks. The user can configure if the devices are synchronously or non-synchronously detecting the signals.


The synchronous data acquisition is activated with the property of the corresponding bus system by using the main navigation point **Signals** within the CAN bus system **IPETRONIK-1 ► Options ► Synchronized mode** (or via the context menu **Properties**). IPEmotion sets one device as the **clock generator** and the remaining devices are set to the **synchronized clock**.

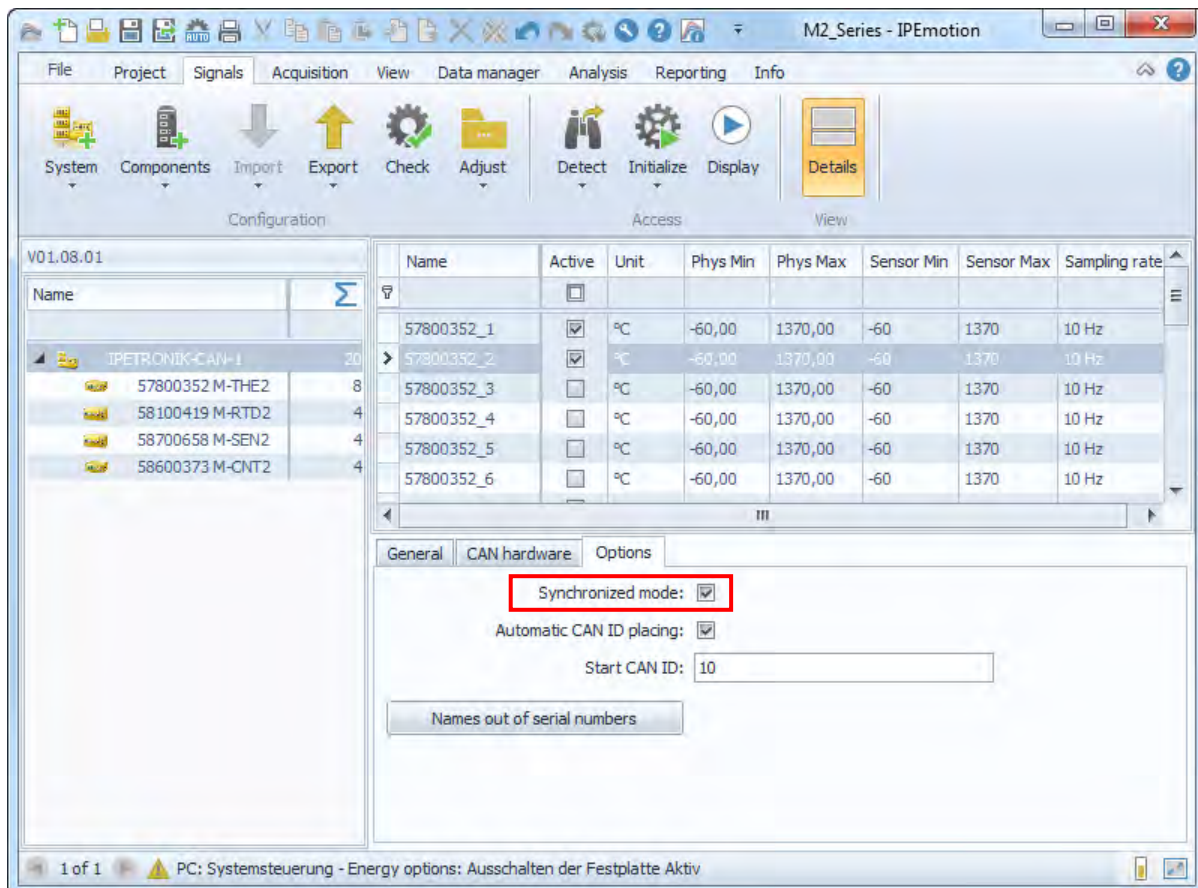

System properties



Device properties

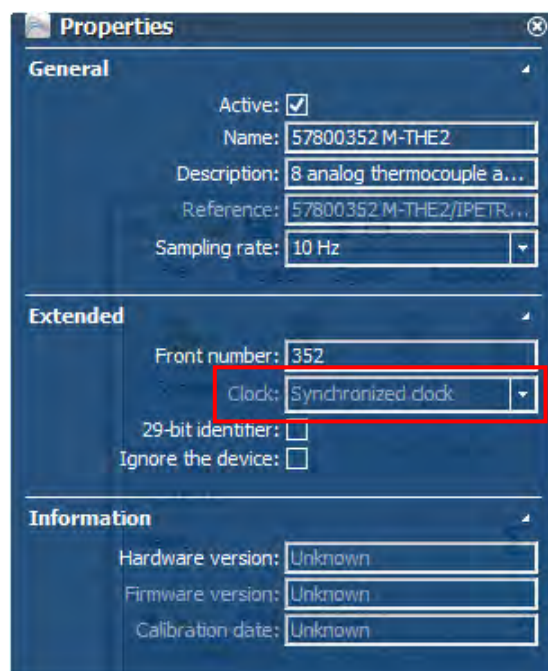


2.4 General device description

2.4.1 Properties and structure


The devices have the following properties in common:


- ▶ different channel sampling rates, depending on the device up to 2 kHz
- ▶ all channels are completely electrically isolated
- ▶ output of the 16 bit data on the CAN bus according to ISO 11898-2
- ▶ extended operating temperature range (-40 °C to +125 °C / -40 F to + 257 F)
- ▶ very compact case in IP67 protection
- ▶ dovetail guide for connecting M series devices without tools

M-Series modules

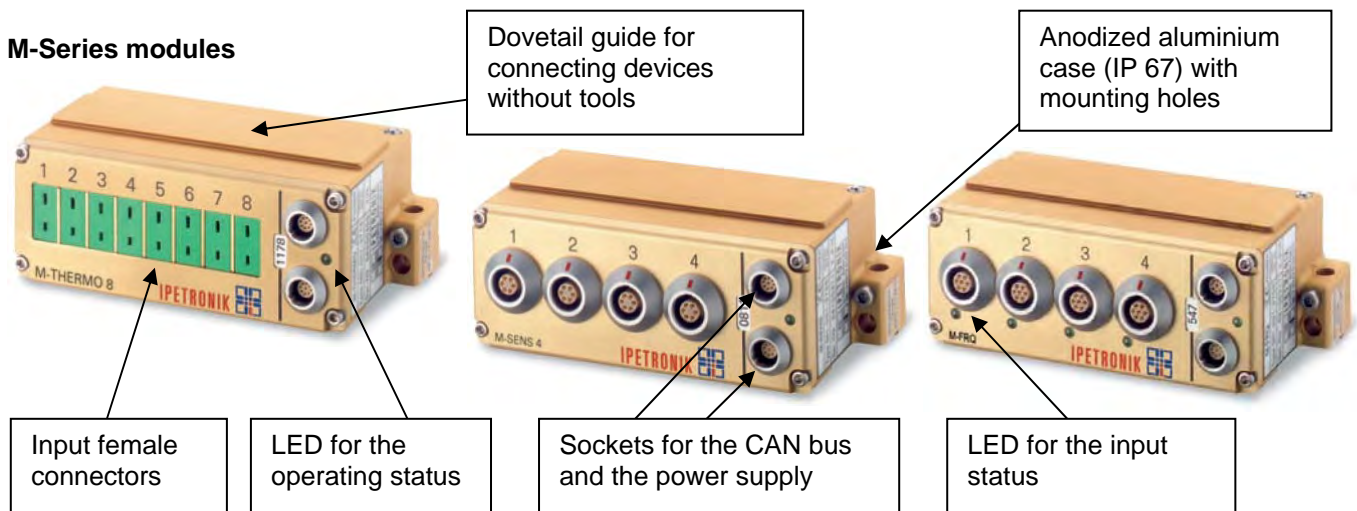

μ-THERMO

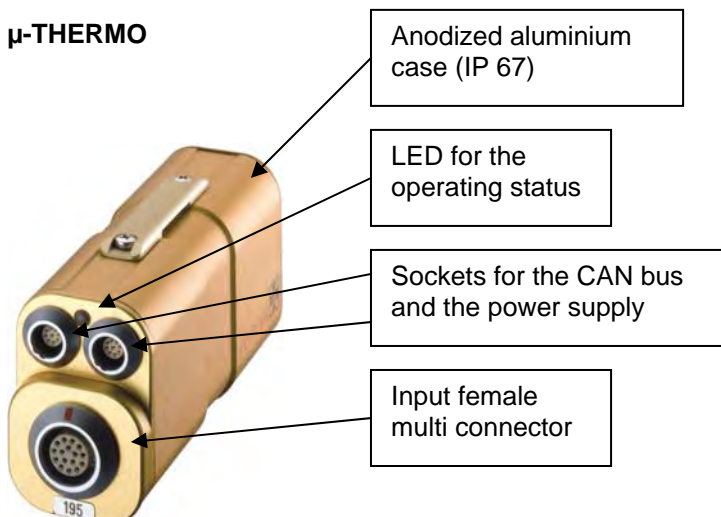

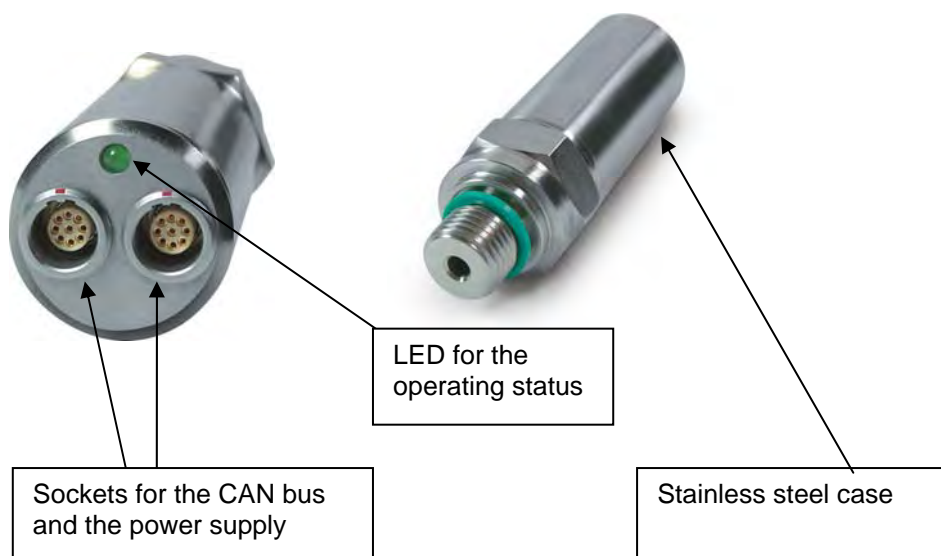CANpressure**2.4.2 Interpretation of the LED display (flashing codes)****M-THERMO, μ -THERMO , M-SENS, M-FRQ, MultiDAQ, CANpressure**






LED display (intervals in seconds)	Mode	Meaning
[Solid Green]	Operation	Ready for use or data transfer to the configuration (no measuring data transfer)
0.9 0.1 0.9 0.1	System mode	Measurement running! Operation in system with a master device
0.1 0.9 0.1 0.9	Freerunning mode (also synchronized)	Measurement running! Operation in system without a master device
0.25 0.25 0.25 0.25 0.25 0.25 0.25	Error	Error, which requires a restart (PWR OFF/ PWR ON)
0.5 0.5 0.5 0.5	Download kernel	Device ready for firmware download (only at initial update or manufacturer reset)
[Flashing Green]	Download	Firmware download, flashing frequency corresponds to the transfer of the program lines



The LED color depends on the ambient temperature. Temperatures > 100 °C / 212 °F change the color to yellow.

Mc-THERMO, M-THERMO2

Mc-THERMO und M-THERMO2 verfügen über eine Mehrfarben- Status-LED, dadurch unterscheidet sich die LED-Anzeige von den oben genannten Modulen.

LED display (intervals in seconds)	Mode	Meaning
	Operation	Ready for use or configuration data transfer (no measuring data transfer)
	Freerunning mode (also synchronized)	Measurement running!
	Error	Serious error happend during configuration, measurement initialization or communication
	CAN error	Error in CAN bus communication
	Init error	Error in basic initialization of the module, Current configuration does not match to to the device firmware.

2.4.3 Reverse polarity protection

All M devices have an electronic reverse polarity protection and an additional inrush current limitation.

The reverse polarity protection shields the complete excitation range of the corresponding device and avoids damages due to lines changing PWR+ (red) and PWR GND (black).

The inrush current limitation avoids too high inrush currents, which reduce the durability of switches and relays contacts and avoids the burning of the plug contacts if cables of the power supply are plugged under tension.

2.5 Cables

In order to electrically connect the devices, as well as, the sensors, cables with different lengths and various plug configurations are available:

System cable


Connect the devices at the CAN bus and contain the data lines (CAN bus and synchronization lines), as well as, the power supply.

I/O cable

Connect the device input with the respective sensor. The cables are open ended with lengths of 3 m, 6 m, and 10 m (9.84/ 19.68/ 32.8 ft).

Cable number

The cable part number identifies the cable type and length, e.g.:

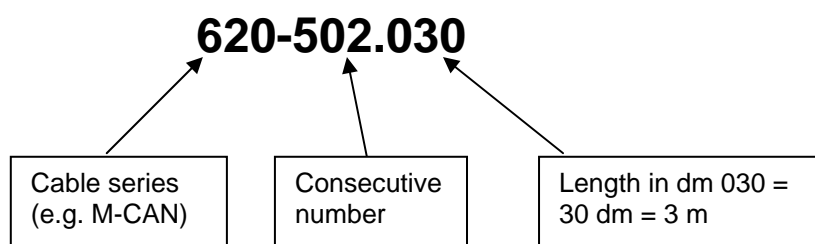


2.6 Mechanical accessories


2.6.1 Differences of the M design

The extension of the M series by the new M-THERMO 16 and M-SENS 8 devices requires new connection mechanics to meet the higher practice demands. The new devices are exclusively available in the 2nd version of the dovetail mechanics (identification BR). The existing devices M-THERMO 8, M-SENS 4 and M-FRQ are available in the 1st version, as well as, in the 2nd version of the connection mechanics. A mechanical compatibility between the devices is guaranteed at using corresponding adapters. If the devices of the same version are connected, only one adapter is required as a bridge between both connecting systems.

M case V1 (horizontal)


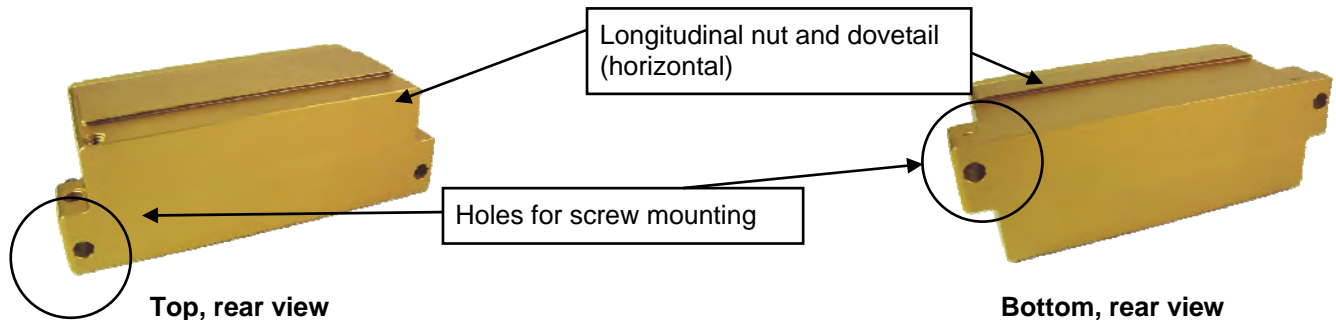


M case V2 (BR)

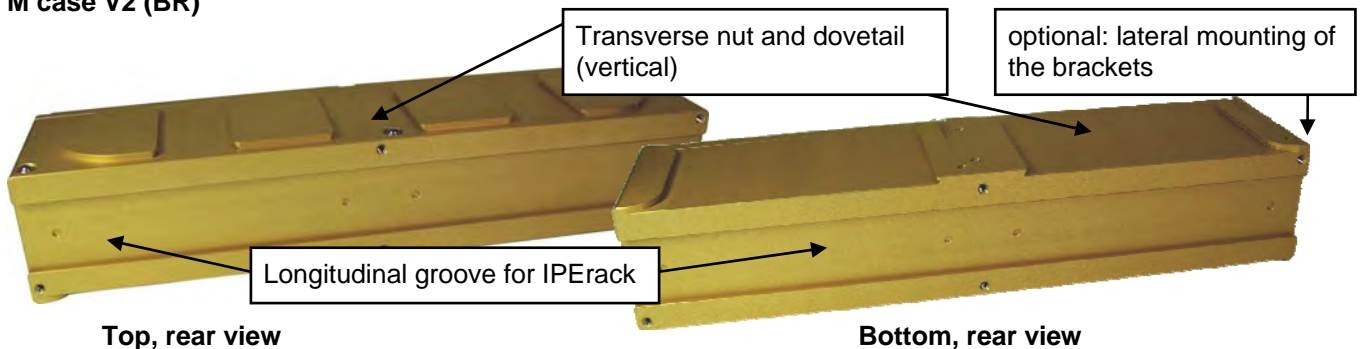

2.6.2 Mounting brackets for M case Version 2 (BR) and M2 case



The brackets are used for the screw fastening of the devices with new connection mechanics. Each device requires 2 brackets, which allow different mounting positions.

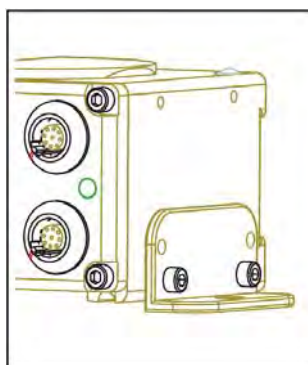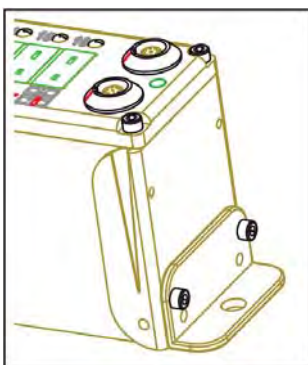

MOD-M-HWI-100



2.6.3 Mounting brackets for M-THERMO2

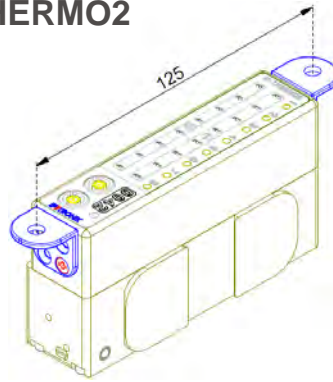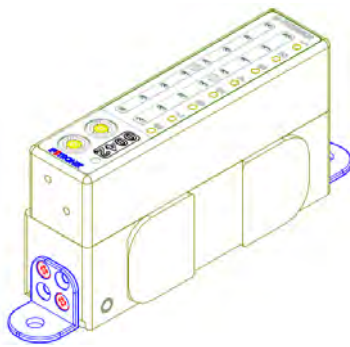

MOD-M-TH2-HWI-1

2.6.4 Adapter plates

Dovetail adapter V1/V2 (M case Version 2 long at Version 1)

The existing devices M-THERMO 8, M-SENS 4 and M-FRQ can be connected with devices of the connection mechanics version 2 (only long case design) by using an adapter plate. This plate is slid at the bottom of the long M case (M-THERMO 16, M-SENS 8, M-SENS 8*plus*) and allows the mounting of 2 M devices each in the short case version V1.



MOD-M-ADAPT-100

IPERack adapter (M case Version 1 at IPERack)



The existing devices M-THERMO 8, M-SENS 4 and M-FRQ can be connected with the quick assembly system IPERack by using a dovetail adapter plate for fixing to the device back. You can therefore fasten the devices without tools to the IPERack device plate.



MOD-M-ADAPT-200

IPERack adapter for M2 cases

The Dovetail adapter plate enables M2 device mounting (THERMO2, RTD2, SENS2, CNT2) without tools to the IPERack device plate.

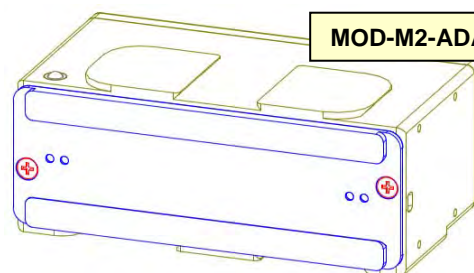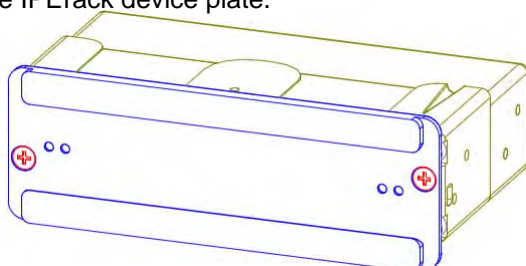

MOD-M2-ADAPT-1

2.6.5 μ -THERMO snap-in fastener



MOD-SNP-HWI-900

The μ -THERMO snap-in fastener allows the combination of μ -THERMO devices without tools in horizontal, as well as, in vertical order. Each device requires a snap-in fastener.


2.6.6 IPErack, quick assembly system for M-Series devices

- ▶ Carrier system containing two exchangeable device plates
- ▶ 2 different sizes available
- ▶ **per device plate up to:** () = small design
 - 20 (10) devices of the M-THERMO 8, M-SENS 4 or M-FRQ type
 - 10 (5) devices of the M-THERMO 16 M-SENS 8 / M-SENS 8*plus* type
- ▶ Mixed mountings of the listed devices possible
- ▶ Use of devices without a dovetail connection at the back by using mechanical adapter plates
- ▶ Safety pins on both sides avoid the accidental extraction of the device plates
- ▶ Robust carrier system and device plates out of milled aluminum
- ▶ Different transfer and elongated mounting holes for fastening the system at the location.




Carrier system		IPEcrack 20/40	IPEcrack 10/20
Basic plate			
Length/Width	mm	522 / 180	302/ 180
Side plate			
Length/Width	mm	237 / 124	237 / 124
Basic plate, Side plate			
Thickness	mm	10	10
Height carrier system			
without/with device plates	mm	247 / 302	247 / 302
Weight carrier system			
without device plates	g	2180	1800
with two device plates	g	5480	3600
Material		Aluminum, black anodized	
Slide-in for device plates with two safety pins each	Pcs.	2	2
Device plate with carrying handle		Big plate	Small plate
Width	mm	454	234
Height			
Top without handle	mm	242	242
Top with handle	mm	292	292
Thickness (without/with guide)	mm	8 / 10	8 / 10
Mass	g	1650	900
Material		Aluminum, golden brown hard-coated	
Maximum mounting	Pcs.	20 (per plate)	10 (per plate)
M-THERMO 8, M-SENS 4, M-FRQ and mixed mountings			
Maximum mounting	Pcs.	10 (per plate)	5 (per plate)
M-THERMO 16, M-SENS 8 / 8 <i>plus</i> and mixed mountings			



IPErack 10/20 (MOD-IPERACK-003)

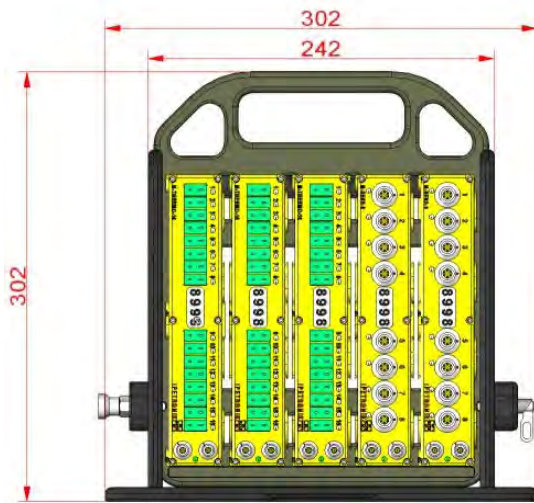

IPErack 20/40 (MOD-IPERACK-001)

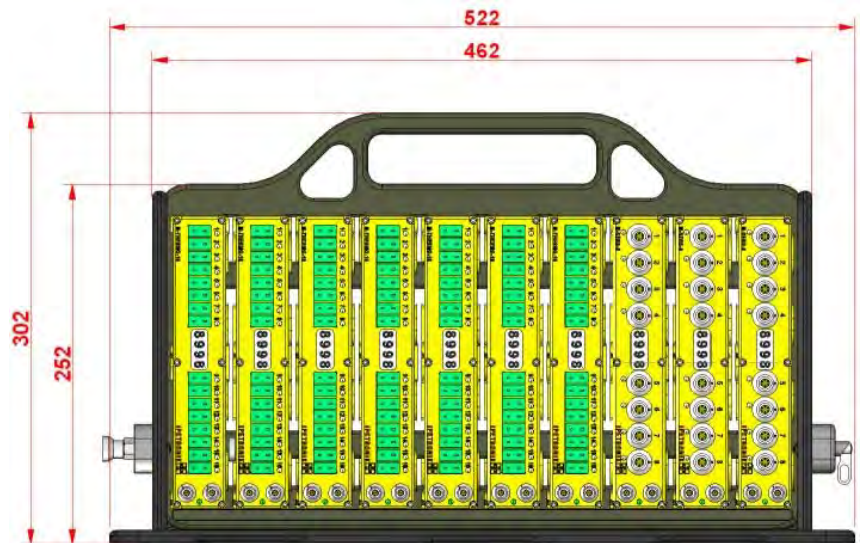

All dimensions stated in millimeters (mm)

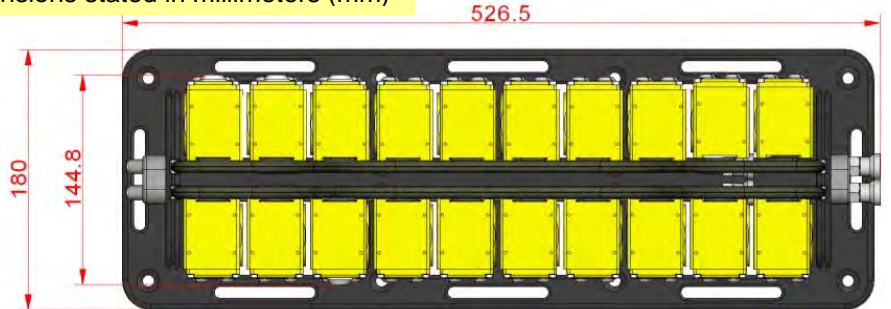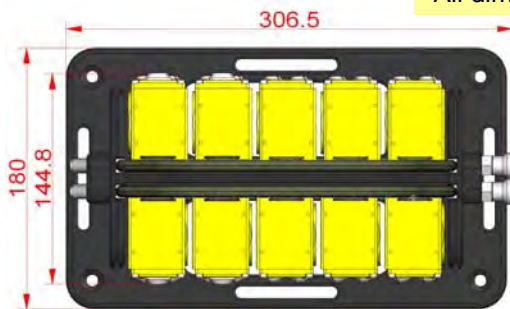

3 General software description

3.1 Requirements

Further requirements besides the hardware:


- ▶ **Notebook with CAN interface** (e.g. IPEcan, ...) or
- ▶ **PC with CAN interface** (e.g. IPEcan, ...) or
- ▶ **M-LOG, S-LOG, FLEETlog or IPElog** (IPETRONIK data logger with real-time operating system)
- ▶ The **IPEmotion** software for configuring the device and for acquiring the data via the CAN bus.



The CAN interface must be installed correctly. See the respective manufacturer's manual for further information.

3.2 Supported CAN interfaces

Select the CAN system (e.g. **IPETRONIK-1**) and choose the **CAN hardware** tab for listing the supported CAN interfaces.

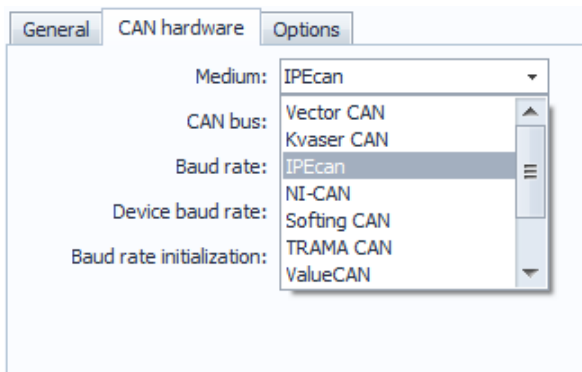

3.3 Configuration with IPEmotion (general)


You can find a detailed description of IPEmotion in the manual, which can be opened in the software as a PDF.

3.3.1 Main dialog

After the start of IPEmotion, the following screen appears.






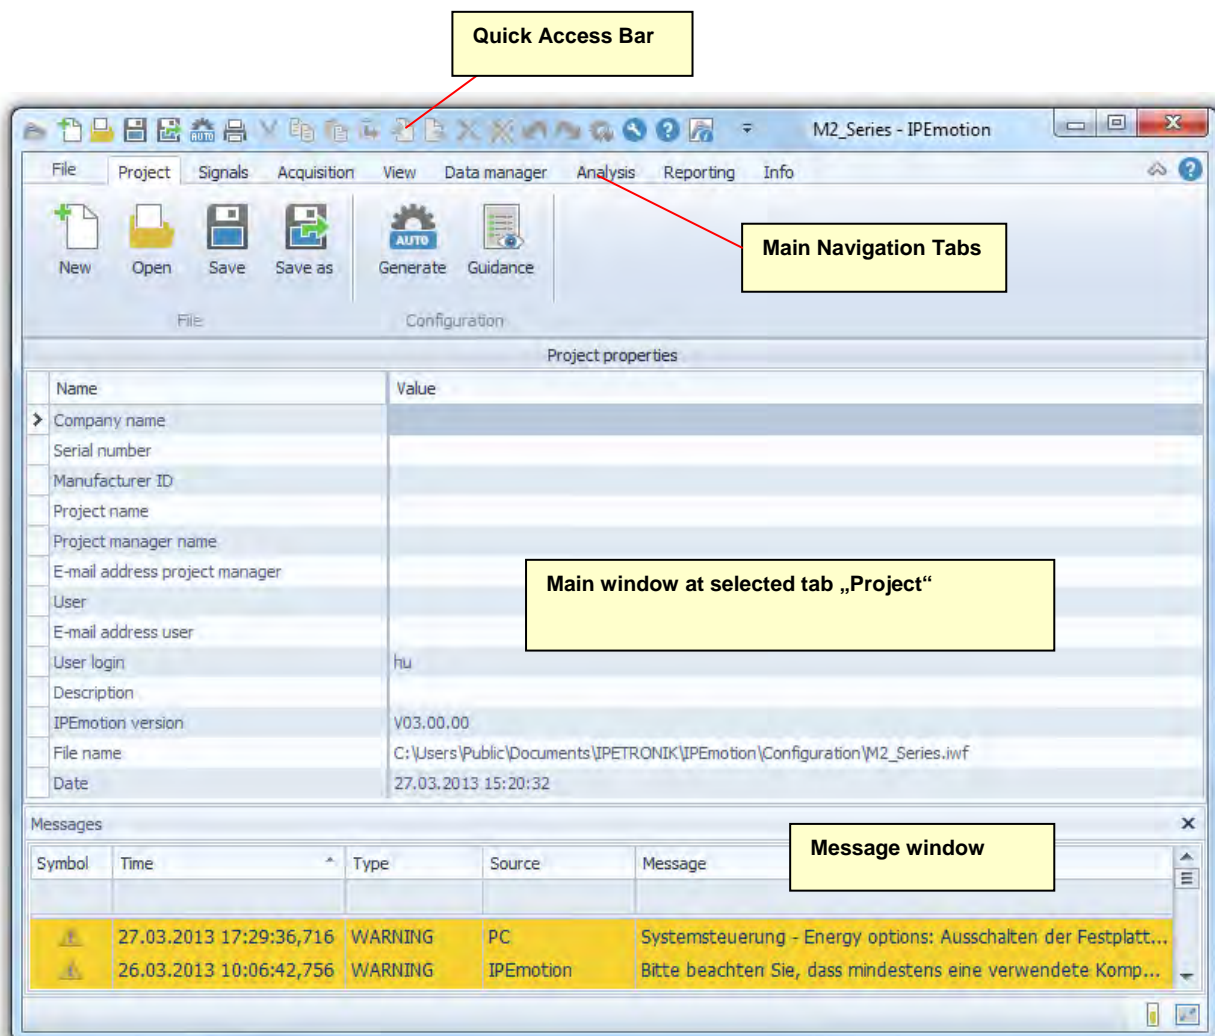


*IPEmotion automatically detects all available hardware connections at starting.
If you want to reduce the required time, select **Options > Plugins** for deactivating those interfaces, which are not used.*

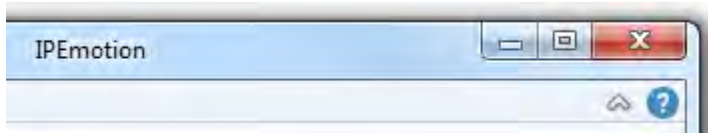

3.3.2 The title bar

The title bar contains the quick access bar, the software name, as well as, a tool bar with the following functions:



	Minimize the Ribbon	Ctrl+F1	Only show tab names on the ribbon
	Help	F1	Open the documentation IPEmotion.pdf
	Minimize		Minimize the application window of IPEmotion
	Maximize		Make the application window visible on your desktop and refit the prior size
	Close		Close the application of IPEmotion

3.3.3 The file menu


Click on the **File** button to open the application menu.

The application menu contains basic functions as:

New, Open, Save, Save As, Runtime version, Print and **Close**, as well as, further properties such as **View, Options, Support file** and **About**.

The right partial view of the application menu contains a list of the recently used projects.

The **View** function contains the menu points **Message window** and the **Reset** command. Show or hide the message window and reset the displaying configuration to the default parameters.

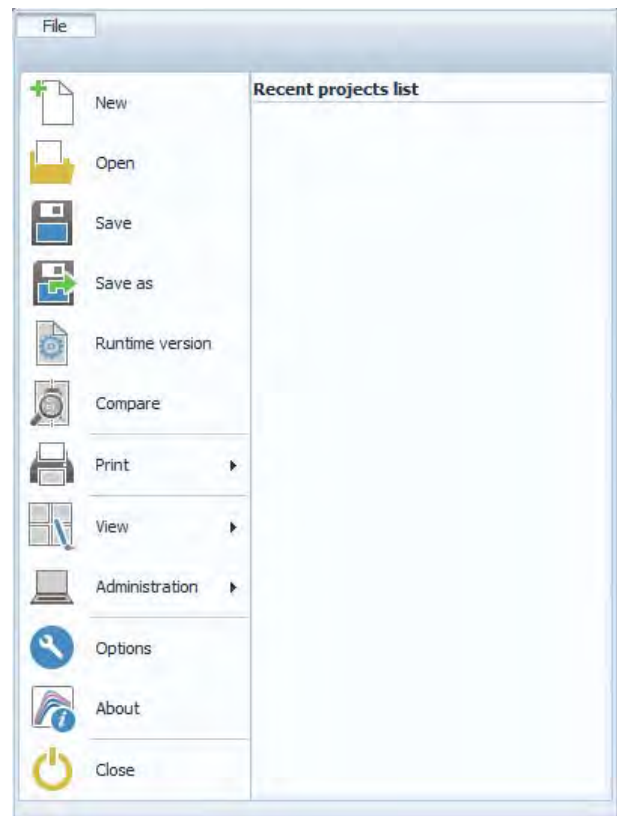

3.3.4 Using the options

With the Options entry, you have the ability to edit user defined settings. You can define the following options:


- ▶ Frequently used
- ▶ Basic settings
- ▶ View
- ▶ Data manager
- ▶ Analysis
- ▶ Units
- ▶ PlugIns

The following section offers you a detailed overview over the available setting options.

Frequently used

Activate or deactivate **Start with the latest configuration** and define the settings for the **automatic hardware detection**. Activate or deactivate the **automatic hardware detection at start** of IPEmotion and select a possible **standard command after successful detection**:

- ▶ Guided configuration
- ▶ Automatic configuration or
- ▶ Manual configuration

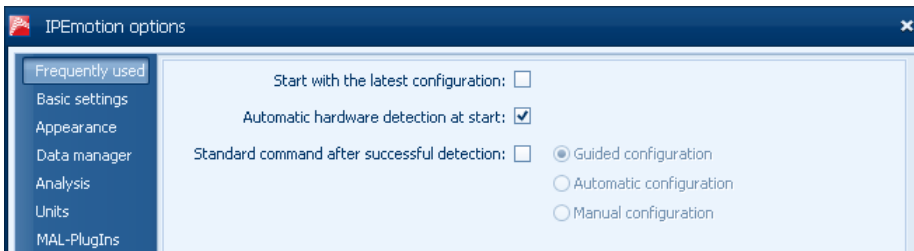


Basic settings

Select a **preferred configuration type**:

- ▶ Hardware configuration
- ▶ Signals configuration

Activate or deactivate the options: **Accurate acquisition chain required** and **Expert mode**.

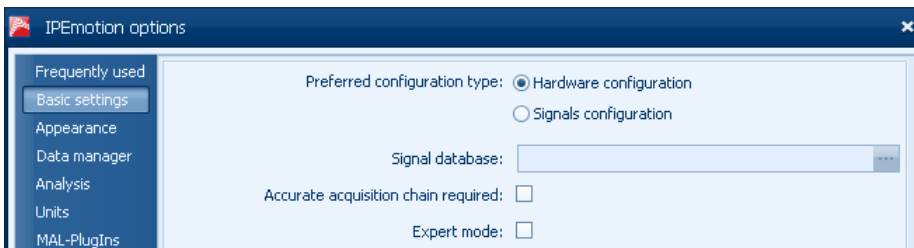


View

Define your **view settings** according the following listed points:


- ▶ Language selection
- ▶ Skin selection
- ▶ Displaying tooltips
- ▶ Font size of the visual elements
- ▶ Transparency of configuration dialogs (0 – 30 percent),

Activate or deactivate the use of the **Windows standard dialogs** for the file and directory selection. The *Open file* dialog is skin-enabled, i.e. it is shown in the selected user interface type.

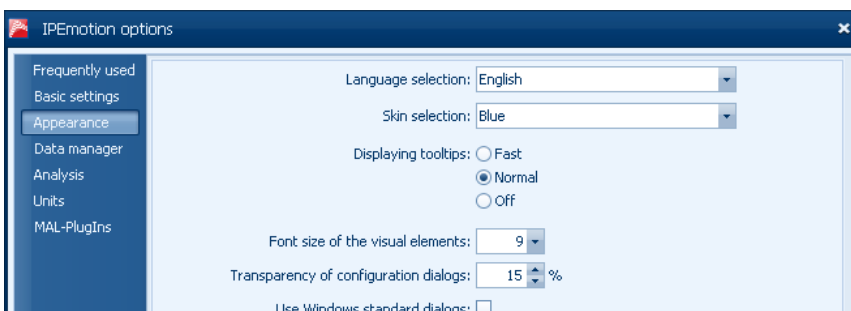


Data manager

Define the **Time channel format** as *Relative* or *Absolute* (This setting is currently not supported for the export into external formats!) and activate or deactivate the option: **Merge time channels with equal acquisition rate**.

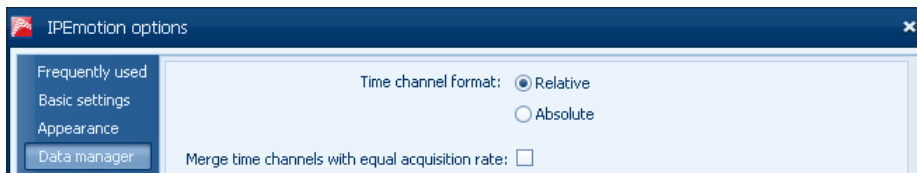

Analysis

Select the **points per diagram graph**. Define if all signals are considered in the analysis diagrams at drawing the graph or only the samples. Move the bar accordingly to the preferred speed or quality.

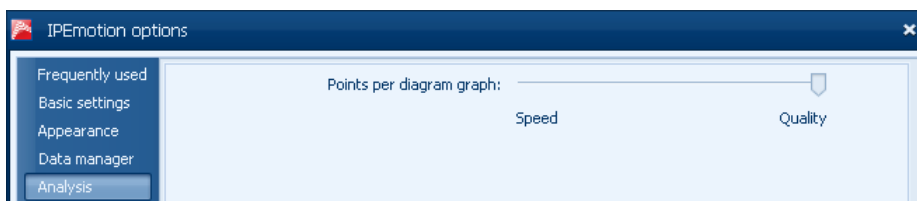

Units


Get an overview according the common physical values and their respective unit and edit them.



Plugins

Activate or deactivate the **hardware systems** to be used.

This Plugin is for all IPETRONIK CAN bus devices.

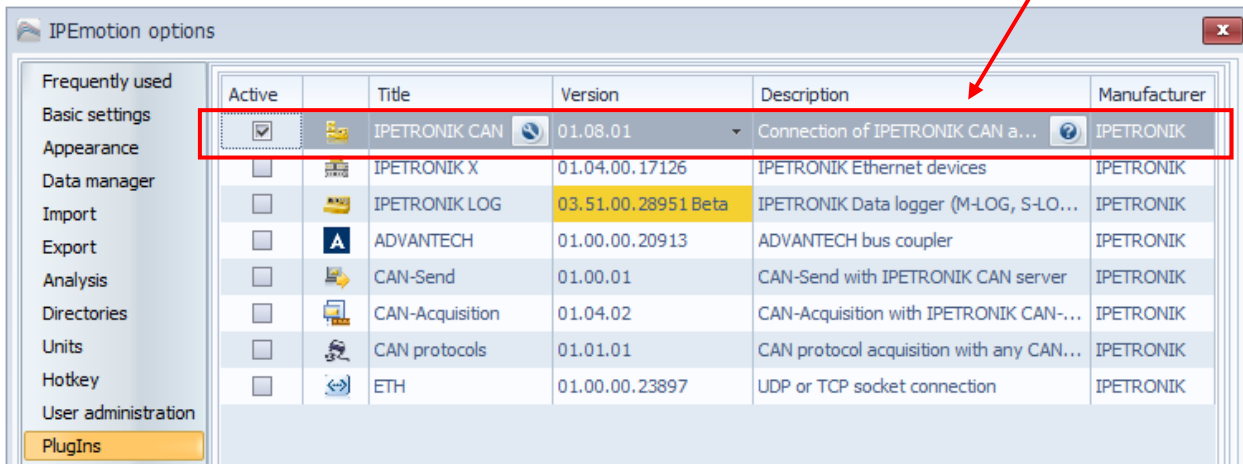

With the **Settings** button, you have the ability to define the **components** (module type and priority, e.g. for the type selection of the Dry configuration) of the respective hardware system and to edit additional **options** settings.



The selection of the hardware components for the configuration by using a signal library is based on the **Priority**. This preselection with a priority assignation of the system components facilitates the device selection and improves the system speed.

The **High** priority defines a preferred use of the corresponding hardware component at configuring with a signal library. The hardware components, which are defined with the **Not used** priority, cannot be selected for an acquisition.


3.3.5 Creating a support file


Enter in the appearing **Create support file** screen an error description. Accept the default location for the file. To select another location click on the symbol.

After you have specified the location and a user defined file name, click **Save** to return to the **Create support file** screen.

After clicking on **OK** a zip file is generated that contains the error description, as well as, the following information:

- ▶ System information (Windows version, computer name, free memory on the local drives, ...)
- ▶ Current configurations (acquisition, online view, script configurations)
- ▶ Trace files (.NET, C++)

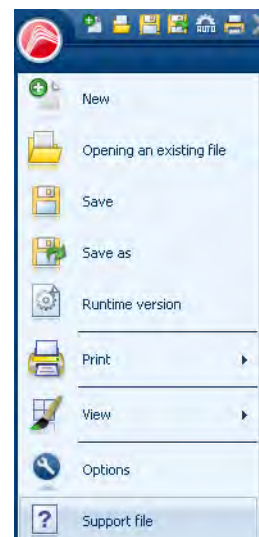

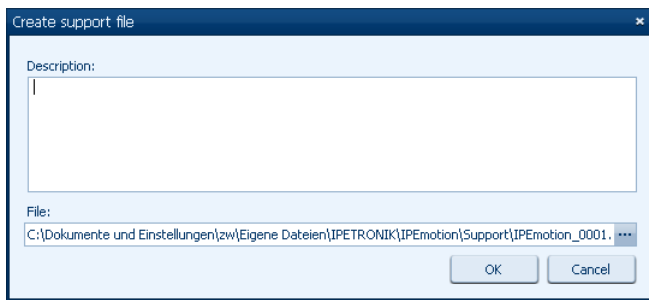






 





 
 







If you have any problems while working with IPEmotion, send us this support file at support@ipemotion.com.

3.3.6 The quick access bar

The quick access bar is integrated in the title bar and contains functions that are frequently used. Each of these functions is displayed as an icon.



	New	Ctrl+N	Create a new configuration
	Open	Ctrl+O	Open an already existing configuration
	Save	Ctrl+S	Save the actual configuration
	Save as		Save the actual configuration under a new name
	Generate		Automatically generating an new configuration with the actual connected devices
	Quick print		Directly printing on the standard printer
	Cut	Ctrl+X	Cut the currently selected elements
	Copy	Ctrl+C	Copy the selected elements into the clipboard
	Paste	Ctrl+V	Add elements from the clipboard
	Paste behind		Paste elements from the clipboard behind
	Copy to file		Copy the currently selected elements to a file
	Paste from file		Add elements from a file
	Delete		Delete the selected elements
	Clean		Delete all subordinate elements
	Undo	Ctrl+Z	Undo the last step(s)

	Redo	Ctrl+Y	Redo undone actions
	Properties		Open the configuration dialog
	Options		Show/edit general IPEmotion options
	Help	F1	The online help will be opened
	About		Show information about IPEmotion (edition, license, options)

3.3.7 The main navigation tabs


The main navigation tabs allow a quick activation of the different main functions of IPEmotion. A tab displayed in light blue indicates an active function.

IPEmotion is designed to follow the main navigation tabs from left to right. Use this reasonable order like a read thread, which guides you step-by-step to a successful acquisition.


Project	Signals	Acquisition	View	Data manager	Analysis	Reporting	Scripting	Info
---------	---------	-------------	------	--------------	----------	-----------	-----------	------

Project	Define your general user defined project data.
Signals	Configure the connected acquisition systems and modules.
Acquisition	Configure the desired storage groups and channels.
View	Take a measurement defined by the connected hardware modules and the set configurations.
Data manager	Manage your stored acquired data in all the supported formats.
Analysis	Visualize your channels with diagrams.
Reporting	Create reports and project documentations.
Scripting	Automate your acquisition sequences.
Info	Get a basic overview and general support.


3.3.8 Project

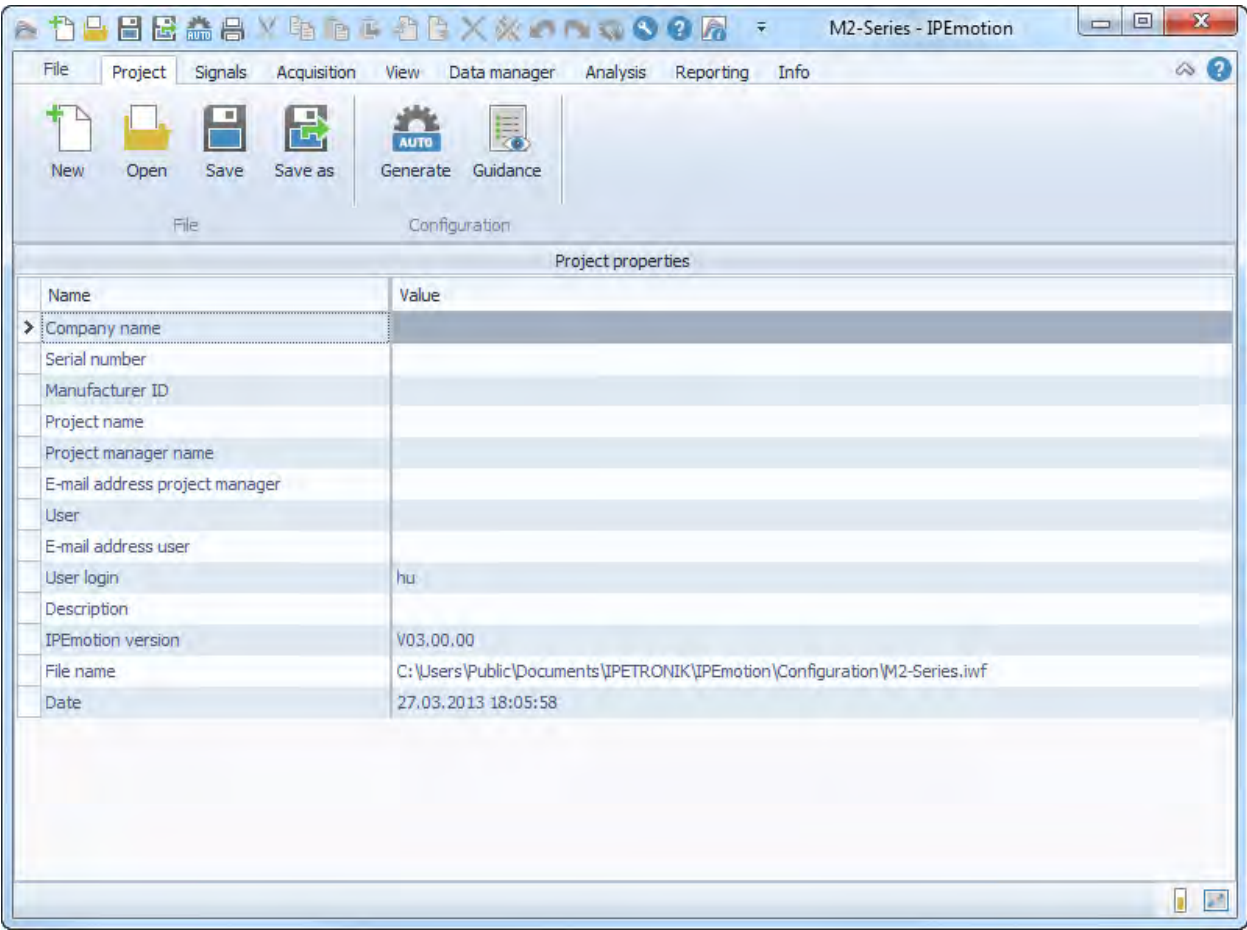


3.3.9 Signals

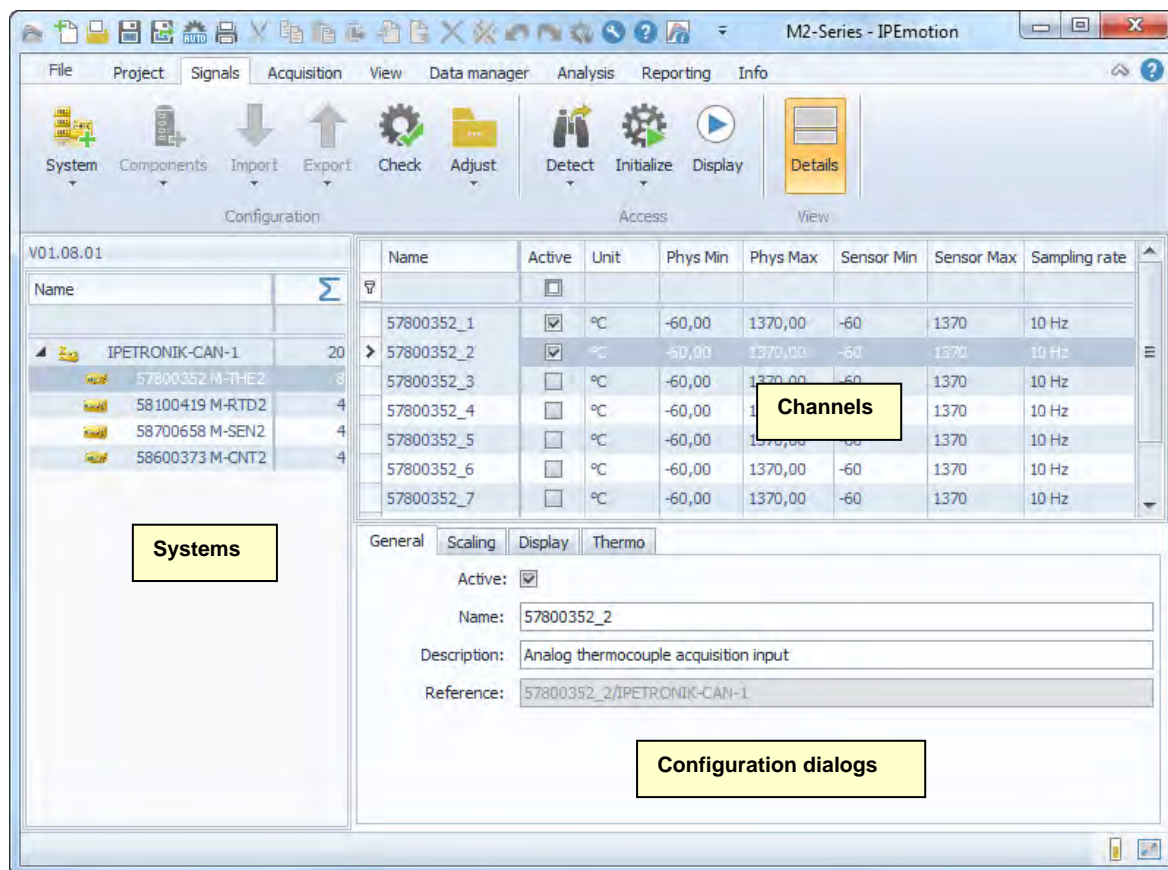


3.3.10 Acquisition

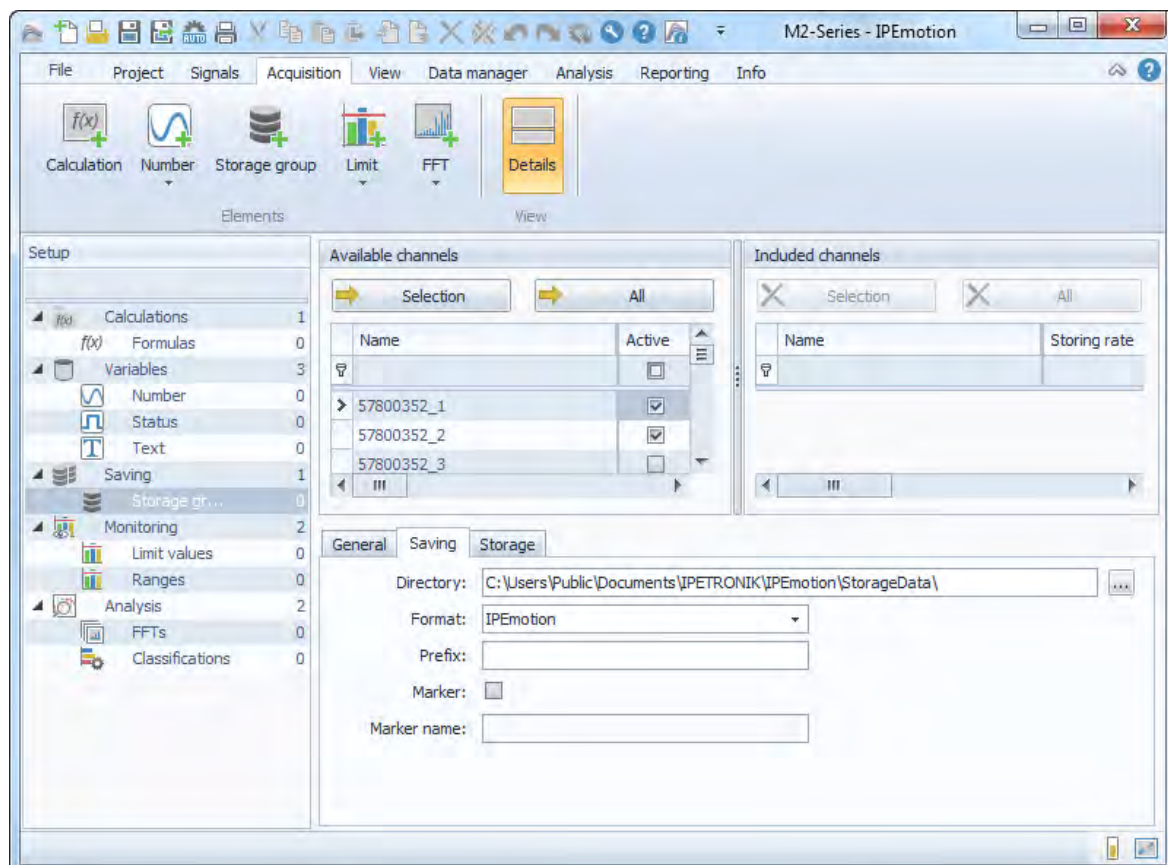


3.3.11 View

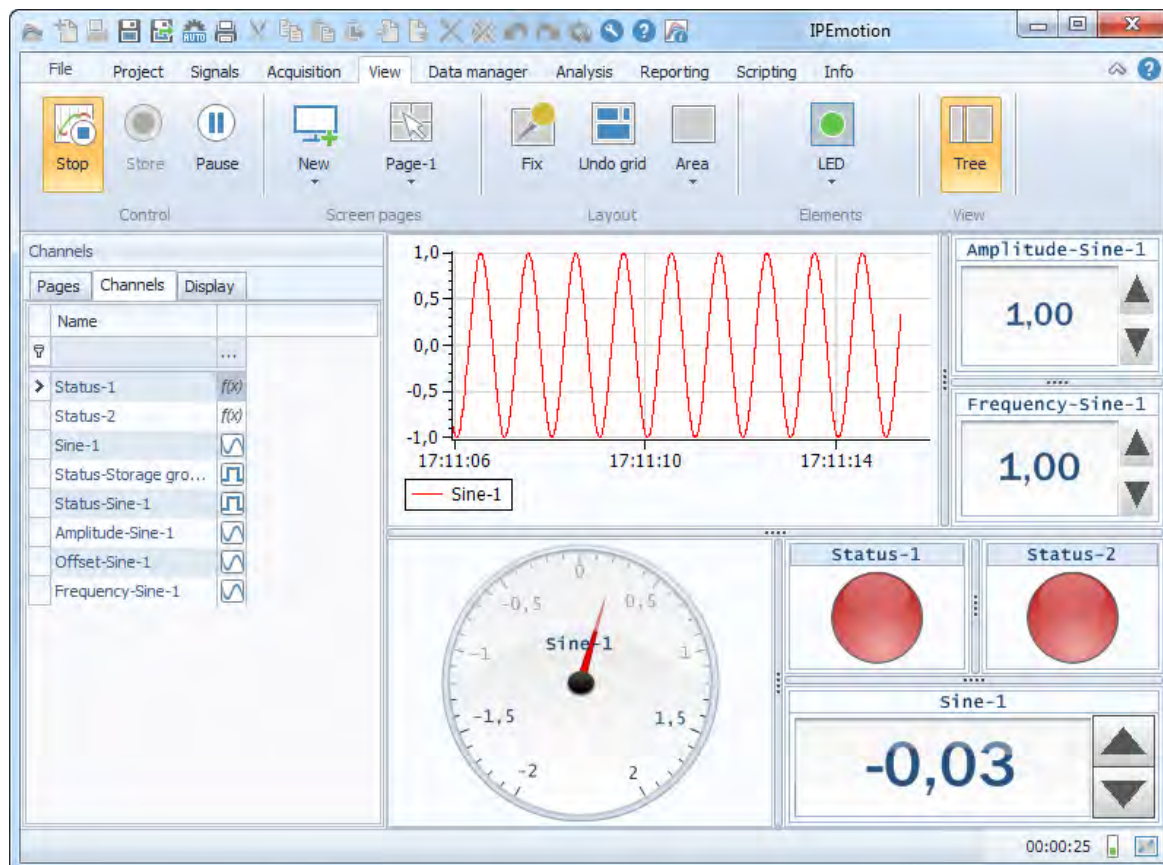

3.3.12 Data manager

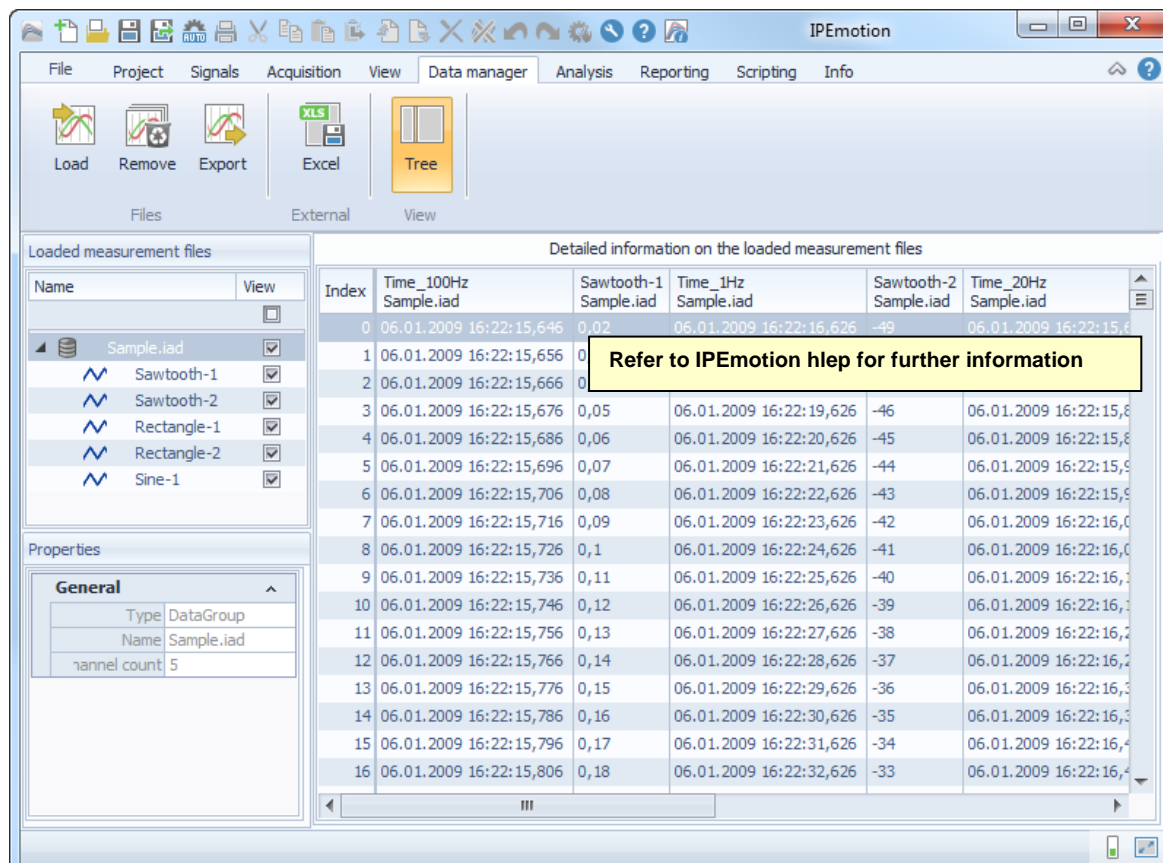

3.3.13 Analysis

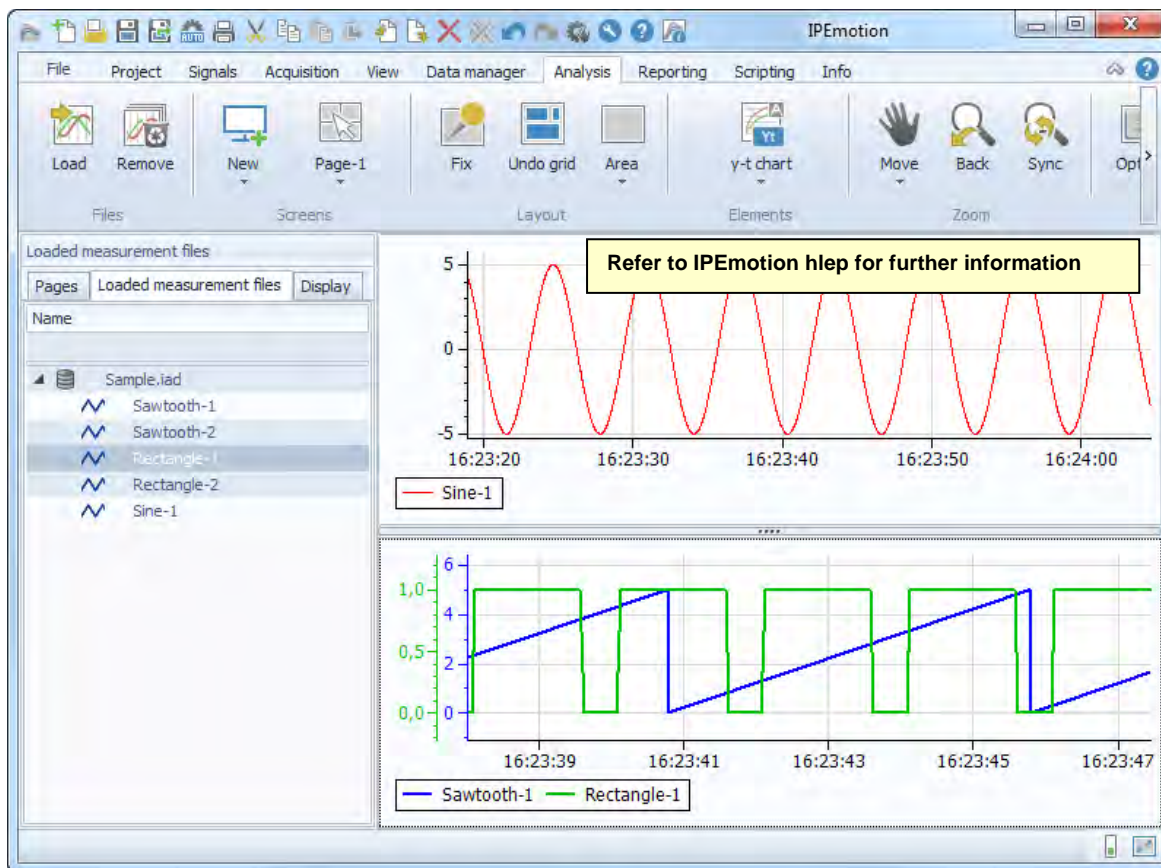

3.3.14 Info

The chapter offers a basic overview of the IPEmotion software. In addition, it shows useful advices and tips and tricks on how to use IPEmotion.

The view Info is divided into the following menu points:

- ▶ Welcome
- ▶ Release Notes (only in English)
- ▶ Red thread
- ▶ Tips and tricks
- ▶ Keyboard handling
- ▶ Documentations
- ▶ Contact and support

3.3.15 The first acquisition

Step 1 Connect the device and switch it on

Connect the device(s) to a notebook/PC and to the power supply correctly poled, as described in chapter [Modular system structure](#). Cable types and lengths can vary depending on the application. Switch-on the power supply. The devices will start measuring immediately after switching-on the power supply. The status LED shows the current operating status (see chapter [Interpretation of the LED display](#)).

If you use M devices in one system together with SIM devices, please note the following advices:




Connect the cable for the power supply by using the SIM devices, **not** the M devices. The M-CAN cables allow a lower current load than the SIM-CAN cables.

Only the M devices allow an operation at a DC supply voltage of 6 V to 42 (55) V. This range is for almost all SIM devices 9 to 36 V.

Step 2 Settings for the hardware interface

With the **Signals** main navigation tab under the CAN bus system **IPETRONIK-1 ► CAN hardware**, you can configure the communication with the measuring devices. Configuring the settings is normally not required because IPEmotion automatically detects the interface and the devices.

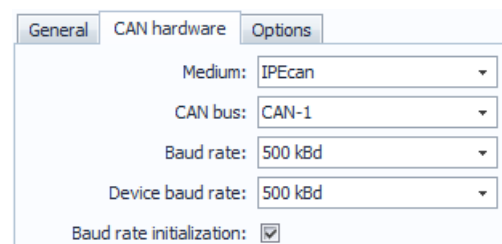


The baud rate of the CAN interface (**Baud rate**) can differ from the baud rate of the devices (**Device baud rate**). When using e.g. devices with 1 MBd (MBit/s), which are currently set to 500 kBd (kBit/s), only change the baud rate of the devices to 1 MBd. The configuration data are then sent with 500 kBd and the devices are finally set to 1 MBd. For automatically adapting the CAN interface baud rate to the device baud rate, the **Baud rate initialization** must be activated.




If there are devices in the system, which are set to different baud rates, they cannot be addressed. For resetting all devices in a system to one (default) baud rate of 500 kBd, use the M-DEF-100 or M-MOD-DEF-200 plugs.

Step 3 Detecting devices, Reading out settings

IPEmotion automatically detects all available interfaces if they are activated with the **Options ► Frequently used** function. The corresponding PlugIn **IPETRONIK CAN** must be activated (**Options ► PlugIns**).

Select **Detect** or **Automatic generation** for identifying all connected hardware components. If components are already existing in the current system, these settings are overwritten.

Save the current system configuration if required.

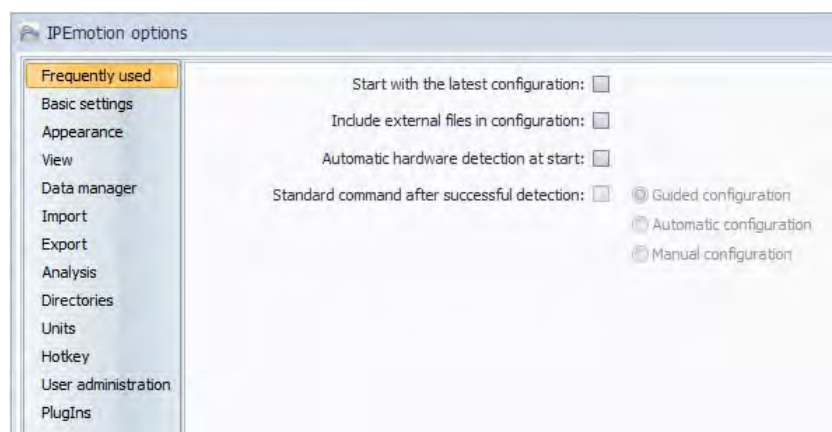

**Detect**

reads the connected devices and accepts the settings into the current configuration.

**Automatic generation**


reads the connected devices, accepts the settings into the current configuration, creates a storage group, and creates a graphic view. Devices with default settings (no channel active) are transferred into the storage group with a data rate of 1 Hz and all channels are activated.

Step 4 Configuring the acquisition

CAN-Bus system

Select in the left window (Systems) the corresponding system for listing all channels/signals of the system in the right window (Channels).

Select in the left window (Systems) the corresponding device for listing all channels/signals of the device in the right window (Channels).

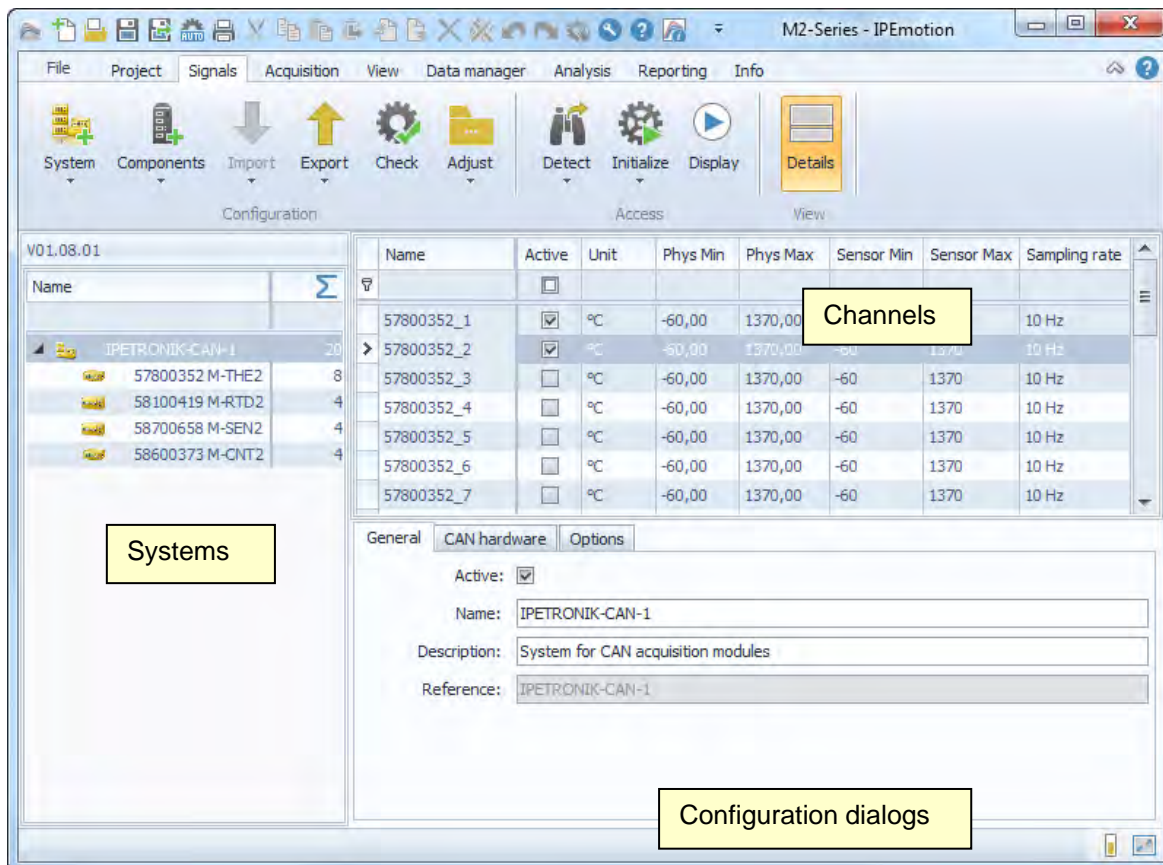

Depending on having selected a system, a device or a channel, different tabs are available in the configuration dialogs for further settings.

Settings of the scaling, as well as, the activating of channels can also be configured directly in the channel table – all other settings can only be set with the configuration dialogs.

Every channel has configuration parameters, which do exist for all channel and device types (e.g. General, Format, Display) and those, which do always differ because they are channel specific (e.g. Sensor, Filter, Adjust).

The descriptions of the channel specific dialogs are shown in this manual with the respective devices.

General	CAN hardware	Options
Active: <input checked="" type="checkbox"/>		
Name: IPETRONIK-1		
Description: System for CAN acquisition modules		
Reference:		

General

Active CAN system activated for using

Name Select any name for the system. The name can also be automatically generated with the serial number.

Description Measuring system description

Reference

General	CAN hardware	Options
Medium: Vector CAN		
CAN bus: CAN-1		
Baud rate: 500 kBd		
Device baud rate: 500 kBd		
Baud rate initialization: <input checked="" type="checkbox"/>		
29-bit identifier: <input type="checkbox"/>		

CAN hardware

Medium CAN interface , which connects the devices with the PC/Notebook.

CAN bus CAN interface bus for communicating (only if the interface has several bus inputs)

Baud rate Bus data rate of the CAN interface [kBit/s]

Device baud rate Bus data rate of the devices [kBit/s]

Baud rate initialization IPEmotion initialized the CAN interface with the set baud rate.

29-bit identifier Use of 29-bit CAN identifier (Extended ID) for activating the CAN messages.

General	CAN hardware	Options
Synchronized mode: <input checked="" type="checkbox"/>		
Automatic CAN ID placing: <input checked="" type="checkbox"/>		
Accelerated initialization: <input type="checkbox"/>		
Names out of serial numbers		

Options


Synchronized mode IPEmotion defines a device as clock generator, to which all system devices are synchronized to.

Automatic CAN ID placing IPEmotion automatically assigns the identifiers of the CAN messages to a set rule.

Accelerated initialization Only parameters, which have been changed, are reinitialized.

Names out of serial numbers Automatically generates the channel/signal name out of the serial number of the respective device and the channel number.

General settings and information about the device

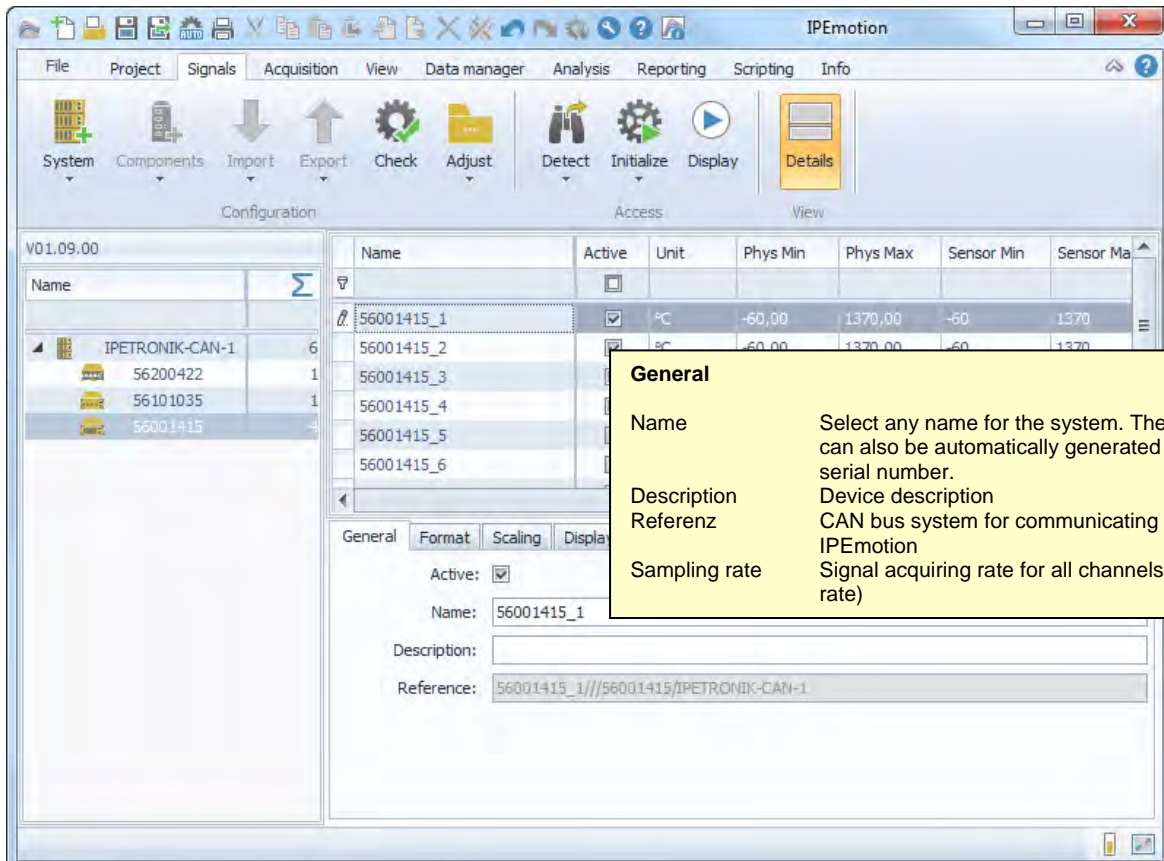

General

Name Select any name for the system. The name can also be automatically generated with the serial number.

Description Device description

Referenz CAN bus system for communicating with IPEmotion

Sampling rate Signal acquiring rate for all channels (sampling rate)


Select in the left window (Systems) the corresponding device for listing all channels/signals of the device in the right window (Channels) and showing the tabs for the configuration dialogs.

General	Extended	Information
Front number: 99999 Clock: Free Channel balance: <input type="checkbox"/>	Extended Front number The part of the serial number, which is imprinted on the device front. If the devices are manually configured (without connected hardware), enter the front number of the device for automatically creating the channel names (if <i>Names out of serial numbers</i> is active). Clock Type of data detection (Free = with internal hardware clock, synchronized = common hardware clock for all system devices) Channel balance Offset calibration of the respective measuring chain of the device channels	Information Calibration date Date of the last device calibration Hardware version Hardware version of the device Firmware version Firmware version on the device

General configuration dialog


General	Format	Scaling	Display	Thermo
Active: <input type="checkbox"/> Name: 56099999_1 Description: Analog thermocouple acquisition input Reference: 56099999	General Active Kanal zur Verwendung aktiviert. Name Select any name for the system. The name can also be automatically generated with the serial number. Description Channel or signal description Reference Serial number of the device	Format Data type Resolution and sign of the digital value (8 or 16 Bit, signed or unsigned) NoValue Value, which is shown, if the current value is invalid	Scaling see Linear signal scaling Mode Selection of voltage and current acquisition, sets the default unit V for voltage and A for current Sensor range Sensor signal range e.g. +/- 10 V, 0 ... 20 mA Physical range Unit and range of the physical size e.g. 0 ... 5 bar	Display Min / Max Defines the y-axis range of the graphical display for the <i>Fix</i> setting. Decimal places Defines the number of decimals of the alphanumeric display, as well as, the current value display in the signal tab
Data type Type: 16-Bit integer signed NoValue Value: 0080 Channel type Input: <input checked="" type="checkbox"/> Output: <input type="checkbox"/>				
General Format Scaling Display Excitation Filter Adjust Sensor mode Mode: Voltage including sensor excitation Sensor range Min: -100 Max: 100 Physical range Min: -100,000 Max: 100,000 Unit: V				
General Format Scaling Display Thermo Displaying area Min: -60,00 Max: 1370,00 Formatting Decimal places: Automatic				

Step 5 Start displaying


Click **Start displaying**  within the main navigation tab **Signals** or **View** for starting the acquisition and changing to the data displaying.


The connected devices are initialized with the current configuration. Finally, all values are shown in the **Current value** column.

If you have already created screen pages for displaying the data (e.g. y-t chart, alphanumerical display, analog pointer...), you can select any screen pages without interrupting the running acquisition.

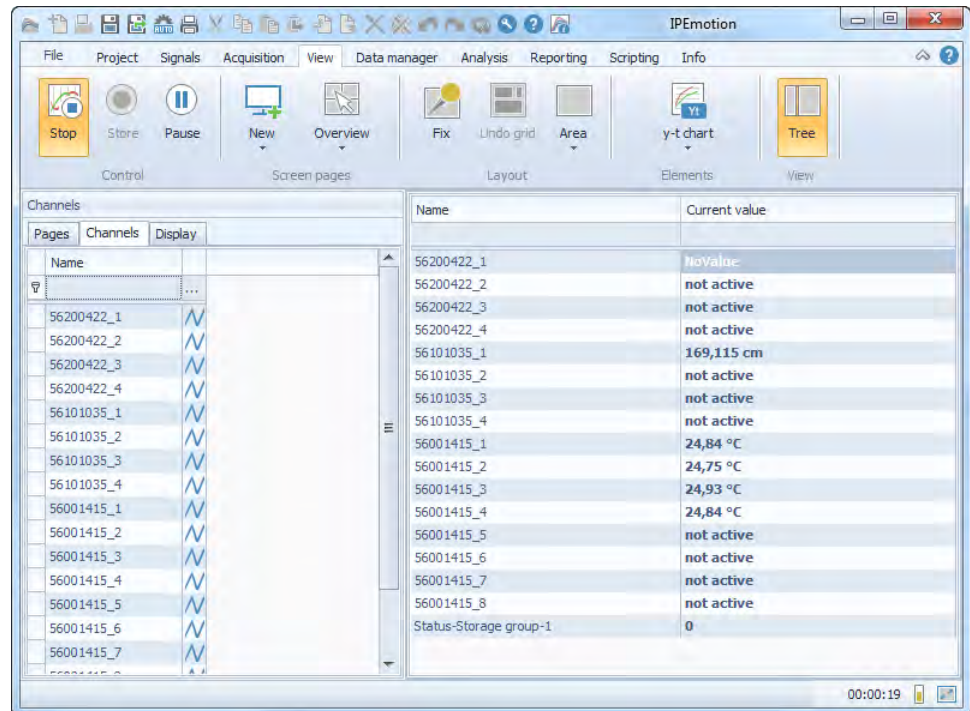

Step 6 Start storing


Click **Start storing**  within the main navigation tab **Acquisition** or **View** for storing the data on a local medium. First of all, a storage group is required, which contains at least one signal. If required, define individual trigger conditions to start data storage.

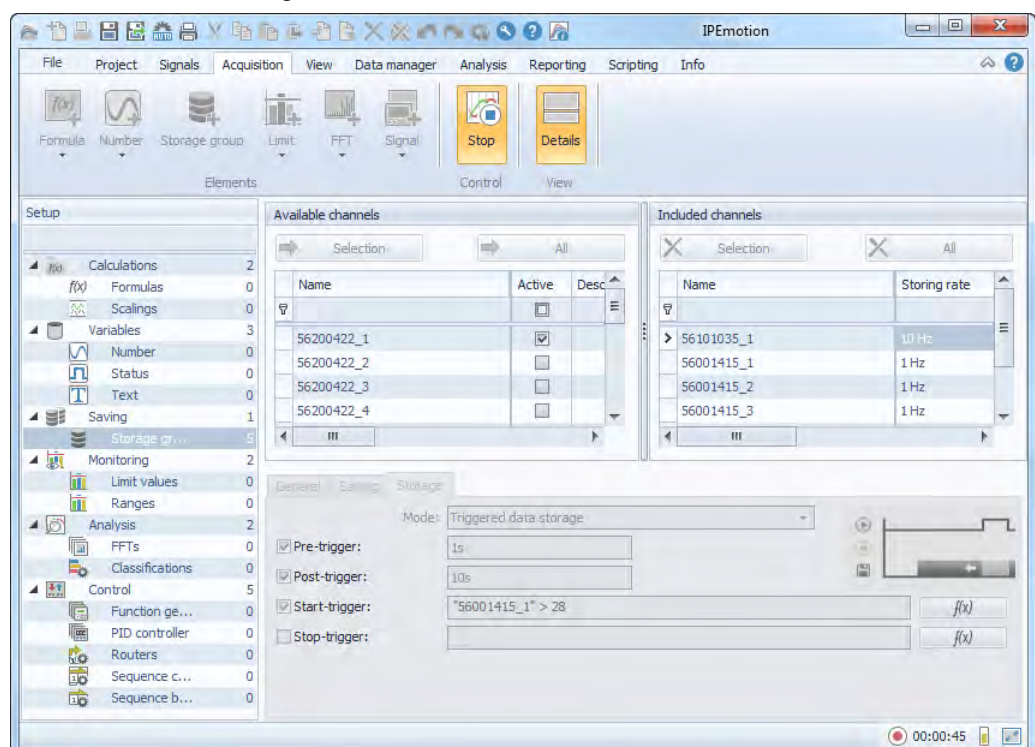

3.4 Downloading firmware (CANdownload 2)

The firmware of the IPETRONIK M devices is subject to continuous developments. You can use these developments for your M devices. Therefore, an update of the devices' processor software (Firmware) is required.

3.4.1 User interface

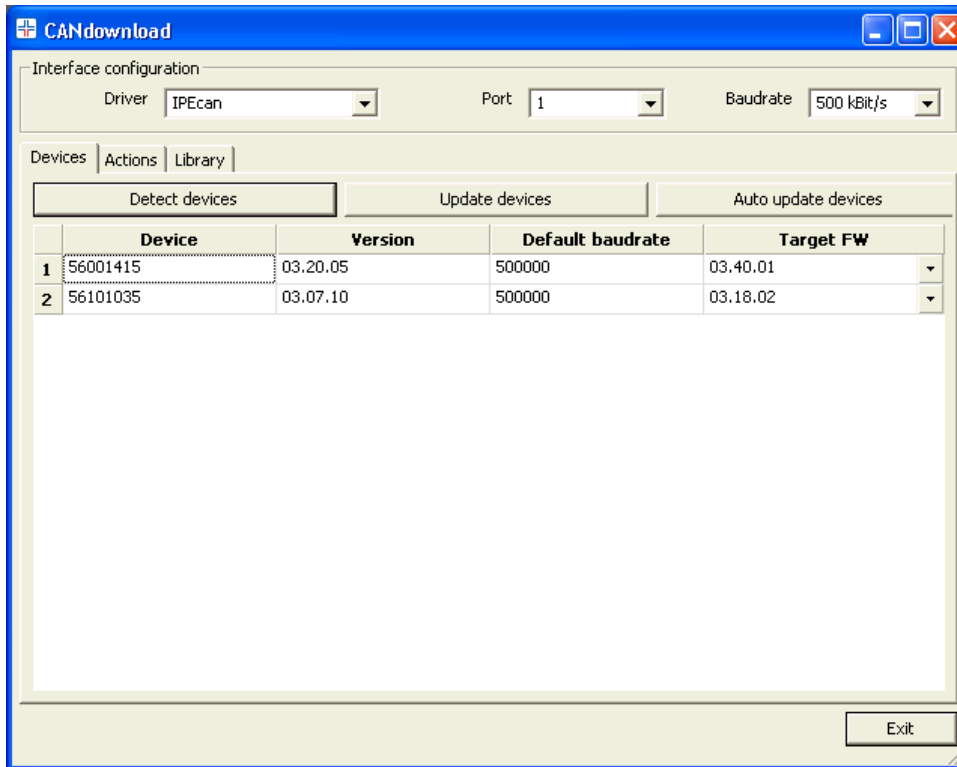

Interface configuration

Define the used *CAN driver*, the corresponding *port* (if several are available), as well as, the desired *baud rate*.

- ▶ Driver
- ▶ Port
- ▶ Baudrate

Devices

Devices – *Detect* and *update* the connected devices, as well as, measuring chains and get information about the *device*, the *version*, the *default baud rate*, and the available *firmware*. Please note that you can only upgrade firmware and not downgrade it!

- ▶ Detect devices
- ▶ Update devices
- ▶ Auto update devices

The **Update devices** function offers the ability to select the desired firmware version.

The **Auto update devices** function contains both functions and has **no** possibility to manually select the firmware.

Actions

Load the download file (*.cal) generated by IPETRONIK, which you received via e-mail from your IPETRONIK support and *download* it to a specific device. In addition, define a specific *device type* and the corresponding *serial number*. You can create and run an individual download process.

- ▶ Load
- ▶ Download



Please note that this process can only be run at connecting the device as a single device!

Entering the serial number is mandatory if the firmware contains a configuration file (Config.).

Library

Get an overview about the current CANdownload firmware versions and download the latest firmware versions from a user defined directory into the CANdownload library.

- ▶ Check for updates

To update a library, proceed as follows:

- ▶ Select the desired IPETRONIK FTP **connection string** or a user defined directory.
- ▶ Click on the **Check for updates** button. A progress bar shows the running updating process.

The current CANdownload 2 version supports the following structures for creating user defined directories:

- ▶ ftp://
- ▶ file:///
- ▶ file:////

CANdownload is based on the definition that only one directory for all update files and the fw.lst file is required. You have the ability to use a user defined directory with own released firmware versions (see chapter Creating an user defined library).



Please note the following need of using own libraries with firmware versions:

The file with the name fw.lst must be stored in the corresponding update folder. The file name may not be changed!

Firmware type	Version	Comment
+ 519 - SIM-STG		
+ 524 - SIM-LAMBDA 4		
+ 560 - M-THERMO		
+ 561 - M-SENS		
+ 562 - M-FRQ		
+ 563 - u-THERMO		
+ 566 - M-THERMO 16		
+ 567 - M-SENS 8		
+ 568 - M-SENS 8plus		
+ 569 - M-THERMO T		
+ 595 - CANpressure		

3.4.2 Creating a user defined library

CANdownload 2 allows for defining an own firmware library and creating an user defined directory with all firmware files. If the access onto the corresponding directory is realized via the normal file access, the storage of a text file in the user defined directory is mandatory! This file contains a list of the directory content and is named fw.lst.

The library file name is structured as follows:

"device type"_"download type"_"version".cdf

The current CANdownload 2 version supports the following download types:

- DLK: Download kernel
- RDLK: RAM Download kernel
- ADLK: Application Download kernel
- PIC: PIC-Firmware
- FPGA: FPGA-Firmware
- APPL: Firmware
- TBL: Table
- CFG: Config
- SPC1: Input Processor 1
- SPC2: Input Processor 2
- SPC3: Input Processor 3
- SPC4: Input Processor 4
- FDLK: FPGA-Download kernel
- PDLK: PIC-Download kernel
- CDLK: Channel Processor Download kernel
- CHN: Channel Prozessor Firmware

3.4.3 Manual configuration

To update the firmware of devices, proceed as follows:

- Connect the devices with the power supply.
- Click **Detect devices**. The appearing list contains the current firmware versions of each device. The *Target FW* column shows a required update.
- Select the latest firmware version.
- Click **Update devices** to start the updating process. This process can take some minutes.

3.4.4 Automatic configuration

To automatically update the firmware of devices, proceed as follows:

- Connect the devices with the power supply.
- Click **Auto update devices** to start the updating process. All connected devices are automatically detected and all firmware versions, which do not correspond to the latest one, are updated. This process can take some minutes.

Please note



Due to continuous developments of the hardware and software components, incompatibilities can occur. Please contact our support department at +49 (0) 7221/ 9922-333 or mail to support@ipetronik.com.

Make sure that the voltage supply will not be interrupted during the download process.



Do not run further programs under Windows during the download process.


If several devices in one system are updated, they must be set to one baud rate (see "Configure HW..."). In case of doubt, the setting of the respective devices should be checked because a break of the download process could cause a loss of being able to address all devices.



After (every) successful firmware download, the device must be restarted (Power off/ Power on) for guaranteeing a correct operating. This is especially required when transferring several files to one device.

3.5 Resetting devices to default values (M-MOD-DEF)


IPETRONIK offers the ability to simultaneously reset single or several devices to the respective default values by using the default plugs (M-MOD-DEF-100, M-MOD-DEF-200). This is recommended if devices are set to different and unknown baud rates for the data transfer. Or if a single device, which has not been configured correctly, must be reset.

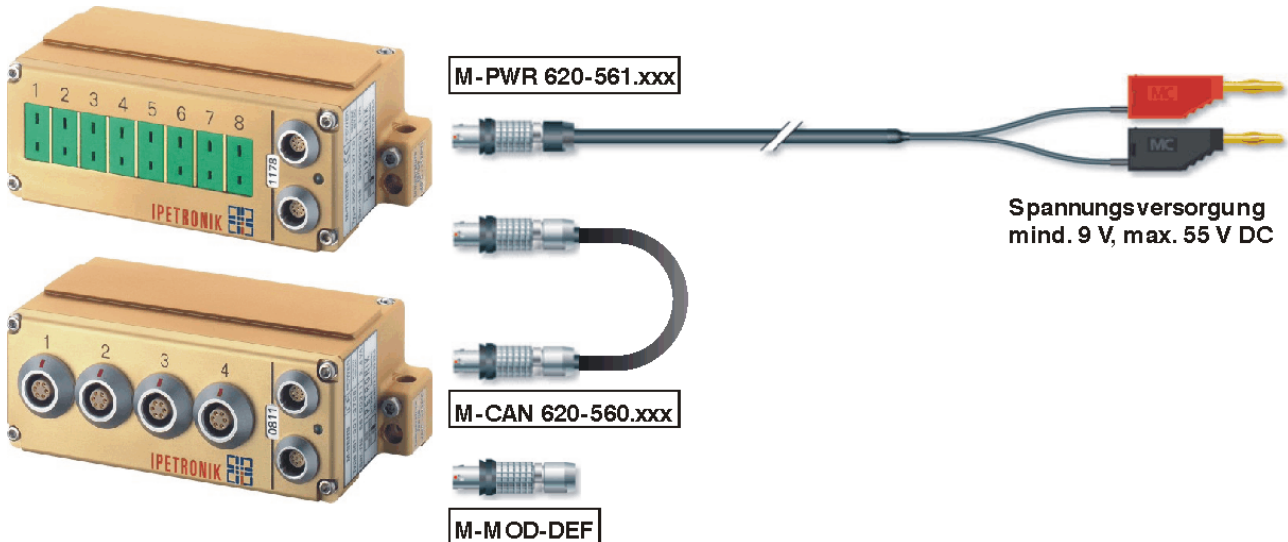

Preparation

- ▶ Connect the devices and the M-MOD-DEF plug as shown above.
- ▶ Switch-on the power supply.

How to proceed (M-MOD-DEF-100)

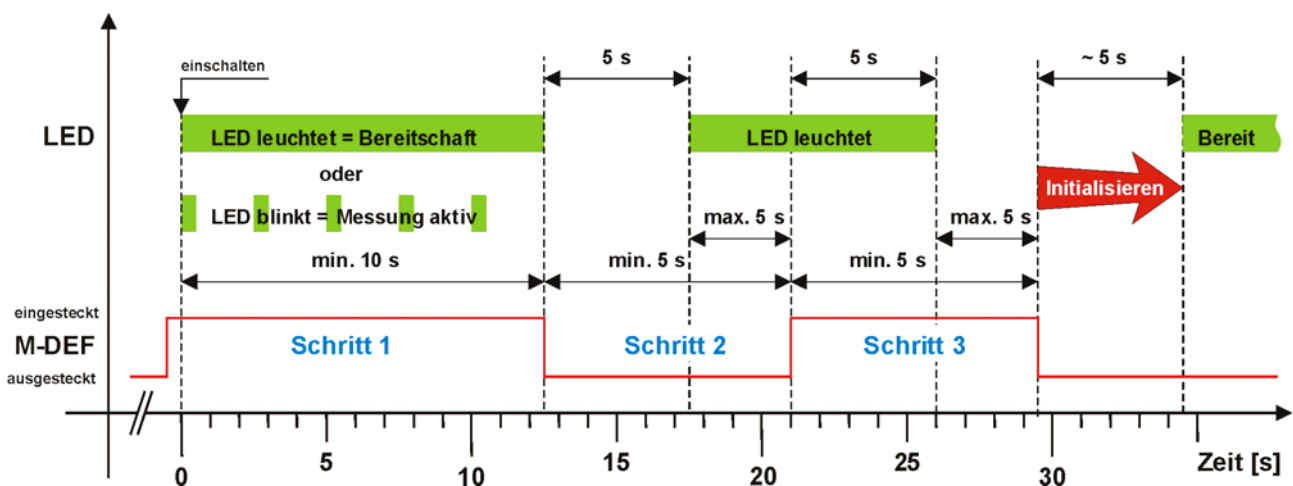

The proceeding is divided into three steps.



- ▶ The default plug must be connected during booting.
- ▶ Please note the chronology for a successful reinitialization.

Brief instruction for proceeding:

Valid for firmware with release date > 12/2006

1. Connect M-MOD-DEF-100 plug
2. Switch-on voltage supply → LED lights up
3. Wait 10 s, disconnect plug → LED off
4. As soon as the LED relights, connect M-DEF again
5. As soon as the LED turns off, disconnect M-DEF again
6. Running initialization, LED lights up after approx. 5 s
7. Default initialization completed

If all steps were successful, the default initialization starts.

After the successful default initialization (approx. 5 s), the device(s) is in the standby mode because no channels are active (LED is permanently on).

How to proceed (M-MOD-DEF-200)

1. Connect M-MOD-DEF-200 plug
2. Switch-on voltage supply
3. Device LED flashes, Plug LED flashes
4. Device LED is permanently on after a while, Plug LED flashes
5. The initialization is complete as soon as the plug LED turns off
6. Switch-off voltage supply and disconnect M-MOD-DEF-200

Socket LED




4 M-THERMO2, M-THERMO 8, M-THERMO 16

4.1 Temperature acquisition with thermocouples

M-THERMO offers temperature acquisitions (range $-60\text{ }^{\circ}\text{C}$ to $+1370\text{ }^{\circ}\text{C}$ / $-76\text{ }^{\circ}\text{F}$ to $2498\text{ }^{\circ}\text{F}$) with thermocouples of K type as 8 channel, as well as, 16 channel version with miniature thermo sockets. PT resistors at the aluminum tub of the sockets (M-THERMO 8/16) respective at each input connector (M-THERMO2) calculate the thermo-electric voltage and provide the cold junction compensation. For providing exact results within the entire acquisition range, the non-linear characteristic of the thermocouple is adjusted by an internal linearization table. An optional impressed current through the sensor allows a sensor break detection, which is activated within the software.

Due to the different thermo-electric voltages and the non-linear characteristic, a thermocouple with an input of the K type is not recommended for other thermocouples..

M-THERMO K16

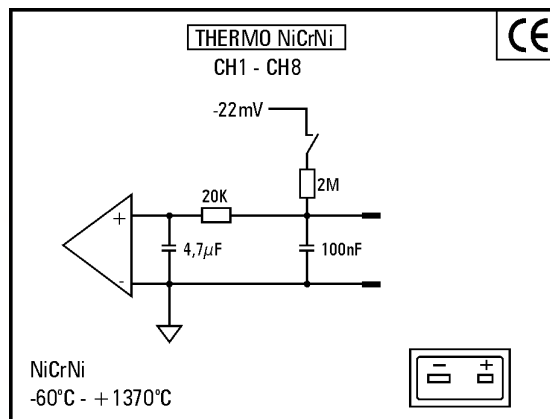


M-THERMO K8



M-THERMO2 K8



4.2 Input cable 600-888.xxx

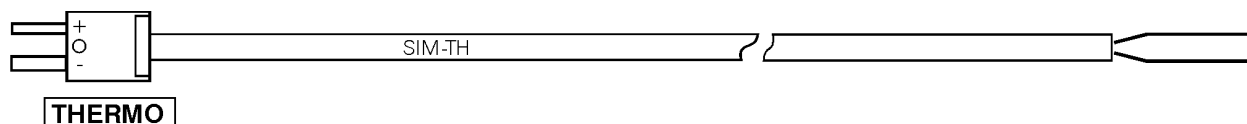

Anschlußbelegung / Connection

SUB-MIN-Stecker, 2-pol. (grün)
SUB-MIN-male, 2-pol. (green)


Pin-Nr. Pin-No	Bezeichnung Designation	Litze-Nr. / Farbe Wire-No / Colour
+	NiCr	grün / green
-	Ni	weiß / white



All input cables are also available in different lengths, as well as, with further plug configurations.

4.3 Specific input settings

The break detection and the averaging are activated within the configuration dialog **Thermo**.

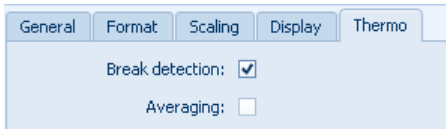

4.3.1 Break detection




A low current flows through the thermocouple at activated sensor break detection, which has no influence on the measuring result. If this flow is interrupted (sensor break), the result is – Fullscale. A distinction between – Fullscale by sensor break and real – Fullscale value is not possible. But the value – Fullscale is rarely possible. The break detection can therefore be used for identifying errors.

4.3.2 Averaging

In order to reduce the noise level in a signal, M-THERMO offers the ability to activate the averaging. The average value of the signals is calculated online over a period of the last 4 CAN sampling periods.

With a sampling rate of 10 Hz, the floating average is calculated online out of the 4 previous CAN outputs and sent with the defined updating rate (here 10 Hz).

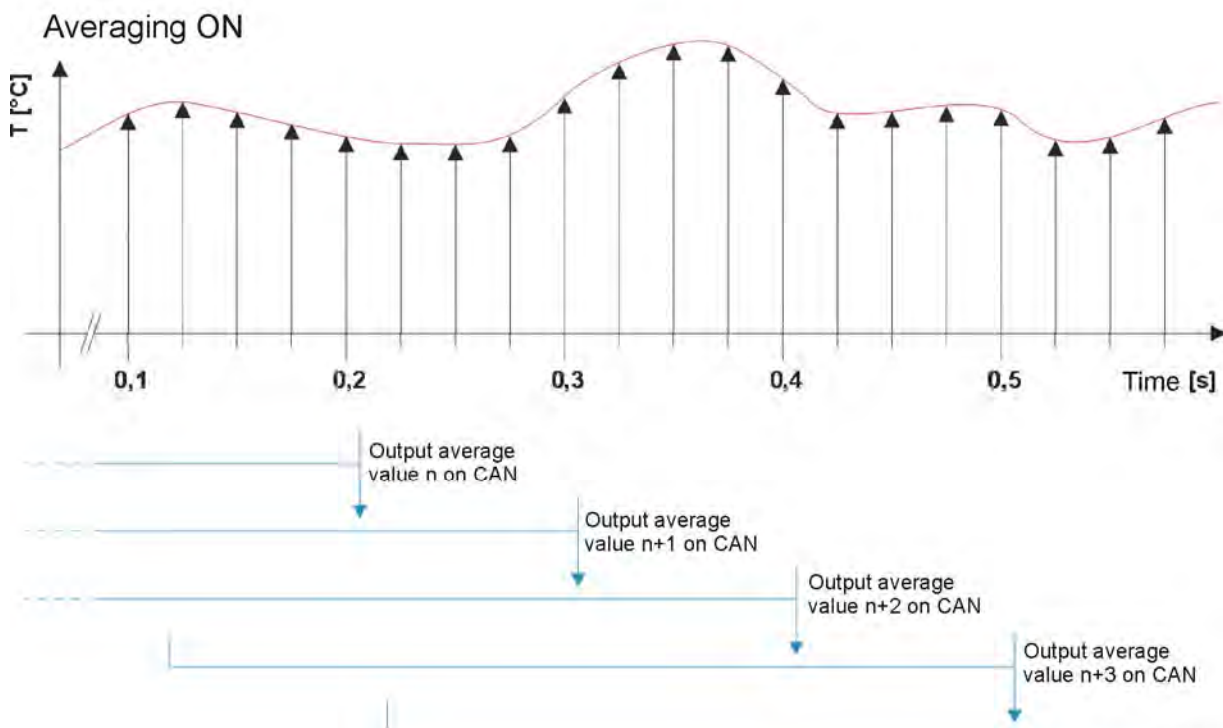

4.3.3 Status LED at the input

Only 16 channel thermocouples and the M-THERMO2 have a status LED at every input.

The respective LED indicates the following two states:

1. Identification of the respective channel during the configuration. The LED flashes if the respective channel or several channels are selected in the configuration software.
2. Indication of a sensor break during measuring. The LED is permanently on when interrupting the sensor current.



4.4 Technical data (M-THERMO 8, M-THERMO 16)

		M-THERMO 8	M-THERMO 16
General		HW ≥ V 4.80, FW ≥ V 3.20	
Voltage supply	V DC	12, 24, 42, power supply, switch-off at voltage < 6 V	
Power consumption, typical	W	1.1	1.2
Operating temperature range Permanent/ 1 hour Notice	°C	-40 ... +120/ +120 ... +125 An immediate safety shutdown runs at T > 125 °C, which is reset at T < 120 °C..	
Storage temperature range	°C	-55 ... +150	
Relative humidity	%	5 ... 95	
Enclosure		golden anodized aluminum, IP 67	
Dimensions (W * H * D/D) (without/with sockets)	mm	120 * 41 * 55/58	204 * 41 * 55/58
Weight	g	320	630
Thermocouple input		electrically isolated	
Overvoltage protection	V	±50	
Galvanic isolation Input ↔ Device supply Input ↔ Input	V V	±100, temporary (1 ms) ±200 ±100, temporary (1 ms) ±200	
Range type K (Ni10Cr/NiAl)	°C	-60 to 1370	
Resolution	°C	≤ 0.174 (≥ 13 Bit)	
Characteristic linearization		look-up table, ≥ 13 Bit	
Cold junction compensation (Reference temperature over RTD)	Pt100	2	4
Accuracy at 25 °C ambient temperature and measured temperature of: -60 °C ... 1000 °C / 1000 °C ... 1370 °C	%	±0.035 % / ±0.035 % + 3 K	
Drift at ambient temperature: -40 °C ... +85 °C/+85 °C ... +120 °C	ppm/K	±20 / ±30	
Input resistance, approx	MΩ MΩ	1 (sensor break detection active) 10 (sensor break detection not active)	
Align of the AD converter		before acquiring a value	
Sensor break detection		can be activated with the software	
Status LED at the input		not available	1. Identification of the respective channel 2. Sensor break displaying in acquisition mode
Hardware filter	Hz	1.0, filter type R-C-low pass 1 st order	
Channel sample rates	Hz	1/ 2/ 5/ 10/ 20	
Aggregate sample rate	Hz	max. 160	max. 320
CAN output		2.0 B, electrically isolated	
Programmable data rate	Bit/s	max. 1 MBit/s acc. to ISO11898-2	
Data in the CAN message Resolution / Format Sign	Bit	8 / Byte or 16 / Word signed, unsigned	
Configuration interface		CAN	


4.5 Technical data (M-THERMO2)

General		
Voltage supply	V DC	6 to 36
Power consumption, typical	W	1.1
Operating temperature range Permanent/ 1 hour Notice	°C	-40 ... +120/ +120 ... +125 An immediate safety shutdown runs at T > 125 °C, which is reset at T < 120 °C..
Storage temperature range	°C	-55 ... +150
Relative humidity	%	5 ... 95
Enclosure		golden anodized aluminum, IP 67
Dimensions (W * H * D)	mm	106 * 30 * 50
Weight	g	250
Thermocouple input		electrically isolated
Galvanic isolation Input ↔ Device supply Input ↔ CAN Input ↔ Input	V V V	nominal voltage ±100 / pulse voltage ±500 nominal voltage ±100 / pulse voltage ±500 nominal voltage ±100 / pulse voltage ±500
Range type K (Ni10Cr/NiAl)	°C	-60 to 1370
Resolution	°C	≤ 0.087 (≥ 14 Bit)
Characteristic linearization		look-up table, 15 Bit
Cold junction compensation (Reference temperature over RTD)		each input with Pt100
Accuracy at 25 °C ambient temperature	%	±0.035 % of total range
Drift at ambient temperature: -40 °C ... +125 °C	ppm/K	±40
Input resistance, approx	MΩ MΩ	2.6 (sensor break detection active) 4.1 (sensor break detection not active)
Align of the AD converter		before acquiring a value
Sensor break detection		can be activated with the software
Status LED at the input		1. Identification of the respective channel 2. Sensor break displaying in acquisition mode
Hardware filter	Hz	1.0, filter type R-C-low pass 1 st order
Channel sample rates	1/min Hz	1/ 2/ 5/ 10 1/ 2/ 5/ 10/ 20/ 50/ 100
Aggregate sample rate	Hz	max. 800
CAN output		2.0 B, electrically isolated
Programmable data rate	Bit/s	max. 1 MBit/s acc. to ISO11898-2
Data in the CAN message Resolution / Format Sign	Bit	8 / Byte or 16 / Word signed, unsigned
Configuration interface		CAN


5 μ-THERMO

5.1 Temperature acquisition with thermocouples

μ-THERMO offers temperature acquisitions (range $-60\text{ }^{\circ}\text{C}$ to $+1370\text{ }^{\circ}\text{C}$ / $-76\text{ }^{\circ}\text{F}$ to $2498\text{ }^{\circ}\text{F}$) with thermocouples of K type as 8 channel version with a 16-pin Lemo socket. 2 PT resistors in an isothermal block calculate the thermo-electric voltage and provide the cold junction compensation. For providing exact results within the entire acquisition range, the non-linear characteristic of the thermocouple is adjusted by an internal linearization table. An optional impressed current through the sensor allows a sensor break detection, which is activated within the software.

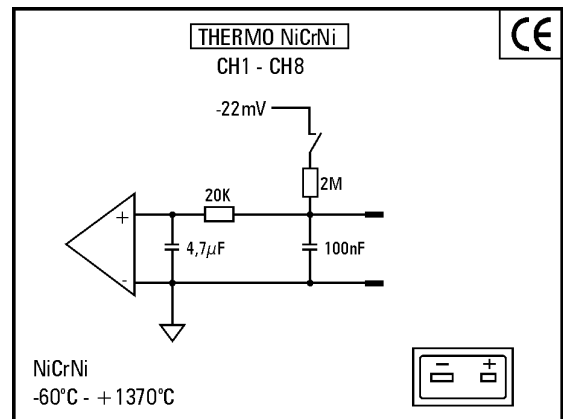

5.2 Input cable 625-506.xxx

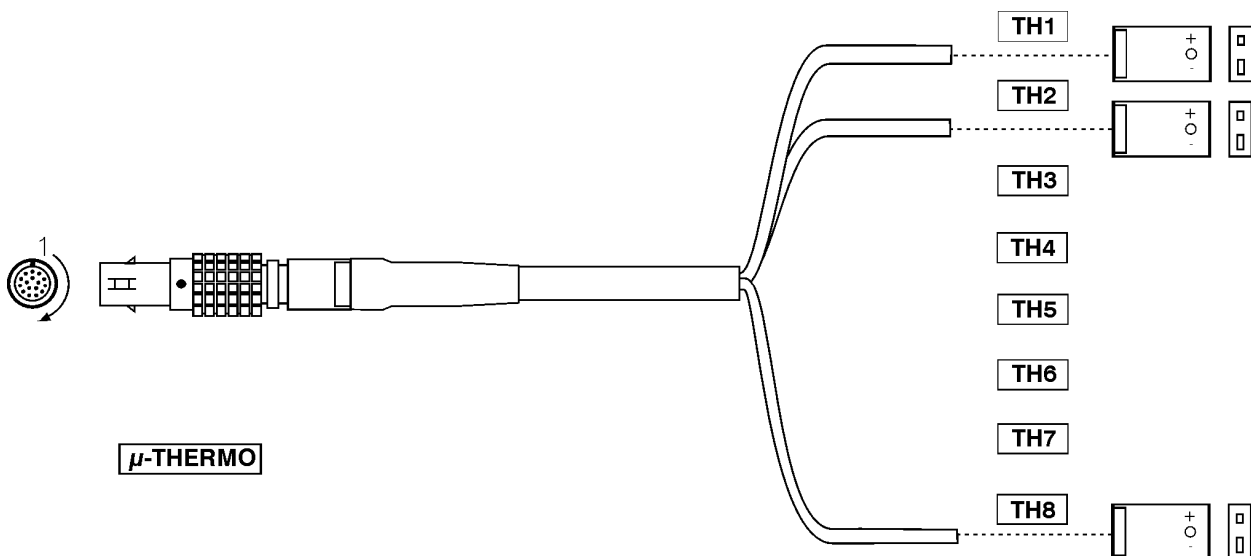

Anschlußbelegung / Connection												
Lemo-Stecker, 16-pol. NiCrNi (schwarz)					8x SUB-MIN-Kupplung, 2-pol. (grün)							
Lemo male, 16-pol. NiCrNi (black)					8x SUB-MIN-coupling, 2-pol. (green)							
Pin-Nr. Pin-No	Bezeichnung Designation				Litze-Nr. / Farbe Wire-No / Colour							
THERMO-IN					TH1	TH2	TH3	TH4	TH5	TH6	TH7	TH8
1	TH-IN1- (Ni)				gn -							
2	TH-IN1+ (NiCr)				ws+							
3	TH-IN2- (Ni)					gn -						
4	TH-IN2+ (NiCr)					ws+						
5	TH-IN3- (Ni)						gn -					
6	TH-IN3+ (NiCr)						ws+					
7	TH-IN4- (Ni)							gn -				
8	TH-IN4+ (NiCr)							ws+				
9	TH-IN5- (Ni)								gn -			
10	TH-IN5+ (NiCr)								ws+			
11	TH-IN6- (Ni)									gn -		
12	TH-IN6+ (NiCr)									ws+		
13	TH-IN7- (Ni)										gn -	
14	TH-IN7+ (NiCr)										ws+	
15	TH-IN8- (Ni)											gn -
16	TH-IN8+ (NiCr)											ws+



All input cables are also available in different lengths, as well as, with further plug configurations.

5.3 Specific input settings

The break detection and the averaging are activated within the configuration dialog **Thermo**.

General	Format	Scaling	Display	Thermo
Break detection: <input checked="" type="checkbox"/>				
Averaging: <input type="checkbox"/>				

5.3.1 Break detection



A low current flows through the thermocouple at activated sensor break detection, which has no influence on the measuring result. If this flow is interrupted (sensor break), the result is – Fullscale. A distinction between –Fullscale by sensor break and real –Fullscale value is not possible. But the value –Fullscale is rarely possible. The break detection can therefore be used for identifying errors.

5.3.2 Averaging

In order to reduce the noise level in a signal, M-THERMO offers the ability to activate the averaging. The average value of the signals is calculated online over a period of the last 4 CAN sampling periods.

With a sampling rate of 10 Hz, the floating average is calculated online out of the 4 previous CAN outputs and sent with the defined updating rate (here 10 Hz).

Please also refer to Averaging at [4.3.2 M-THERMO](#)

5.4 Technical data

General		Valid for HW version ≥ 5.20 and FW-Version ≥ 3.20
Voltage supply	V DC	12, 24, 42, power supply, switch-off at voltage < 6 V
Power consumption, typical	W	1.1
Operating temperature range Permanent/ 1 hour Notice	°C	-40 ... +120/ +120 ... +125 An immediate safety shutdown runs at T > 125 °C, which is reset at T < 120 °C..
Storage temperature range	°C	-55 ... +150
Relative humidity	%	5 ... 95
Enclosure		golden anodized aluminum, IP 67
Dimensions (L * H * W)	mm	118 * 46 * 32
Weight	g	218
Thermocouple input		electrically isolated
Overvoltage protection	V	±50
Galvanic isolation Input ↔ Device supply	V	±100, temporary (1 ms) ±200
Input ↔ Input	V	±100, temporary (1 ms) ±200
Range type K (Ni10Cr/NiAl)	°C	-60 to 1370
Resolution	°C	≤ 0.174 (≥ 13 Bit)
Characteristic linearization		look-up table, ≥ 13 Bit
Cold junction compensation (Reference temperature over RTD)	2	Pt100
Accuracy at 25 °C ambient temperature and measured temperature of: -60 °C ... 1000 °C / 1000 °C ... 1370 °C	%	±0.035 % / ±0.035 % + 3 K
Drift at ambient temperature: -40 °C ... +85 °C/+85 °C ... +120 °C	ppm/K	±20 / ±30
Input resistance, approx	MΩ MΩ	1 (sensor break detection active) 10 (sensor break detection not active)
Align of the AD converter		before acquiring a value
Sensor break detection		can be activated with the software
Hardware filter	Hz	1.0, filter type R-C-low pass 1 st order
Channel sample rates	Hz	1/ 2/ 5/ 10/ 20
Aggregate sample rate	Hz	max. 160
CAN output		2.0 B, electrically isolated
Programmable data rate	Bit/s	max. 1 MBit/s acc. to ISO11898-2
Data in the CAN message Resolution / Format Sign	Bit	8 / Byte or 16 / Word signed, unsigned
Configuration interface		CAN

6 M-RTD2

6.1 Temperature acquisition with RTDs (Pt100)

M-RTD2 offers temperature acquisitions (range -50 °C to +450 °C / -58 °F to 842 °F) with RTD sensors (Pt100 resistor). The 4-wire sensor connection ensures good accuracy even for long distance sensor cables.



6.2 Input cable 670-937.xxx



Anschlußbelegung / Connection

Lemo-Stecker 0S, 4-pol. (schwarz)
Lemo-male 0S, 4-pol. (black)

Pin-Nr. Pin-No	Bezeichnung Designation	Litze-Nr. / Farbe Wire-No / Colour
1 (P)	PT IN +	1 white
2 (P)	I OUT+	2 brown
3 (S)	PT IN -	3 red
4 (S)	I OUT-	4 black
Chassis	Shield	S (Shield, thick) blue



All input cables are also available in different lengths, as well as, with further plug configurations.

6.3 Specific input settings

6.3.1 Scaling

The settings for the sensor range are fixed for Pt100 RTDs. Physical range default settings are equal to the sensor range. The user can modify the physical range for individual scaling.

General	Scaling	Display	Thermo	Filter	Adjustment
<div>Sensor mode</div> <div> <div>Mode: PT100</div> <div>Scaling calculator</div> </div>					
<div>Sensor range</div> <div> <div>Min: -50</div> <div>Max: 450</div> <div>Unit: °C</div> </div>					
<div>Physical range</div> <div> <div>Min: -50,000</div> <div>Max: 450,000</div> <div>Unit: °C</div> </div>					

6.3.2 Averaging

Enter the **Thermo** tab to activate the moving average function.

The sensor break detection is always activated.

General	Scaling	Display	Thermo	Filter	Adjustment
<div>Averaging: <input checked="" type="checkbox"/></div> <div>Break detection: <input checked="" type="checkbox"/></div>					



The monitoring of the constant current through the RTD is used to detect a sensor break. A distinction between –Fullscale by sensor break and real –Fullscale value is supported.

6.4 Technical data



General		
Voltage supply	V DC	9 to 36, switch-off at voltage < 6 V
Power consumption, typical	W	2.5
Operating temperature range Permanent/ 1 hour Notice	°C	-40 ... +120/ +120 ... +125 An immediate safety shutdown runs at T > 125 °C, which is reset at T < 120 °C..
Storage temperature range	°C	-40 ... +150
Relative humidity	%	5 ... 95
Enclosure		golden anodized aluminum, IP 67
Dimensions (W * H * D)	mm	106 * 43 * 60
Weight	g	400
RTD input		
electrically isolated		
Galvanic isolation		
Input ↔ Device supply	V	±100, temporary (1 ms) ±200
Input ↔ Excitation	V	±100, temporary (1 ms) ±200
Input ↔ CAN	V	±100, temporary (1 ms) ±200
Input ↔ Input	V	±100, temporary (1 ms) ±200
Range Pt100		
	°C	-50 to 450
AD converter resolution (ADC SAR)	Bit	16
Accuracy at ambient temperature		
Ta = 25 °C	K	±0.10 K (0.02 % of total range)
Ta = -40 °C to 85 °C	K	±0.60 K (0.12 % of total range)
Ta = -40 °C to 125 °C	K	±1.25 K (0.25 % of total range)
Hardware filter	Hz	150 Hz, filter typ Butterworth 8-pole
Channel sample rates	1/min Hz	1/ 2/ 5/ 10 1/ 2/ 5/ 10/ 20 / 50/ 100
Aggregate sample rate	Hz	max. 400
CAN output		
2.0 B, electrically isolated		
Programmable data rate	Bit/s	max. 1 MBit/s acc. to ISO11898-2
Data in the CAN message		
Resolution / Format	Bit	8 / Byte or 16 / Word
Sign		signed, unsigned
Configuration interface		CAN

7 M-SENS, M-SENS2, M-SENS 8/8plus

7.1 Voltage/Current acquisition with sensor excitation

The M-SENS is an universal measuring device for acquiring voltages, currents, and sensor signals of active sensors. It provides 4 or 8 analog inputs and allows the setting of different voltage and current acquisition ranges, as well as, different channel sampling rates.

The channels and the separately adjustable sensor supply voltages are electrically isolated to each other, to the other channels, to the supply voltage, and to the CAN bus.

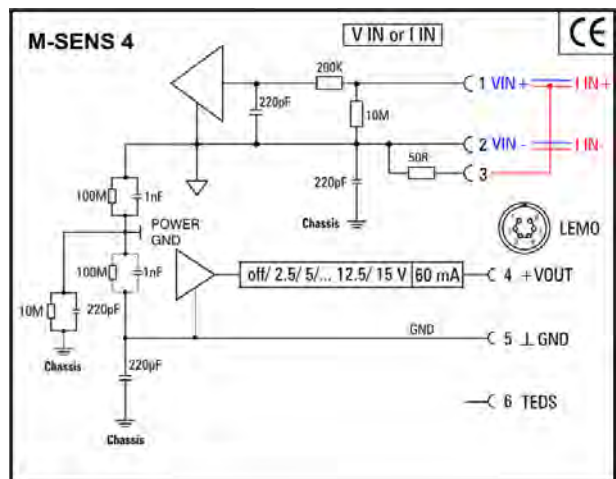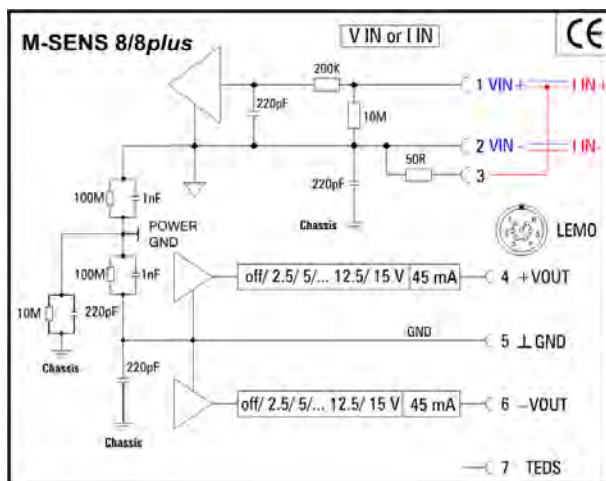

The sockets for the inputs are available in Lemo. Other sockets and ODU versions (Fips) on request.

7.2 Input cable 670-xxx.xxx

7.2.1 Input cable 670-807.xxx (M-SENS 4, SIM-SENS)





Anschlußbelegung / Connection		
Lemo-Stecker 1B, 6-pol. (schwarz) Lemo-male 1B, 6-pol. (black)		
Pin-Nr. Pin-Nº	Bezeichnung Designation	Litze-Nr. / Farbe Wire-Nº / Colour
1	VIN +	1 white
2	Shield	2 brown
3	IIN +	3 red
4	+ VOUT	4 black
5	⊥ GND	5 green
6	- VOUT	6 yellow
		S (Shield, thick) blue



Only M-SENS 8 and M-SENS 8plus provide a negative sensor supply via pin 6. M-SENS reserves this pin for TEDS.

7.2.2 Input cable 670-810.xxx (M-SENS 8 / 8plus)

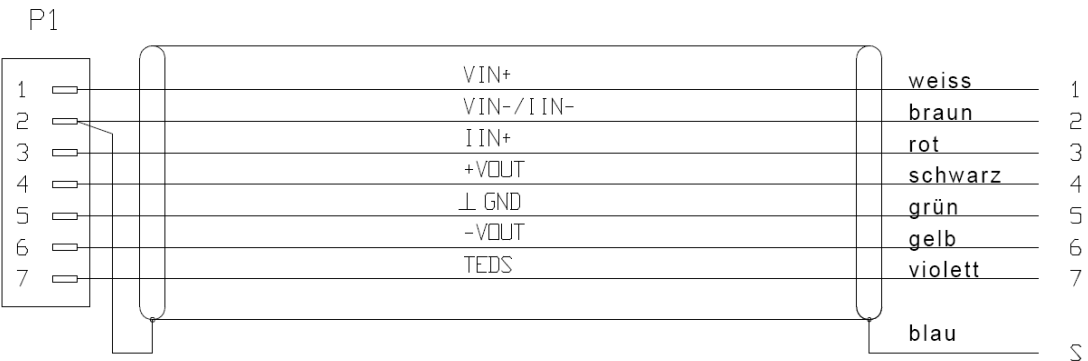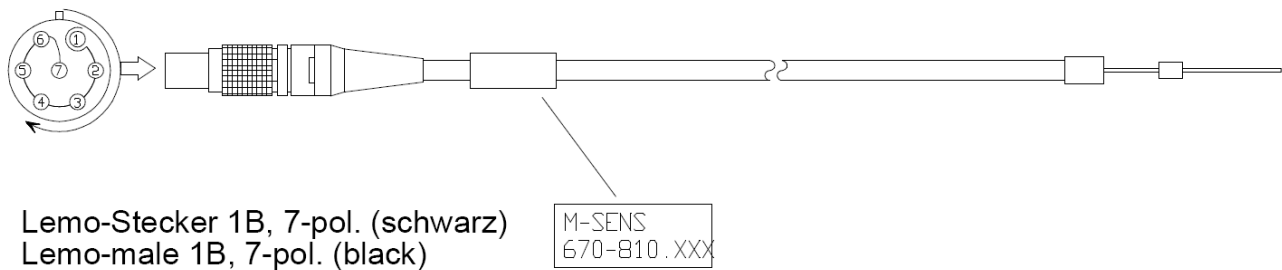



All input cables are also available in different lengths, as well as, with further plug configurations.

7.3 Input / Principle details


7.3.1 Filter in the measurement engineering - Why do we use filters?



Filters of analog measuring amplifiers are used for avoiding interrupting frequencies (frequency spectra, which do not contribute to the signal and/or which cannot be processed by the system). A low pass filter, which reduces the amplitudes of the frequencies above a specific cut-off frequency, is usually used for avoiding negative effects to the useful signal. The threshold in the range of the cut-off frequency (the barrier between the useful and the unrequested signal) is continuous.

Depending on the measuring task, the following filter properties are to be respected:

- Useful signals below the cut-off frequency are also damped. (A damping of 3 dB at the cut-off frequency means a reduction of the initial signal of 30 %.)
- Filters always cause a time shifting (phase shifting) between the initial signal and the filtered one. The value of the phase shifting depends on the filter type (e.g. Bessel, Butterworth, Tschebyscheff) and the filter order (pole number).

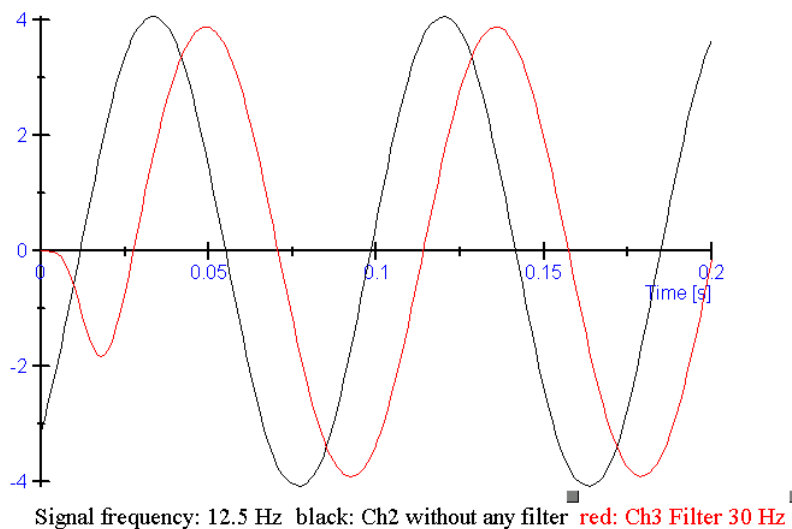

The image above shows the result of two inputs with the same input signal of 4 V amplitude and 12.5 Hz frequency.

Channel 2	black	without filter
Channel 3	red	with 30 Hz hardware filter (Bessel type)

Channel 3 clearly shows the damping, the phase shifting, as well as, the start oscillation of the filter.

7.3.2 Filter in the measurement engineering - How do we use filters?

Modern systems offer qualified hardware filters and, if applicable, additional software filters (Digital Signal Processor DSP).

Although today's microprocessors provide a high processing power, the use of hardware filters is still essential. Especially when users cannot exclude that (periodic) signals can pass the AD converter and software filter, which cannot process the signals. Every sampling system follows Shannon's sampling theorem whereby one must at least sample with twice the signal frequency. Otherwise, aliasing effects can occur, whereas the acquired frequency is considerably lower than the actual signal (see image below).

But this theoretic view is not sufficient for practical applications because the systems (compared to lab devices) do not have FFT analyzers (Fast Fourier Transformation) for calculating the initial frequency. The hardware filter frequency of IPETRONIK devices with voltage inputs (VIN, SENS) is approx. 1/10 of the maximum sampling rate e.g. 100 Hz at 1 kHz max. sampling rate.

Why do we additionally filter with DSP?

The hardware filter at the input excludes a distortion by frequency spectra above the system limit with the maximum sampling rate. Depending on the application, it can be required to lower the cut-off frequency.


Example:

M-SENS devices provide a switchable hardware filter with 150 Hz cut-off frequency. If the cut-off frequency is e.g. 50 Hz, interrupting frequency spectra (of devices with additional software filter) in the range between 50 Hz and the hardware filter frequency can be filtered with DSP. The filter frequency can be configured in defined steps up to the hardware filter frequency.

Aliasing effects in spite of hardware and software filter?



Despite sophisticated measurement engineering, errors can occur due to wrong settings. If, for example, a 100 Hz signal is acquired with a sampling rate of 100 Hz (also the output rate to the CAN bus). The system can independently acquire the correct signal, but the result is wrong because the sampling rate was set too low. This is especially valid for devices with DSP. The DSP always acquires the signal with a higher clock rate than the maximum adjustable sampling rate. If the signal is sent to the CAN bus with a lower sampling / output rate, the result does not reflect the initial signal.

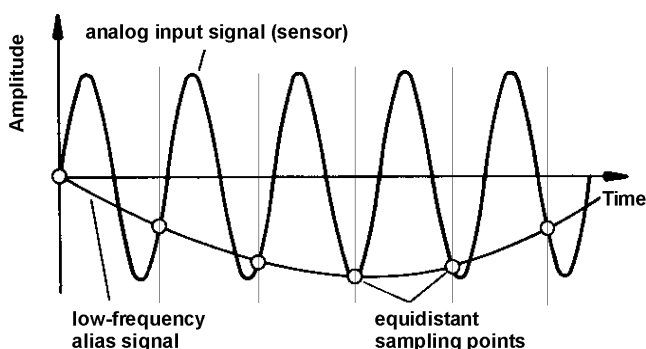

7.4 Extended input settings

7.4.1 Scaling, measuring range

General | Format | **Scaling** | Display | Excitation | Filter | Adjust

Sensor mode
Mode: Voltage including sensor excitation

Sensor range
Min: -100

Physical range
Min: -100,000

Scaling calculator

10
5
2
1
0,5
0,2
0,1

Scaling

1. Select the voltage or current acquisition.
2. Select a sensor range. Depending on the device/channel, different ranges are available.
3. Define a physical range and the unit with the scaling calculator – if required.

7.4.2 Sensor, initial excitation

General | Format | Scaling | Display | **Excitation** | Filter | Adjust

Sensor excitation: 0 V

0 V
2,5 V
5 V
7,5 V
8 V
10 V
12,5 V

Sensor

- If the sensor requires a sensor excitation, select the initial excitation from the list. Depending on the device/channel, different voltages are available.
- The supply is electrically isolated to the input and channels nearby, as well as, to the device supply.

7.4.3 Filter, averaging

General | Format | Scaling | Display | Excitation | **Filter** | Adjust

Hardware filter
Hardware filter: 150 Hz


Averaging
Averaging: ☐

Software filter
Active: ☐
Type: Bessel
Frequency: 6 /min

Filter

1. Activate the hardware filter for avoiding aliasing effects. This is always recommended for measuring with periodic signals.
2. Activate the averaging (floating average) for smoothing unrequested signal interrupts or noise components.
3. Activate the software filter for additionally filtering the signal. Select the filter type (Bessel, Butterworth, Tschebychev) and the cut-off frequency (0.1 Hz...495.0 Hz, depending on the sampling rate).

7.4.4 Offset adjust

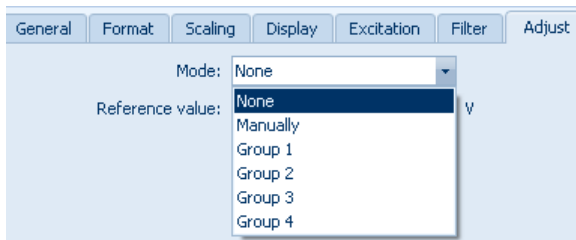

The offset adjustment is supported by the respective device from the following firmware version:

M-SENS, M-SENS 8 >= V3.12.07

M-SENS 8plus >= V3.12.08

The calibration function with a broadcast command (IPEhotkey) also allows the offset adjustment during a running acquisition to a user defined target value (reference value). The following actions are permitted:

- ▶ **None** no offset calibration
- ▶ **Manually** only channels with this status are calibrated with the **Manual calibration** command
- ▶ **Group X** channels, which are assigned to a specific group (1...4), are calibrated with the desktop icon IPEhotkey and the **Calibration Group** command.
The channel assignment to one group can also be effected for all devices (e.g. SENS type, STG, CANpressure mixed in one group). A signal-based calibration is therefore possible.

7.4.5 Status-LED am Messeingang

Only M-SENS 8 and M-SENS 8plus devices have a status LED at every input. The respective LED indicates the following two states:

1. Identification of the respective channel during the configuration. The LED flashes if the respective channel or several channels are selected in the configuration software.
2. Indication of an overcurrent during measuring. The LED is permanently on if the maximum current load of the respective sensor excitation is exceeded.



7.5 Technical data

7.5.1 M-SENS, M-SENS2

		M-SENS	M-SENS2
General		HW ≥ V 3.20	
Voltage supply	V DC	9 to 36, switch-off at voltage < 6 V	
Power consumption, typical / maximum	W	3.0 / 9.0	3.0 / 9.0
Operating temperature range Permanent/ 1 hour Notice	°C	-40 ... +120/ +120 ... +125 An immediate safety shutdown runs at T > 125 °C, which is reset at T < 120 °C..	
Storage temperature range	°C	-55 ... +150	
Relative humidity	%	5 ... 95	
Enclosure		golden anodized aluminum, IP 67	
Dimensions (W * H * D)	mm	120 * 41 * 55	106 * 43 * 58
Weight	g	370	380
Voltage / current input		electrically isolated	
Galvanic isolation			
Input ↔ Device supply	V	±100, t = 1 ms: ±200	±100 U _{nominal} , ±500 U _{pulse}
Input ↔ Excitation	V	±100, t = 1 ms: ±200	±100 U _{nominal} , ±500 U _{pulse}
Excitation ↔ Device supply	V	±100, t = 1 ms: ±200	±100 U _{nominal} , ±500 U _{pulse}
Input ↔ Input	V	±100, t = 1 ms: ±200	±100 U _{nominal} , ±500 U _{pulse}
Acquisition ranges			
Voltage unipolar (0 ...)	V	0.1/ 0.2/ 0.5/ 1/ 2/ 5/ 10/ 20/ 30/ 50/ 60/ 100	0.1/ 0.2/ 0.5/ 1/ 2/ 5/ 10/ 20/ 30/ 50/ 60/ 100
Input resistance	MΩ	10	10
Voltage bipolar (+/-)	V	0.1/ 0.2/ 0.5/ 1/ 2/ 5/ 10/ 20/ 30/ 50/ 60/ 100	0.1/ 0.2/ 0.5/ 1/ 2/ 5/ 10/ 20/ 30/ 50/ 60/ 100
Input resistance	MΩ	10	10
Current (unipolar, bipolar)	mA	0 ... 20, ±20	
Input resistance	Ω	50	
Resolution	Bit	16	
Accuracy at T _{Ambient} = 25 °C			
Voltagesn bipolar	%	±0.05	±0.30
Voltages unipolar	%	±0.13	±0.30
Currents bipolar / unipolar	%	±0.30	±0.30
Drift at T _{Ambient}			
-40 °C to +85 °C	ppm/K	±40	±40
+85 °C to +105 °C	ppm/K	±80	±80
+105 °C to +125 °C	ppm/K	±120	±120

		M-SENS	M-SENS2
Filter, sample rates			
Hardware filter			
Frequency	Hz	150	500
Type		8-pole Butterworth	8-pole Butterworth
Channel sample rates	Hz	1/ 2/ 5/ 10/ 20/ 50/ 100/ 200/ 500/ 1000/ 2000	
Aggregate sample rate	kHz	max. 8	max. 8
Sensor excitation		single, galvan. isolated	single, galvan. isolated
Selectable output voltage	V	off/ 2.5/ 5.0/ 7.5/ 10.0/ 12.5/ 15.0	off/ 2.5/ 5.0/ 7.5/ 10.0/ 12.5/ 15.0
Output current	mA	max. 60	max. 60
Short-circuit protection		Current limiting with safety shutdown at overcurrent	
Accuracy at T_{Ambient} and voltage output 10 V			
+23 °C	%	±0.20	±0.20
+85 °C	%	±0.40	±0.40
+120 °C	%	±0.60	±0.60
CAN output		2.0 B, electrically isolated	
Programmable data rate	Bit/s	max. 1 MBit/s acc. to ISO11898-2	
Data in the CAN message			
Resolution / Format	Bit	8 / Byte or 16 / Word	
Sign		signed, unsigned	
Configuration interface		CAN	

7.5.2 M-SENS 8, M-SENS 8plus

		M-SENS 8	M-SENS 8plus
General			
Voltage supply	V DC	9 to 36, switch-off at voltage < 6 V	
Power consumption, typical / maximum	W	3.5 / 11.0	3.5 / 11.0
Operating temperature range Permanent/ 1 hour Notice	°C	-40 ... +120/ +120 ... +125 An immediate safety shutdown runs at T > 125 °C, which is reset at T < 120 °C..	
Storage temperature range	°C	-55 ... +150	
Relative humidity	%	5 ... 95	
Enclosure		golden anodized aluminum, IP 67	
Dimensions (W * H * D)	mm	204 * 41 * 55	204 * 41 * 55
Weight	g	695	695
Voltage / current input		electrically isolated	
Galvanic isolation			
Input ↔ Device supply	V	±100, temporary (1 ms) ±200	
Input ↔ Excitation	V	±100, temporary (1 ms) ±200	
Input ↔ CAN	V	±100, temporary (1 ms) ±200	
Input ↔ Input	V	±100, temporary (1 ms) ±200	
Acquisition ranges			
Voltage unipolar (0 ...)	V	0.1/ 0.2/ 0.5/ 1/ 2/ 5/ 10/ 20/ 30/ 50/ 100	0.01/ 0.1/ 0.2/ 0.5/ 1/ 2/ 5/ 10/ 20/ 30/ 50/ 100
Input resistance	MΩ	10	10
Voltage bipolar (+/-)	V	0.1/ 0.2/ 0.5/ 1/ 2/ 5/ 10/ 20/ 30/ 50/ 100	0.01/ 0.1/ 0.2/ 0.5/ 1/ 2/ 5/ 10/ 20/ 30/ 50/ 100
Input resistance	MΩ	10	10
Current (unipolar, bipolar)	mA	0 ... 20, ±20	
Input resistance	Ω	50	
Resolution	Bit	16	
Accuracy at T _{Ambient} = 25 °C			
Voltagesn bipolar	%	±0.10	±0.06
Voltages unipolar	%	±0.15	±0.10
Currents bipolar / unipolar	%	±0.50	±0.40
Drift at T _{Ambient}			
-40 °C to +85 °C	ppm/K	±40	±40
+85 °C to +105 °C	ppm/K	±80	±80
+105 °C to +125 °C (range ≥ 0.1 V)	ppm/K	±250	±250
+105 °C to +125 °C (range 0.01 V)	ppm/K		±450
Status LED at the input		1. Identification of the respective channel 2. Overcurrent displaying in acquisition mode	

		M-SENS 8	M-SENS 8plus
Filter, sample rates			
Hardware filter			
Frequency	Hz	150	
Type		8-pole Butterworth	
Channel sample rates	Hz	1/ 2/ 5/ 10/ 20/ 50/ 100/ 200/ 500/ 1000/ 2000	
Aggregate sample rate	kHz	max. 16 (at 1 MBit/s data rate without additional bus load of further devices)	
Sensor excitation		dual, electrically isolated	
Selectable output voltage	V	off/ ±2.5/ ±5.0/ ±7.5/ ±8.0/ ±10.0/±12.5/ ±15.0	
Output current (independent from the output voltage setting)	mA	±25	±25
Initial current at an output voltage of			
±2.5 or ±10.0 V	mA	max. ±30	max. ±30
±5.0 or ±12.5 V	mA	max. ±40	max. ±40
±7.5 or ±15.0 V	mA	max. ±45	max. ±45
Derating The sum of the maximum output power of the sensor supplies is reduced with the increasing ambient temperature by this percentage per Kelvin!	%/K	-1,25 (from 85 °C ambient temperature)	
Short-circuit protection		Current limiting with safety shutdown at overcurrent	
Accuracy at T _{Ambient} and voltage output 10 V			
-40 °C	%	±0.50	±0.40
+23 °C	%	±0.30	±0.25
+85 °C	%	±0.50	±0.40
+120 °C	%	±0.70	±0.50
CAN output		2.0 B, electrically isolated	
Programmable data rate	Bit/s	max. 1 MBit/s acc. to ISO11898-2	
Data in the CAN message Resolution / Format Sign	Bit	8 / Byte or 16 / Word signed, unsigned	
Configuration interface		CAN	

8 Mc-THERMO

8.1 Voltage and temperature acquisition

Mc-THERMO is an universal measuring device for acquiring temperatures from $-60\text{ }^{\circ}\text{C}$ to $+1370\text{ }^{\circ}\text{C}$ / $-76\text{ }^{\circ}\text{F}$ to $+2498\text{ }^{\circ}\text{F}$ with thermocouples of the K type and voltages up to 30 V . Each of the 8 analog inputs can be configured with the configuration and measuring software IPEmotion.

The channels are electrically isolated to each other, to the other channels, to the supply voltage, and to the CAN bus.





8.2 Input cable

Different input cables are available for acquiring the temperature and voltage signals. The thermocouple input cables are listed under the M-THERMO.





The following cables are used for the voltage measuring with Mc-THERMO. All Mc-THERMO VIN CL cables provide a current limiter for avoiding the danger of a short circuit due to the open ends of the connected thermo plug.



8.2.1 Input cable 620-644.xxx Mc-THERMO VIN CL Cable open

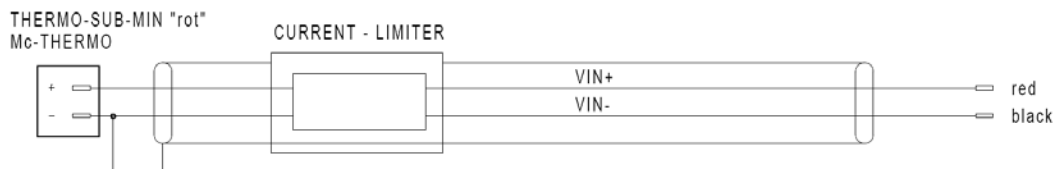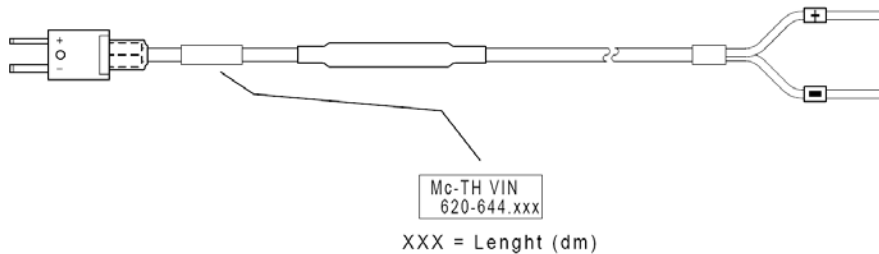

8.2.2 Input cable 620-645.xxx Mc-THERMO VIN CL Cable Banana

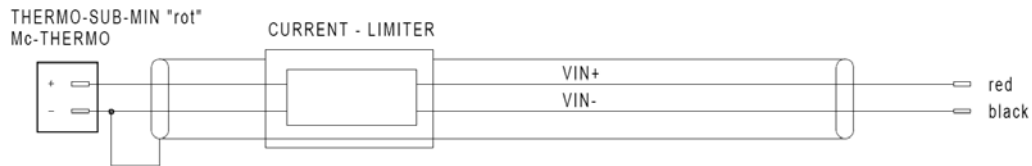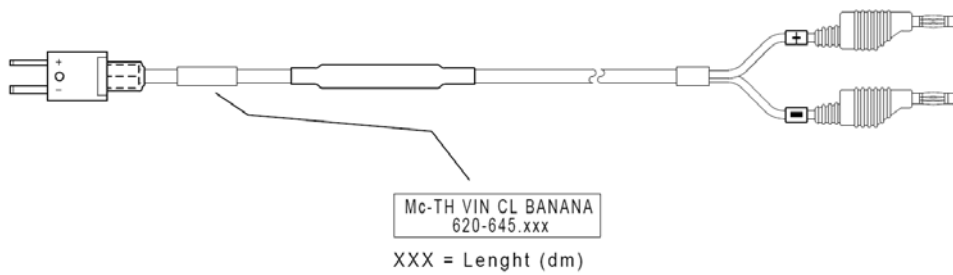

8.2.3 Input cable 620-643.xxx Mc-THERMO VIN CL Cable BNC/S

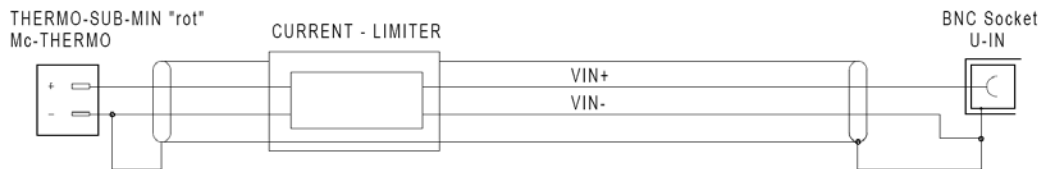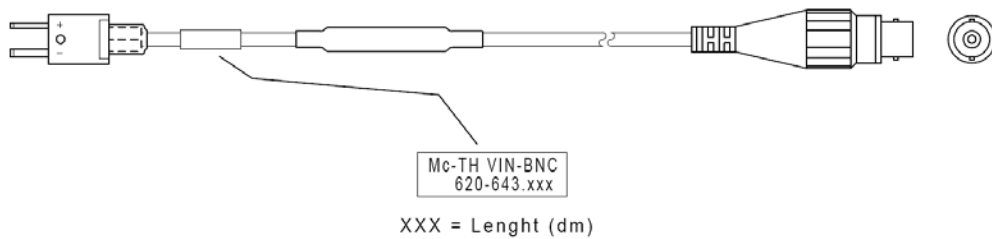

8.3 Extended input settings

8.3.1 Sensor mode

Scaling

Select the sensor mode for voltage or temperature acquisition.

Thermocouple	Temperature with thermocouple K type, Range -60 °C ... +1370 °C
Voltage	Voltage Range -30 V ... +30 V

8.3.2 Break detection and averaging

Thermo

Break detection	Activates the sensor break detection
Averaging	Activates the floating averaging out of previous averages

8.4 Technical data

General		
Voltage supply	VDC	6 to 36
Power input, typical	W	1.1
Working temperature range	°C	-40 ... +125 (Continuous operation) An immediate safety shutdown runs at T > 125 °C, which is reset at T < 120 °C.
Storage temperature range	°C	-55 ... +150
Relative humidity	%	5 ... 95
Input sockets Front membrane color acc. to DIN IEC 584 Front membrane color acc. to ANSI MC 96.1		Miniature thermocouple sockets green yellow
Enclosure		Aluminium, nature anodized, IP 65
Dimensions (W*H*D)	mm	106 * 24* 50
Weight	g	215
Temperature / Voltage input		
Input voltage max.	V	±50 (permanent), ±100 (t < 2ms)
Galvanic separation		
Input ↔ Device supply	V	±50, temporary (2 ms) ±200
Input ↔ CAN	V	±50, temporary (2 ms) ±200
all inputs	V	±50, temporary (2 ms) ±200


Temperature measuring range	°C	-60 to 1370
Sensor type		Thermocouple K type (Ni10Cr/NiAl)
Resolution	°C	≤ 0.087 (≥ 14 Bit) at 1 Hz sampling rate
Characteristic linearization		numeric, interpolated, resolution 15 bit
Cold junction compensation		PT100 for reference temperature measurement at every input
Accuracy ^[1] at 25 °C ambient temperature	% / K	±0.035 % of the temperature acqu. range at 1 Hz sampling rate
Drift ^[1] at ambient temperature: -40 °C to +85 °C +85 °C to +125 °C	ppm/K ppm/K	±40 ±40
Input resistance, approx.	MΩ MΩ	2.6 (Sensor break detection active) 4.1 (Sensor break detection deactivated)
Hardware filter	Hz	10, R-C low pass filter type 1 st order
Sensor break detection		can be activated with the software
Voltage measuring range	V	±30
Resolution	mV / Bit	≤ 0,92 (16 Bit)
Accuracy ^[1] at 25 °C ambient temperature	% / V	±0.1 % of the voltage acqu. range (±60 mV) at 1 Hz sampling rate
Drift ^[1] at ambient temperature: -40 °C to +85 °C +85 °C to +125 °C	ppm/K ppm/K	±50 ±50
Input resistance, approx.	MΩ MΩ MΩ	4.1 @ T _A = 25 °C 3.6 @ T _A = 85 °C 1.2 @ T _A = 125 °C
Hardware filter	Hz	330, R-C low pass filter type 1 st order
General input		
Resolution ADC	Bit	24
Calibration of the A/D chain		before acquiring a value
Status LED at the input		1. Identification of the respective channel during the configuration (LED flashes) 2. Sensor break displaying in acqu. mode (LED is permanently on)
Channel sampling rates	Hz	0.033/ 0.083/ 0.167/ 1/ 2/ 5/ 10/ 20/ 50/ 100
Aggregate sample rate	Hz	max. 800
CAN output		2.0 B, electrically isolated
Programmable data rate	Bit/s	max. 1 MBit/s acc. to ISO11898-2
Data in the CAN message Resolution / Format Sign	Bit	8 / Byte or 16 / Word signed, unsigned
Configuration interface		CAN

9 M-FRQ, M-CNT2

9.1 Frequency- / Cycle acquisition incl. sensor supply

The M-FRQ and M-CNT2 are universal counters. Main applications are the acquisition of inductive sensors in the fields ABS, wheel speed and fan speed. The following measuring modes are available: frequency, cycle, pulse, pause duration and duty cycle. The device provides 4 signal inputs with adjustable trigger thresholds, 2 voltage ranges for data evaluation and different channel sampling rates.

The channels and the separately adjustable sensor supply per channel are electrically isolated to each other, to the other channels, to the supply voltage, and to the CAN bus.

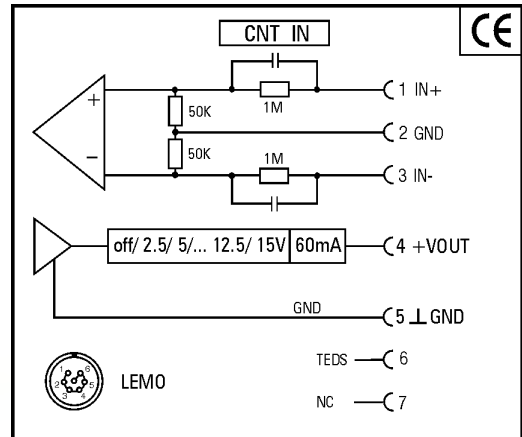

M-FRQ



M-CNT2



The sockets for the inputs are available in Lemo. Other sockets and ODU versions (Fips) on request.

9.2 Input cable 670-858.xxx



Anschlußbelegung / Connection

Lemo-Stecker 1B, 7-pol. (schwarz)

Lemo-male 1B, 7-pol. (black)

Pin-Nr. Pin-No	Bezeichnung Designation	Litze-Nr. / Farbe Wire-No / Colour
1	IN +	1 white
2	GND	2 brown
3	IN -	3 red
4	+ Power	4 black
5	POWER GND	5 green
6	TEDS	6 yellow
7	NC	7 violet
Chassis	Shield	S (Shield, thick) blue




All input cables are also available in different lengths, as well as, with further plug configurations.

9.3 Input / Principle details

9.3.1 Measuring method

The analog and digital input signal is evaluated with a programmable comparator threshold (switching threshold, hysteresis) and the following 48 bit counter. The FPGA and the digital signal processor (DSP) convert the respective counter values online into a frequency output (and duty cycle or time period).

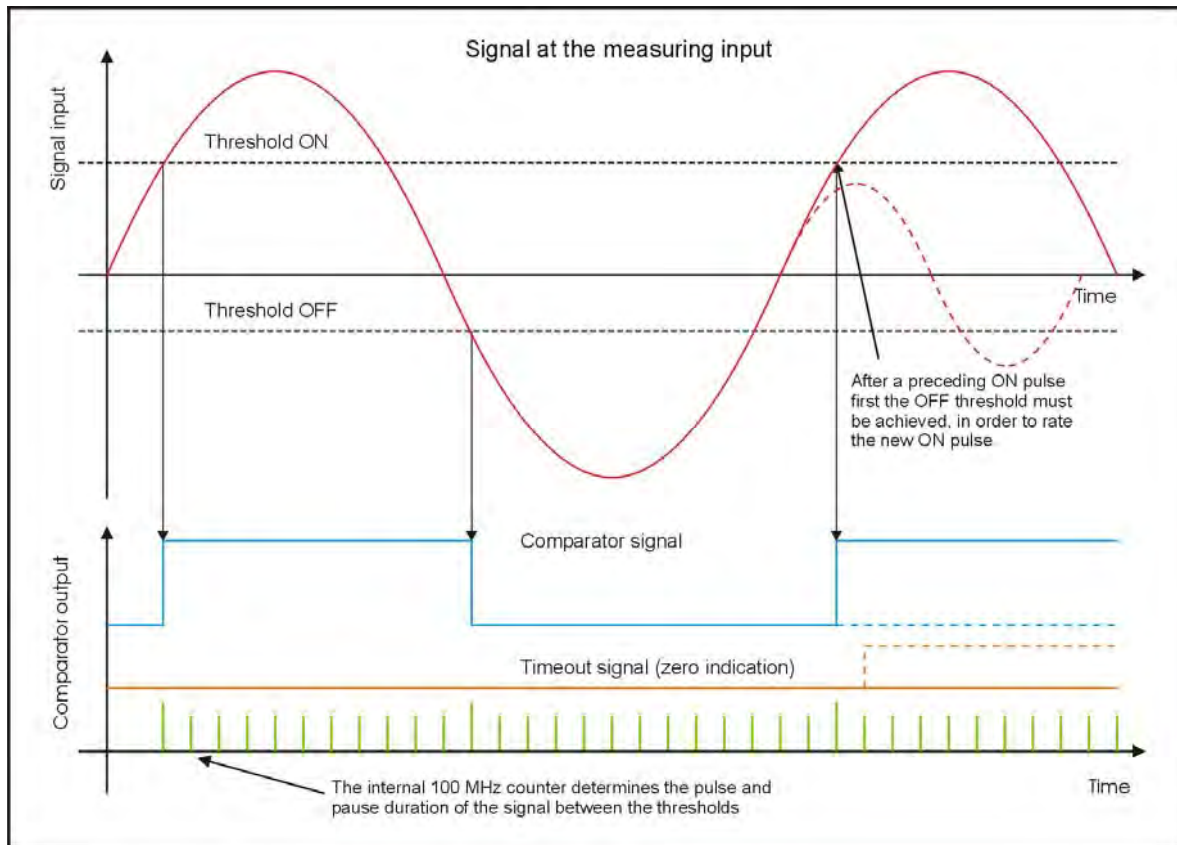

The input signal is compared with the defined switching thresholds by using a comparator (see image). The result is a square wave voltage similar to the frequency at the comparator output. The pulse and the interval duration of this square wave voltage is detected with the internal 100 MHz counter.

If the timeout expires without any detection of an ON threshold, the zero indication will output the user defined minimal value. The setting of the timeout is recommended in order to avoid time delays in signal evaluation. A correct signal evaluation is supported only with sequent detections of ON and OFF thresholds.

Frequency

The frequency is acquired with the interval duration acquisition described above. The reciprocal value of the counter result of the interval duration measurement is scaled and sent correspondingly to the measuring range setting.

Duty cycle

The counter value of the pulse duration is divided by the counter value of the interval duration and correspondingly scaled and sent to the measuring range setting.

If the frequency is too low (or 0 Hz), 0 % (low level) or 100 % (high level) is sent depending on the signal level.

The thresholds on and off do usually differ and cause different results of the pulse duration and the duty cycle if the signal edges are low, depending on the defined thresholds.

Interval duration

The interval duration is acquired with the acquisition described above. The counter value between two thresholds on is detected, scaled, and sent correspondingly to the measuring range setting.

Pulse duration

The pulse duration is acquired with the acquisition described above. The counter value between the threshold on and the threshold off is detected, scaled, and sent correspondingly to the measuring range setting.

The thresholds on and off do usually differ and cause different results of the pulse duration if the signal edges are low, depending on the defined thresholds.

Pause duration

The pause duration acquisition corresponds to the pulse duration acquisition with inverted input signal.

9.3.2 Status LED at the input

The status LED at the respective input indicates the acquisition of a frequency signal. This is the case if both switching thresholds of every value are reached (threshold on and off).

The status LED is on / flashes in time with the signal frequency if:

- ▶ the corresponding channel is active and
- ▶ the device is in the acquisition mode (acquiring data) and
- ▶ the switching thresholds are correctly defined.

Due to the slowness of visual proceeding, only frequencies under approx. 10 Hz can be seen as a flashing. The LED is permanently on at higher signal frequencies.

9.4 Extended input settings

9.4.1 Scaling, measuring ranges

Scaling M-FRQ

Scaling M-CNT2

Scaling

1. Select the mode for frequency or period acquisition.
2. Select a sensor range. Depending on the device/channel, different ranges are available.
3. Define a physical range and the unit with the scaling calculator – if required.

Mode	Ranges			Remarks
	Min.	Max.	Unit	
Frequency	0 ... 200	0 ... 200	kHz	Maximum > Minimum minimum signal frequency 0.03 Hz maximum signal frequency 200 kHz
Duty cycle Range 0.01 % to 99.99 %	0 ... 100	0 ... 100	%	Maximum > Minimum minimum signal frequency 0.03 Hz maximum signal frequency: 10 kHz at 1 % duty cycle 250 kHz at 25 % duty cycle 500 kHz at 50 % duty cycle 250 kHz at 75 % duty cycle 10 kHz at 99 % duty cycle
Periodic duration	0 ... 200	0 ... 200	s	Maximum > Minimum maximum interval duration 200 s minimum interval duration 1 µs
Pulse duration	0 ... 200	0 ... 200	s	Maximum > Minimum maximum pulse duration 200 s minimum pulse duration 1 µs
Pause duration	0 ... 200	0 ... 200	s	Maximum > Minimum maximum pause duration 200 s minimum pause duration 1 µs



Select values ≥ 1 Hz for the frequency with **Sensor range Min!** This avoids an unnecessary long response time until the value 0 Hz or $-FS$ is sent if a signal is missing or has the value approx. 0 Hz. The maximum response time at 0 Hz is 40 s.

9.4.2 Input signal

General | Scaling | Display | **Input signal** | Excitation | Filter

Signal parameters

Threshold on: 3 V

Threshold off: 1 V

Edge: Positive edge

DC compensation: ☒

Input signal


1. Select the upper threshold with *Threshold on* in a range of ± 40 V.
2. Select the lower threshold with *Threshold off* in a range of ± 40 V. The lower threshold must always be smaller than the upper one.
3. Select an edge for defining the positive or negative signal edge. If the negative edge is selected, the input signal will be inverted.
4. The DC compensation disables the direct current component in the signal with a passive high-pass (1-pole, 0.8 Hz cut-off frequency).

An oscilloscope is recommended for displaying the signal behavior for configuring the switching thresholds on and off. If the sensor signal does not exceed the threshold on or fall below the threshold off, no exact acquisition is possible. In this case, the value does not change although the revolutions per minute increase and the sensor is connected correctly. Correct the threshold values in the configuration and run a test acquisition.



Please note that a lot of speed sensors send an almost ideal square wave signal in the lower frequency range, but the graph changes with increasing frequency (> saw tooth). This can also be caused by external capacities e.g. a (long) connection cable to the sensor.


9.4.3 Sensor, initial excitation

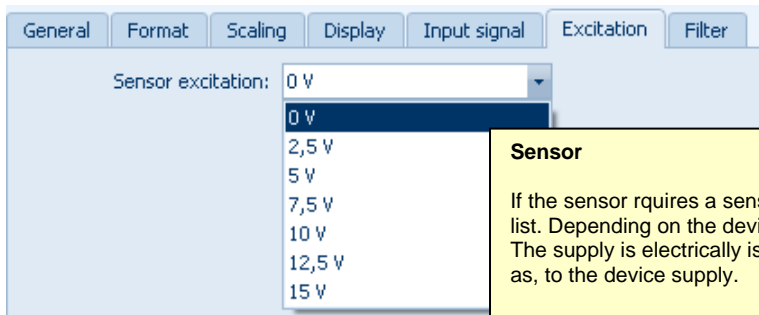

Sensor

If the sensor requires a sensor excitation, select the initial excitation from the list. Depending on the device/channel, different voltages are available. The supply is electrically isolated to the input and channels nearby, as well as, to the device supply.


9.4.4 Filter

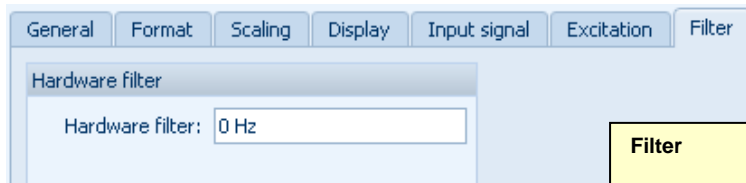

Filter

Select the hardware filter for avoiding aliasing effects. This is always recommended for measuring with periodic signals.

9.4.5 Mode (M-CNT2)

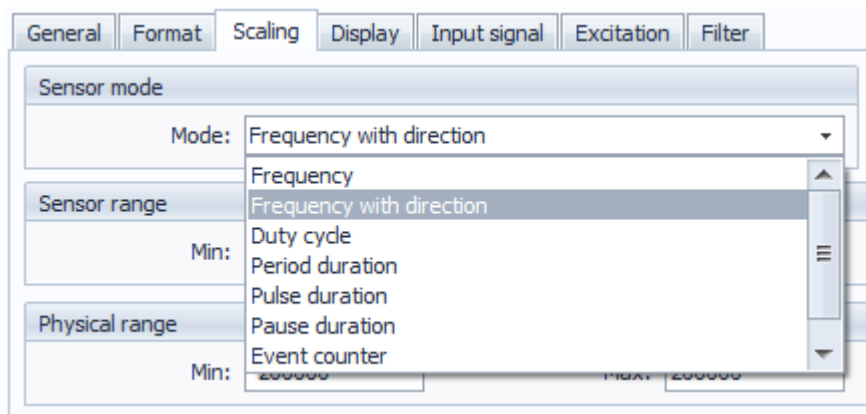

Channel 2 and Channel 4 provide the **Mode** tab to set the operating mode to detect the rotating direction in combination with input 1 resp. 3.

9.5 Technical data

		M-FRQ	M-CNT2
General			
Voltage supply	V DC	9 to 36, switch-off at voltage < 6 V	
Power input, typical / maximum	W	2.0 / 7.0	2.0 / 7.0
Working temperature range	°C	-40 ... +120/ +120 ... +125 An immediate safety shutdown runs at T > 125 °C, which is reset at T < 120 °C.	
Storage temperature range	°C	-55 ... +150	
Relative humidity	%	5 ... 95	
Enclosure		golden anodized aluminum, IP 67	
Dimensions (W * H * D)	mm	120 * 41 * 55	106 * 43 * 58
Weight	g	350	370
Voltage input		electrically isolated	
Galvanic isolation			
Input ↔ Device supply	V	±100, t = 1 ms: ±200	±100 U _{nominal} , ±500 U _{pulse}
Input ↔ Excitation	V	±100, t = 1 ms: ±200	±100 U _{nominal} , ±500 U _{pulse}
Excitation ↔ Device supply	V	±100, t = 1 ms: ±200	±100 U _{nominal} , ±500 U _{pulse}
Input ↔ Input	V	±100, t = 1 ms: ±200	±100 U _{nominal} , ±500 U _{pulse}
Adjustable thresholds		Evaluation with voltage comparator	
Range 1 / (Quantization)	V	±4 / (0.025)	
Range 2 / (Quantization)	V	±40 / (0.2)	
Accuracy at T _{Ambient} = 25 °C	%	3	
Accuracy at -40 < T _{Ambient} < 120 °C	%	8	
Signal evaluation		Online with DSP	
Frequency mode			
min. signal frequency	Hz	0.03	
max. signal frequency	kHz	200	
Duty cycle mode		Measuring range 0.01 % to 99.99 %	
min. signal frequency	Hz	0.03	
max. signal frequency	kHz	10 at 1 % Duty cycle 250 at 25 % Duty cycle 500 at 50 % Duty cycle 250 at 75 % Duty cycle 10 at 99 % Duty cycle 1 or 1/100 f _{q Filter} (greater value)	
Resolution	µs		
Period, pulse, pause duration mode			
min.		1	
max.	µs	200	
Resolution	s	1 or 1/100 f _{q Filter} (greater value)	
	µs		
Event counting mode			Reset functions: without reset, reset at clock, overflow, Up / down counting with detection of rotation direction

		M-FRQ	M-CNT2
Signal evaluation			
Internal time basis			
Accuracy at $T_{\text{Ambient}} = 25\text{ °C}$	%	0.01 (100 ppm)	
Drift, $-40 < T_{\text{Ambient}} < 85\text{ °C}$	ppm/K	±1.5	
Drift, $85 < T_{\text{Ambient}} < 105\text{ °C}$	ppm/K	±2.5	
Drift, $105 < T_{\text{Ambient}} < 125\text{ °C}$	ppm/K	±5.0	
Hardwarefilter			
Cut-off frequency	Hz	filter off, 1 Hz ... 30 kHz	
Type		5-pole Bessel	
Damping deviation			
$T_{\text{Ambient}} = 25\text{ °C}$	dB	±1.5	
$-40 < T_{\text{Ambient}} < 120\text{ °C}$	dB	±3.0	
DC compensation			
lower cut-off frequency (-3 dB)	Hz	0.8	
Damping deviation			
$T_{\text{Ambient}} = 25\text{ °C}$	dB	±1.0	
$-40 < T_{\text{Ambient}} < 120\text{ °C}$	dB	±2.0	
Channel sample rates (= output rate at the CAN bus)	Hz	1/ 2/ 5/ 10/ 20/ 50/ 100/ 200/ 500/ 1000/ 2000/ 5000	
Aggregate sample rate. (depending on number of CAN-IDs and bit rate)	kHz kHz kHz kHz	max. 5 (without restriction) max. 4 x 2, max. two CAN-IDs busy max. 4 x 5, only one CAN-ID busy, 1 MBit/s max. 2 x 5, only one CAN-ID busy, 500 kBit/s	
Sensor excitation		electrically isolated	
Selectable output voltage	V	off/2.5/ 5.0/ 7.5/10.0/ 12.5/ 15.0	
Output current (independent from the voltage setting)	mA	max. 60 (Short-circuit-proof, with safety shutdown at overcurrent)	
Accuracy at ambient temperature 23 °C / 85 °C / 120 °C	%	and 10 V output voltage ±5.0 / ±6.0 / ±7.0	
CAN output		2.0 B, electrically isolated	
Programmable data rate	Bit/s	max. 1 MBit/s acc. to ISO11898-2	
Data in the CAN message Resolution / Format Sign	Bit	8 / Byte or 16 / Word signed, unsigned	
Configuration interface		CAN	

10 MultiDAQ

10.1 42 Channel multi input device T/ U/ I/ f

MultiDAQ is a 42 channel multi input module for data acquisition of temperatures through K-Type thermocouples, voltages/ currents incl. sensor excitation and frequency signals. Each input channel is equipped with a separate LED to indicate signal/ sensor status.

MultiDAQ provides the following number and types of inputs:

32	Thermocouple type K	-60 °C to +1370 °C (-76 °F to +2498 °F)
8	Voltage/ current incl. sensor excitation	up to ± 100 V/ ± 20 mA
2	Frequency/ period signals (voltage)	up to 200 kHz, voltage input range up to ± 40 V

Each of the 42 inputs can be configured with the configuration and measuring software IPEmotion.

The channels are electrically isolated to each other, to the other channels, to the supply voltage, and to the CAN bus.





10.2 Input cable

Get more details regarding to the respective input cables:

Thermocouple inputs	refer to	4.2 M-THERMO, M-THERMO 16
Voltage/ current inputs	refer to	7.2 M-SENS 4, M-SENS 8/ 8plus
Frequency/ period inputs	refer to	9.2 M-FRQ

10.3 Create and configure MultiDAQ

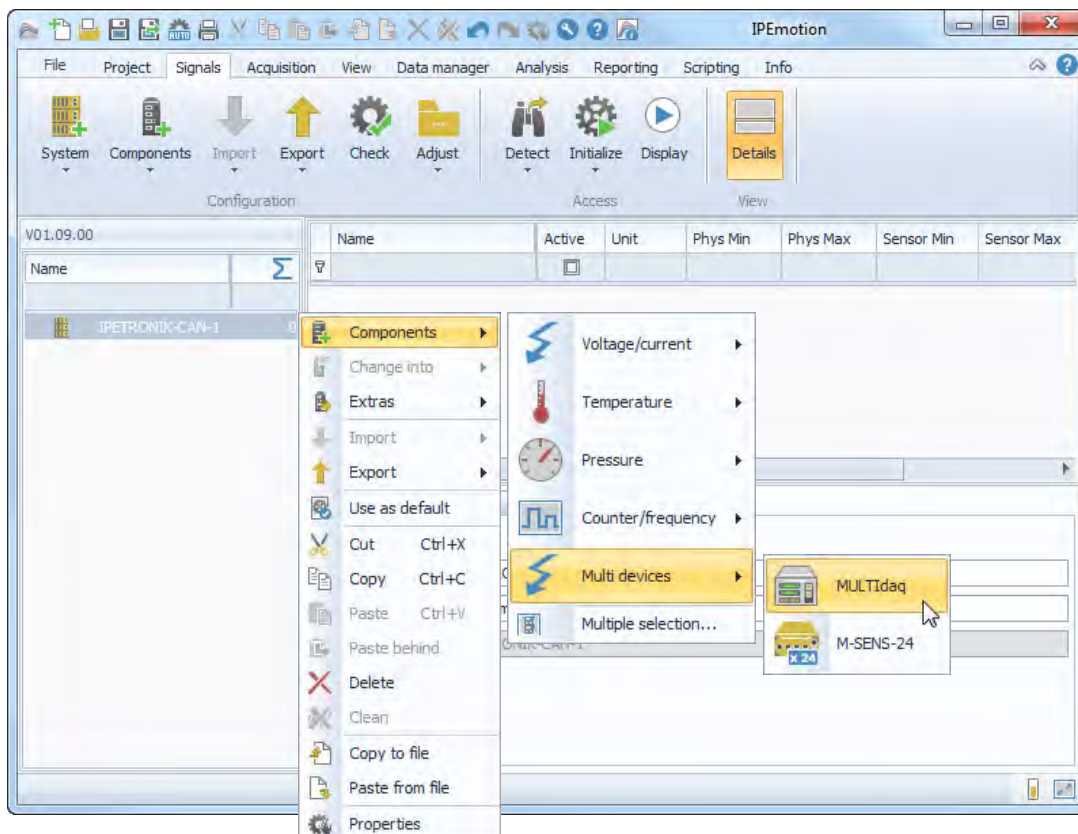

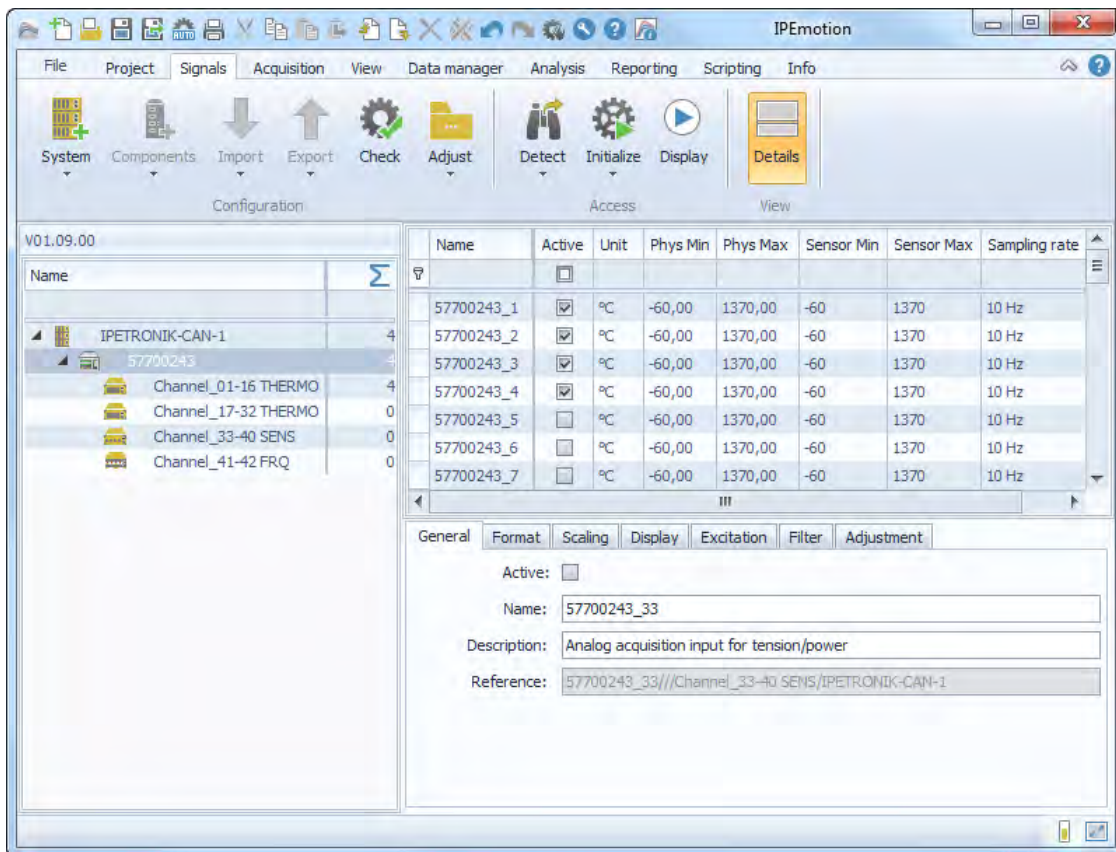

Get more details regarding to the setting of the respective input channels:

Thermocouple inputs refer to [4.3 M-THERMO, M-THERMO 16](#)
 Voltage/ current inputs refer to [7.4 M-SENS 4, M-SENS 8/ 8plus](#)
 Frequency/ period inputs refer to [9.3 M-FRQ](#)

10.4 Technical data

General	
Measurement ranges Temperature	-60 °C to +1370 °C (-76 °F to +2498 °F)
Measurement ranges Voltage	Covering input signals 0.1 V to 100 V
Measurement ranges Current	0 ... 20 mA, ±20 mA
Measurement ranges Frequency/Period	up to 200 kHz / 10 µs (100 kHz)
Input voltage (IN+ ↔ IN-)	max. ±100 V, short-time (1 ms) ±200 V
Channel sample rates	1/ 2/ 5/ 10/ 50/ 100/ 200/ 500/ 1000/ 2000 Hz
Voltage supply	6 VDC ... 36 VDC
Power consumption, typical maximum	6.0 W 17.0 W (max. load on all excitations)
Working temperature range	-40 °C ... +85 °C (-40 °F ... +185 °F)
Storage temperature range	-55 °C ... +125 °C (-67 °F ... +257 °F)
Relative humidity	5 ... 95 %
IP-Code (Ingress protection)	IP 67 (DIN EN 60529)
Dimensions (enclosure)	L261 mm x W116 mm x H55 mm (W10.28 in x W4.57 in x H2.17 in)
Weight	1950 g (4.30 lb)

Thermocouple input (bank 1 and 2)	32 inputs, electrically isolated
Sensor type	K-Type thermocouple (Ni10Cr/NiAl)
Measuring range type K (Ni10Cr/NiAl)	-60 °C to 1370 °C (-76 °F to 2498 °F)
AD converter resolution	16 Bit
Linearization look-up table resolution	≥ 13 Bit / better than 0.174 °C (0.31 °F)
Cold junction compensation	8 PT100 (RTD) to measure the reference temperature
Input resistance	approx. 1 MΩ with activated sensor break detection approx. 10 MΩ with inactivated sensor break detection
Input channel status LED	1. Identify the respective channel in configuration mode (LED flashes) 2. Identify sensor break in measuring mode (LED lights continuously)
Align of the AD converter	before processing each measuring value
Sensor break detection	activated per software on command
Hardware filter	1.0 Hz, filter type single pole RC low-pass
Channel sample rates	1/ 2/ 5/ 10/ min 1/ 2/ 5/ 10/ 20 Hz
Total sampling rate per bank	max. 320 Hz

Voltage / Current input (bank 3)	8 inputs, electrically isolated
Voltage ranges	
Voltage unipolar (0 ...)	0.1/ 0.2/ 0.5/ 1/ 2/ 5/ 10/ 20/ 30/ 50/ 100 V
Input resistance	10 MΩ
Voltage bipolar (+ / -)	±0.1/ ±0.2/ ±0.5/ ±1/ ±2/ ±5/ ±10/ ±20/ ±30/ ±50/ ±100 V
Input resistance	10 MΩ
Current unipolar (0 ...) / bipolar (+ / -)	0 ... 20 mA, ±20 mA
Input resistance	50 Ω

Signal resolution	16 Bit
Input channel status LED	1. Channel identification for configuration (LED flashes) 2. Current overload indication (LED on)
Offset adjust by broadcast command (Also supported during measurement!)	- manual offset adjust - offset adjust for all channels of a group
Hardware filter, switchable	150 Hz, filter type 8-pole Butterworth
Software filter (DSP), optional	cut-off frequency and filter type selectable
Channel sample rates	1/ 2/ 5/ 10/ 50/ 100/ 200/ 500/ 1000/ 2000 Hz
Total sampling rate per bank	max. 16 kHz (1 MBit/s data rate, no other devices)
Sensor excitation	electriclly isolated
Selectable output voltage	Off/ ± 2.5 / ± 5 / ± 7.5 / ± 10 / ± 12.5 / ± 15 VDC
Output current (short circuit proof) at Voutput ± 2.5 / ± 10.0 V at Voutput ± 5.0 / ± 12.5 V at Voutput ± 7.5 / ± 15.0 V	± 25 mA (independent from output voltage) max. ± 30 mA max. ± 40 mA max. ± 45 mA

Frequency / Counter input (bank 4)	2 inputs, electriclly isolated
Adjustable trigger thresholds	
Quantization at range ± 4 V Accuracy at 25 °C / -40 ... +125 °C	0.025 V 3 % / 8 %
Quantization at range ± 40 V Accuracy at 25 °C / -40 ... +125 °C	0.2 V 3 % / 8 %
Signal modes	Online calculated by DSP
Frequency (min. / max. signal frequency)	0.03 Hz / max. 200 kHz
Duty cycle (range) min. signal frequency max. signal frequency (at 1 % accuracy) (Reduced accuracy at higher signal frequency and / or worst case duty cycle.) Resolution	0.01 % ... 99.99 % 0.03 Hz 10 kHz @ 1 % duty cycle (worst case) 500 kHz @ 50 % duty cycle (best case) 10 kHz @ 99 % duty cycle (worst case) 1 μ or 1/100 fC Filter (higher value)
Period duration, Pulse duration, Pause duration min. / max. duration, resolution	1 μ s / 200 s, 1 μ or 1/100 fC Filter (higher value)
Hardware filter, adjustable Attenuation Variance at 25 °C / -40 ... +125 °C	Off, 1 Hz ... 30 kHz, filter type 5-pole Bessel ± 1.5 dB / ± 3.0 dB
DC compensation Attenuation Variance at 25 °C / -40 ... +125 °C	0.8 Hz (lower cut-off frequency (- 3 dB) ± 1.0 dB / ± 2.0 dB
Channel sample rates	1/ 2/ 5/ 10/ 50/ 100/ 200/ 500/ 1000/ 2000/5000 Hz
Total sampling rate per bank (depends on number of CAN IDS and bit rate)	max. 4 kHz (without restriction) 2x 5 kHz (max. 1 CAN ID used @ 500 kBit/s data rate)
Sensor excitation	electriclly isolated
Selectable output voltage	Off/ 2.5/ 5/ 7.5/ 10/ 12.5/ 15 VDC
Max. output current	60 mA (short circuit proof and overload protected)

CAN output (bank 1, 2, 3, 4)	CAN 2.0 B, electriclly isolated
Selectable data transfer rate (bit rate)	up to 1 MBit/s according to ISO11898-2
CAN message data format (signal) Resolution (Format) Sign	8 Bit (Byte) and 16 Bit (Word) selectable signed, unsigned
Configuration interface	CAN


11 CANpressure

11.1 Pressure sensor with CAN output



CANpressure is a pressure sensor with CAN output for relative or absolute pressure measurements with synchronous data acquisition up to 2 kHz sampling rate. The temperature is additionally acquired with a PT1000 directly at the piezoelectric element.

11.2 Pressure connections

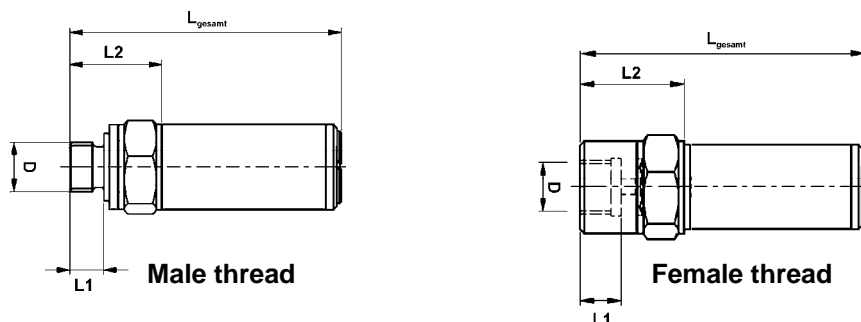

Dimensions	D	L1	L2	Fastening torque	Wrench size
M 10 x 1 male	10 mm	8.5 mm	25.5 mm	17 ... 23 Nm	24 mm / 0.94 in
M 10 x 1 female	10 mm	9.5 mm	26.5 mm	17 ... 23 Nm	24 mm / 0.94 in
M 14 x 1,5 male	14 mm	9.5 mm	25.5 mm	17 ... 23 Nm	24 mm / 0.94 in
M 14 x 1,5 female	14 mm	10.5 mm	26.5 mm	17 ... 23 Nm	24 mm / 0.94 in
G ¼ male	13.2 mm	9.5 mm	25.5 mm	17 ... 23 Nm	24 mm / 0.94 in
G ¼ female	13.2 mm	10.5 mm	26.5 mm	17 ... 23 Nm	24 mm / 0.94 in



Do not exceed the specified max. fastening torque!

Pressure transducer (relative, absolut)	Overload pressure	Burst pressure
0 ... 1 bar / 0 ... 14.5 psi	3 x FS (Full Scale)	> 200 bar / 2,901 psi
0 ... 2 bar / 0 ... 29.0 psi	3 x FS	> 200 bar / 2,901 psi
0 ... 5 bar / 0 ... 72.5 psi	3 x FS	> 200 bar / 2,901 psi
0 ... 10 bar / 0 ... 145 psi	3 x FS	> 200 bar / 2,901 psi
0 ... 20 bar / 0 ... 290 psi	3 x FS	> 200 bar / 2,901 psi
0 ... 25 bar / 0 ... 363 psi	3 x FS	> 200 bar / 2,901 psi
0 ... 50 bar / 0 ... 725 psi	3 x FS (Full Scale)	> 850 bar / 12,328 psi
0 ... 100 bar / 0 ... 1,450 psi	3 x FS	> 850 bar / 12,328 psi
0 ... 250 bar / 0 ... 3,626 psi	3 x FS	> 850 bar / 12,328 psi
other pressure ranges on request		
Medium compatibility		
Gases and fluids (also fuels and break fluids) up to 200 bar / 2,901 psi, other conditions on request		

11.3 Input / Principle details

Difference between relative and absolute pressure sensors

A pressure acquisition is always a comparative acquisition of pressure ratios between two different physical systems (acquisition and reference range). **Relative pressure sensors** use a variable reference as counter pressure (e.g. the atmospheric air pressure). Absolute pressure sensors acquire against a constant and calibrated reference (e.g. vacuum or defined pressure).



A sensor can only acquire either relative pressure or absolute pressure. Due to the mechanical sensor structure, the reference pressure is preset and therefore the pressure type. For measuring against both reference pressures, two different sensors are required.

Medium compatibility of the sensor

CANpressure can be used for almost all media (incl. brake fluids and fuels). Restrictions are to be tested in particular cases before using very aggressive media like acids or high pressures and/or media temperatures.

11.4 Extended input settings

11.4.1 Scaling

The screenshot displays the 'Scaling' configuration window in the CANpressure software. It is divided into two sections, one for each channel. Channel 1 is set to 'Pressure' mode, with a sensor range from 0 to 1 bar and a physical range from 0.00000 to 1.00000 bar. Channel 2 is set to 'Temperature' mode, with a sensor range from -50 to 150 °C and a physical range from -50,000 to 150,000 °C. A 'Scaling calculator' button is located next to the temperature mode settings. The interface includes tabs for 'General', 'Format', 'Scaling', 'Display', 'Filter', and 'Adjust'.

Scaling

1. The sensor mode is set as pressure for channel 1 and as temperature for channel 2.
2. The sensor range is set for channel 1 with the respective pressure range (depending on the CANpressure version) and for channel 2 with a temperature range of -50 ... +150 °C.
3. Define a physical range and the unit with the scaling calculator – if required and if it does not match the real range.

11.4.2 Filter, averaging

The screenshot shows the 'Filter' and 'Averaging' sections of the software interface. The 'Hardware filter' is set to '1,2 kHz'. The 'Software filter' is active (checked), with the type set to 'Butterworth' and the frequency set to '6 /min'. The 'Averaging' section has the 'Averaging' checkbox unchecked.

Filter

1. Activate the hardware filter for avoiding aliasing effects. This is always recommended for measuring with periodic signals.
2. Activate the averaging (floating average) for smoothing unrequested signal interrupts or noise components.
3. Activate the software filter for additionally filtering the signal. Select the filter type (Bessel, Butterworth, Tschebychev) and the cut-off frequency (0.1 Hz...495.0 Hz, depending on the sampling rate).

11.4.3 Adjust

The screenshot shows the 'Adjust' section of the software interface. The 'Mode' dropdown menu is open, showing options: 'None', 'Manually', 'Group 1', 'Group 2', 'Group 3', and 'Group 4'. The 'Reference value' is set to 'None' and the unit is 'bar'.

The calibration function with a broadcast command (IPEhotkey) also allows the offset adjustment during a running acquisition to a user defined target value (reference value). The following actions are permitted:

- ▶ **None** no offset calibration
- ▶ **Manually** only channels with this status are calibrated with the **Manual calibration** command
- ▶ **Group X** channels, which are assigned to a specific group (1...4), are calibrated with the desktop icon IPEhotkey and the **Calibration Group** command.
The channel assignation to one group can also be effected for all devices (e.g. SENS type, STG, CANpressure mixed in one group). A signal based calibration is therefore possible.

11.5 Technical data

General		
Voltage supply	V DC	6 ... 36 Input threshold $U \geq 6 \text{ V}$
Power consumption, typical	W	< 0.7
Operating temperature range	°C	-40 ... +125 (with safety shutdown)
Storage temperature range	°C	-55 ... +150
Relative humidity	%	5 ... 95
Enclosure		Stainless steel 4435
Pressure connection		M 10 x 1 / M 14 x 1,5 / G ¼ male and female thread available
IP protection class		IP 52 / IP 68
Relative / absolute pressure		IP 52 / IP 68
General input		
Electrical isolation		Signal – excitation supply CAN bus – excitation supply
Resolution (p, T)	Bit	16
Hardware filter, cut-off frequency f_c Type	Hz	1200, switchable 8-pole Butterworth
Software filter, minimum cut-off frequency f_{Cmin} maximale Grenzfrequenz f_{Cmin}	Hz Hz	selectable in 0.1 Hz resp. 1 Hz steps 0.1 Hz @ 1 Hz f_{sample} , 10 Hz @ 2 KHz f_{sample} 0.4 Hz @ 1 Hz f_{sample} , 496 Hz @ 2 KHz f_{sample} depending on sampling rate and selected filter type
Filter characteristics selectable		Bessel, Butterworth, Chebyshev, Chebyshev invers, each 8-pole
Channel data rates (output at the CAN-Bus)	Hz	1/ 2/ 5/ 10/ 20/ 50/ 100/ 200/ 500/ 1000/ 2000
Signal amplifier		
Accuracy pressure signal	%	0.5 % FS (nominal pressure) TEB (-40 °C ... +125 °C) all measuring uncertainties included
Measuring range of temperature signal	°C	-40 ... +150
Accuracy of temperature signal	K	± 3.0 (total temperature and pressure range)
Special funcons		
Pressure offset adjust		offline, at running acquisition, to target value
CAN output		
Programmable data rate	Bit/s	max. 1 MBit/s acc. to ISO11898-2
Data in the CAN message Resolution / Format Sign	Bit	8 / Byte or 16 / Word signed, unsigned
Configuration interface		CAN


12 Appendix

12.1 Linear signal scaling

The conversion of a raw value (binary value, e.g. in a CAN message) into a physical value (value with unit) is effected with the scaling. IPETRONIK offers the scaling calculator and supports linear scaling with the line equation as factor/offset or 2 point scaling.

The scaling of a voltage or current signal (sensor output) into a corresponding physical or percentage value is effected in the same way. The following examples show the connections.

Mathematical basis for the line equation

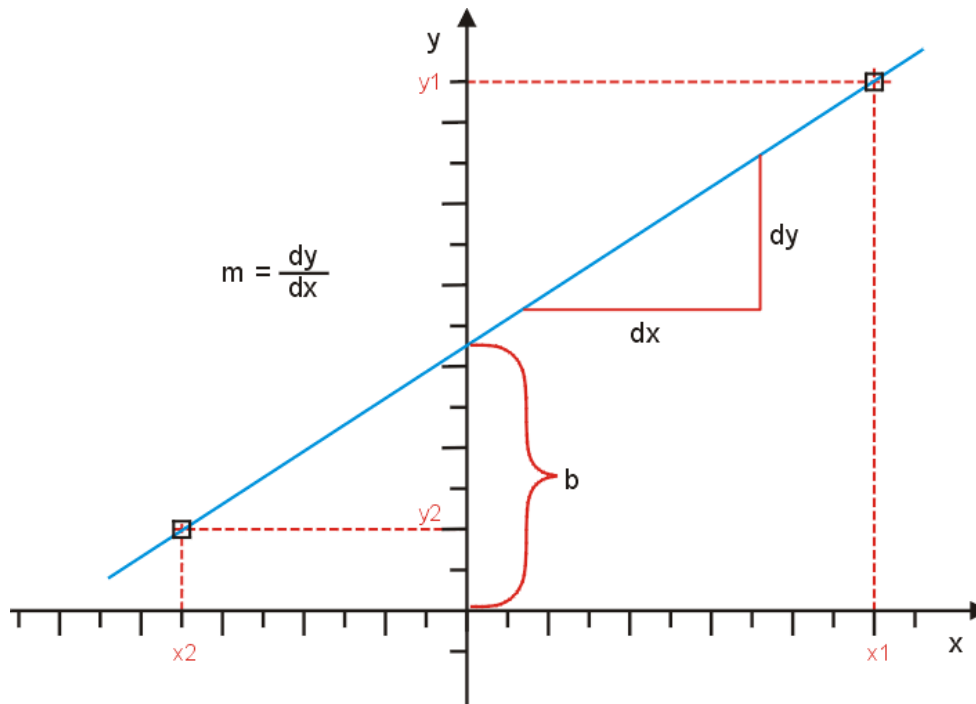

Point slope form

$$y = m \cdot x + b$$

$$b = y - m \cdot x$$

m = Slope
 b = Constant (Offset)

2 points form

$$m = dy / dx$$

$$m = (y1 - y2) / (x1 - x2)$$


m = Slope

Calculation and explanation

1. The linear equation $y = m \cdot x + b$ shows the mathematical connection.
2. Calculate the m slope within any input range (signal) and the related output range (physical value).
3. Calculate the constant b by using the x and y values for a known point.
4. Calculate, if required, further y values by using the corresponding x values and the equation, e.g. for calculating the physical values for another input range (Channel min, max).

Example pressure sensor

A pressure sensor has an output signal of -0.5 to 4.5 V in the acquisition range 0...20 bar. The voltage signal is converted to the physical value with the linear scaling.

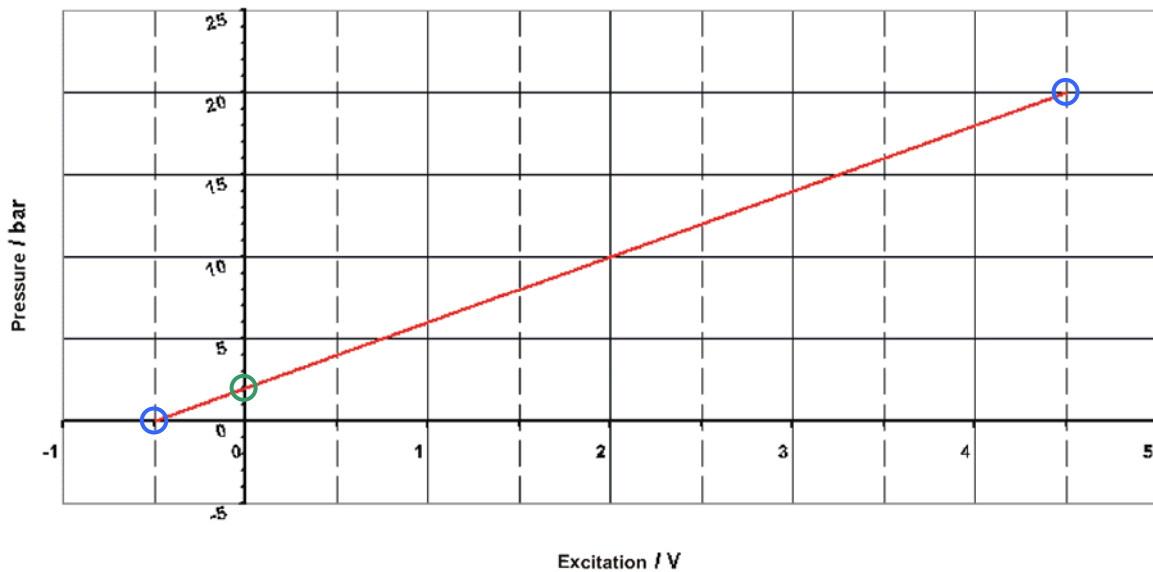


x1	x2	y1	y2	m	b'	b
4.5	-0.5	20	0	4	2	2

Example CAN raw value in the Word unsigned format as temperature

A temperature signal is a CAN message in the Word unsigned format. The value range of 0... 65535 (16 Bit) corresponds to a temperature range of -50 °C... +200 °C.



Please note that the output range has an offset of -50 °C. This must be respected at calculating: (b' = Offset without output offset, b = Offset + output offset).

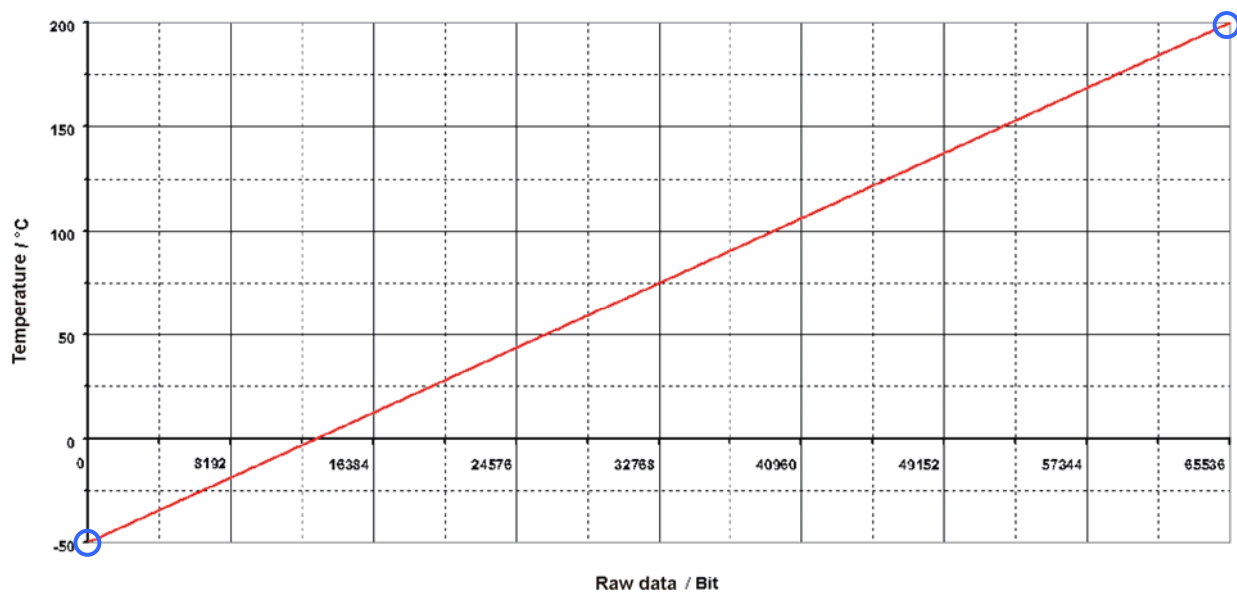


x1	x2	y1	y2	m	b'	b
65535	0	200	-50	0.0038147	0	-50

Example CAN raw value in the Word signed format as temperature

A temperature signal is a CAN message in the Word signed format. The value range of -32768... 0 ... 32767 (16 Bit) corresponds to a temperature range of -50 °C... +200 °C.



Please note that the output range has an offset of -50 °C. This must be respected at calculating: (b' = Offset without output offset, b = Offset + output offset).

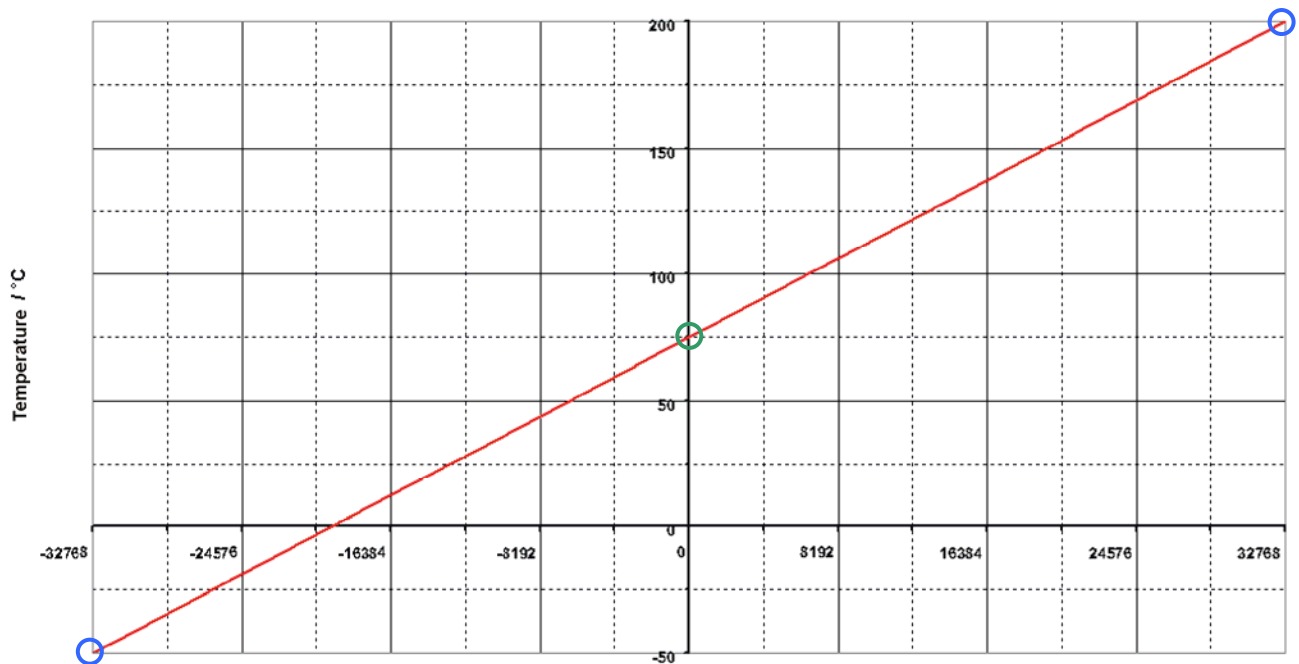

Raw data / Bit						
x1	x2	y1	y2	m	b'	b
32767	-32768	200	-50	0.0038147	125.0019	75.0019